


# CATALOGUE

# 2023

valid from 01.01.2023

inter@ctive

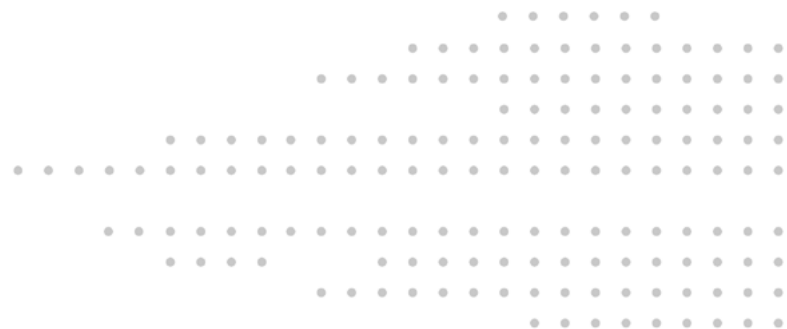

# Quality products from WITT

## Benefits to you:

- 100% quality inspection of all products leaving our factory
- Certificates: DIN EN ISO 9001, DIN EN ISO 22000 as well as PED 2014/68/EU, ATEX 2014/34/EU, Directive 93/42/EWG
- State-of-the-art technologies and elaborate quality assurance systems
- Easy, intuitive operation, ergonomics, integration capabilities and cost effectiveness
- Engineered products tailored exactly to your needs
- Individual solutions for your applications



## Our product range

In this catalogue you will find our main models and series.  
Furthermore we offer special custom-designed products, to your individual specifications.

“**Engineering services included. Working closely with you.**



Adopting our gas technology to the requirements of the customers is our daily business. Because gas applications are as different and varied as technical gases and gas mixtures.

Our decades of experience and extensive know-how will give you the safety you need: for your employees, your material and your processes.

Please talk to us about your requirements - we can help you for sure!

### **Any other questions?**

### **We provide you with expert answers!**

Our front desk will connect you directly to the person in charge.

Tel: +49 (0)2302 8901-0

Fax: +49 (0)2302 8901-3

[witt@wittgas.com](mailto:witt@wittgas.com)

## Gas Control Equipment

1. Gas mixers for non-flammable gases .....	5
2. Gas flow control systems for non-flammable gases.....	11
3. Gas mixers for flammable gases .....	12
4. Gas mixers for medical applications .....	14
5. Mixed gas receivers .....	15
6. Gas analysers .....	17
7. Leak detection equipment.....	23
8. Data logger .....	25


## Gas Safety Equipment


9. Flashback arrestors for pressure regulators, outlet points and pipelines .....	26
10. Flashback arrestors for torches .....	30
11. Flashback arrestors for cutting machines .....	33
12. Flashback arrestors for high flows .....	34
13. Flashback arrestors for central acetylene supply .....	36
14. Quick couplings .....	38
15. Non-return valves .....	41
16. Safety relief valves .....	47
17. Stainless steel devices: Flashback Arrestors .....	49
18. Stainless steel devices: Non-return Valves .....	51
19. Stainless steel devices: Safety Relief Valves .....	55
20. Pressure regulators / Dome pressure regulators .....	57
21. Mobile pressure regulating stations .....	67
22. Stationary pressure regulating stations .....	68
23. Outlet points .....	69
24. Test rigs .....	71
25. Equipment for oxygen lancing .....	72
26. Gas filters .....	74
27. Ball valves .....	76
28. Safety hose reels .....	78
29. Accessories .....	79


## Miscellaneous


Explanations thread types .....	84
Training , Certification, documentation and instruction manuals .....	85
Conversion of units of measurements .....	86
WITT support material - overview .....	87

# 1. GAS MIXERS for non-flammable gases

KM20 ECO		2 gases   small flows
 <p>KM20 ECO</p>	<p><b>Small Gas mixer especially for dispensing equipment</b></p> <ul style="list-style-type: none"> <li>• variable mixture output</li> <li>• pre-set gas blends</li> <li>• various flow capacities</li> </ul>	<p><b>KM20 ECO</b></p> <p>KM 20-1 ECO with one outlet</p> <p>KM 20-2 ECO with two outlets</p>
		<p>product video and further information see</p> <p>▶ <a href="http://www.wittgas.com">www.wittgas.com</a></p>


MM		2 gases   small to medium flows
 <p>MM-2</p>	<p><b>Compact Gas mixer for different applications</b></p> <ul style="list-style-type: none"> <li>• adjustable mixing valve</li> <li>• mixed gas flow dependent on inlet pressures</li> <li>• various flow capacities</li> </ul>	<p><b>MM-2</b></p> <p>MM-2K</p> <p>MM-2G</p>
		<p>product video and further information see</p> <p>▶ <a href="http://www.wittgas.com">www.wittgas.com</a></p>


MM-Flex		2 gases   small to medium flows
 <p>MM-Flex</p>	<p><b>Ultra compact gas mixer for different applications, e.g. welding</b></p> <ul style="list-style-type: none"> <li>• adjustable mixing valve</li> <li>• adjustable metering valve</li> <li>• adjustable pressure</li> </ul>	<p><b>MM-Flex</b></p> <p>MM-Flex</p>
		<p>product video and further information see</p> <p>▶ <a href="http://www.wittgas.com">www.wittgas.com</a></p>


BM		2 gases   small flows
 <p>BM-2M</p>	<p><b>Gas mixer for direct cylinder connection (high pressure)</b></p> <ul style="list-style-type: none"> <li>• constant output</li> <li>• infinitely variable gas blending</li> <li>• infinitely variable metering</li> <li>• no additional pressure regulator required</li> <li>• various flow capacities</li> </ul>	<p><b>BM-2</b></p> <p>BM-2M (200 bar)</p> <p>BM-2M (300 bar)</p>
		<p>product video and further information see</p> <p>▶ <a href="http://www.wittgas.com">www.wittgas.com</a></p>


14/05/2023

# 1. GAS MIXERS for non-flammable gases



KM10-2 Flex		2 gases   small flows
 <p>KM10-2 Flex</p>	<p><b>Small gas mixer especially for low gas consumption, e.g. in laboratory applications</b></p> <ul style="list-style-type: none"> <li>variable mixture output</li> <li>variable gas blending</li> <li>various flow capacities</li> <li>new mixing technology, mixed gas receiver is not required</li> </ul>	<p><b>KM10-2 Flex</b></p> <p>KM10-2 Flex</p>


MG Fix		2 or 3 gases   medium to high flows
 <p>MG Fix</p>	<p><b>Pre-set 2 or 3 components gas mixers</b></p> <ul style="list-style-type: none"> <li>variable mixture output</li> <li>mixing range dependent on type of gas</li> <li>new mixing technology, mixed gas receiver is not required</li> </ul>	<p><b>MG-2 Fix for 2 gases</b></p> <p>MG 25-2 capacity range up to approx. 22 Nm<sup>3</sup>/h            MG 45-2 capacity range up to approx. 46 Nm<sup>3</sup>/h            MG 75-2 capacity range up to approx. 68 Nm<sup>3</sup>/h            MG 95-2 capacity range up to approx. 90 Nm<sup>3</sup>/h            MG 125-2 capacity range up to approx. 135 Nm<sup>3</sup>/h</p> <p><b>MG-3 Fix for 3 gases</b></p> <p>MG 45-3 capacity range up to approx. 46 Nm<sup>3</sup>/h            MG 95-3 capacity range up to approx. 90 Nm<sup>3</sup>/h            MG 125-3 capacity range up to approx. 135 Nm<sup>3</sup>/h</p> <p><b>options:</b></p> <p>inlet pressure monitoring with alarm module AM3</p>



MG Flex		2 gases   medium to high flows
 <p>MG Flex</p>	<p><b>Adjustable 2 components gas mixers for welding applications</b></p> <ul style="list-style-type: none"> <li>variable mixture output</li> <li>mixing range dependent on type of gas</li> <li>new mixing technology, mixed gas receiver is not required</li> </ul>	<p><b>MG-2 Flex</b></p> <p>MG 25-2 capacity range up to approx. 22 Nm<sup>3</sup>/h            MG 45-2 capacity range up to approx. 46 Nm<sup>3</sup>/h            MG 75-2 capacity range up to approx. 68 Nm<sup>3</sup>/h            MG 95-2 capacity range up to approx. 90 Nm<sup>3</sup>/h            MG 125-2 capacity range up to approx. 135 Nm<sup>3</sup>/h</p> <p><b>options:</b></p> <p>inlet pressure monitoring with alarm module AM3</p>

KM		2 or 3 gases   small to medium flows
 <p>KM20-2</p>	<p><b>Mixing system for different technical applications</b></p> <ul style="list-style-type: none"> <li>constant output</li> <li>infinitely variable gas blending</li> <li>infinitely variable metering</li> <li>various flow capacities</li> </ul>	<p><b>KM-2 for 2 gases</b></p> <p>KM 20-2            KM 30-2            KM 60-2            KM 100-2</p> <p><b>KM-3 for 3 gases</b></p> <p>KM 20-3            KM 30-3            KM 60-3            KM 100-3</p>


# 1. GAS MIXERS for non-flammable gases

KM - M		2 or 3 gases   medium to high flows
 <p>KM100-2M</p> <p>KM100/200-M KM300/600-M</p>	<p><b>Gas mixer especially for MAP-packaging and flow-pack machines</b></p> <p>Features - see model KM (above) plus:</p> <ul style="list-style-type: none"> <li>regulation of outlet pressure</li> <li>monitoring of gas supply</li> <li>integrated inlet pressure monitoring (alarm module AM3)</li> </ul>	<p><b>KM-2M for 2 gases</b></p> <p>KM 100-2M KM 200-2M KM 300-2M KM 600-2M</p> <p><b>KM-3M for 3 gases</b></p> <p>KM 100-3M KM 200-3M KM 300-3M KM 600-3M</p> <p>optional: automatic shut-off of O<sub>2</sub> when going below the limit</p>
	 <p>for food-grade gases, conforms to 1935/2004</p>	

KM - ME		2 or 3 gases   low to very high flows
 <p>KM100-2ME on steel receiver</p> <p>Picture shows optional equipment</p> <p><b>Powerful gas mixer especially for highly fluctuating mixing gas output quantities</b></p> <ul style="list-style-type: none"> <li>adjustable mixing valve</li> <li>with receiver pressure management for use with mixed gas receiver</li> <li>also for central gas supply installations</li> <li>various flow capacities</li> <li>alarm module AM3 (optional): integrated inlet pressure monitoring with digital display for pressure (with analogue pressure transmitters) plus optical alarm, adjustable alarm limits, alarm acknowledgement required, protection of alarms, interfaces for controlling external alarms etc.</li> </ul>		<p><b>KM-2ME for 2 gases</b></p> <p>KM100-2ME KM100-2ME mounted on 20 l / 10 bar steel receiver KM100-2ME mounted on 20 l / 10 bar stainless steel receiver KM100-2ME mounted on 100 l / 10 bar steel receiver KM100-2ME mounted on 100 l / 10 bar stainless steel receiver</p> <p><b>KM-3ME for 3 gases</b></p> <p>KM100-3ME KM100-3ME mounted on 20 l / 10 bar steel receiver KM100-3ME mounted on 20 l / 10 bar stainless steel receiver KM100-3ME mounted on 100 l / 10 bar steel receiver KM100-3ME mounted on 100 l / 10 bar stainless steel receiver</p> <p><b>options:</b></p> <p>inlet pressure monitoring with alarm module AM3 surcharge for analogue pressure transmitter for 2 inlet gases surcharge for analogue pressure transmitter for 3 inlet gases</p>
		 <p>for food-grade gases, conforms to 1935/2004</p>

KM - M+		2 or 3 gases   medium to high flows
 <p>KM100-2M+</p>	<p><b>Gas mixer especially for MAP-packaging and flow-pack machine</b></p> <p>Features - see model KM-M (above) plus:</p> <ul style="list-style-type: none"> <li>communication by serial Interface (e.g. PLC, PC or 4-20mA/0-10V)</li> <li>incl. communication software via PC</li> </ul>	<p><b>KM-2M+ for 2 gases</b></p> <p>KM 100-2M+ KM 200-2M+</p> <p><b>KM-3M+ for 3 gases</b></p> <p>KM 100-3M+ KM 200-3M+</p> <p><b>option:</b></p> <p>operation via touch-screen display coupling socket set</p>
	 <p>for food-grade gases, conforms to 1935/2004</p>	

# 1. GAS MIXERS for non-flammable gases



KM-Flow with analyser

**Gas mixer especially for MAP-packaging and flow-pack machines**

- electronic Mass Flow Controller (MFC)
- touchscreen
- measured data storage
- may be combined with analysis MAPY LE
- for up to 1000/1500 l/min


2 or 3 gases | medium to high flows

**KM1000-2 Flow for 2 gases**


KM1000-2 Flow for flow-pack machines  
KM1000-2 Flow for vacuum machines

**KM1500-3 Flow for 3 gases**

KM1500-3 Flow for flow-pack machines  
KM1500-3 Flow for vacuum machines



for food-grade gases, conforms to 1935/2004



MG50/100-ME  
MG200-ME

Picture shows optional equipment

2 gases | low to very high flows

**MG-2ME**

MG50-2ME  
MG50-2ME mounted on 100 l / 10 bar steel receiver  
MG50-2ME mounted on 100 l / 10 bar stainless steel receiver  
MG100-2ME  
MG100-2ME mounted on 250 l / 11 bar steel receiver  
MG100-2ME mounted on 250 l / 11 bar stainless steel receiver  
MG200-2ME (see option "external filter")


**options:**

inlet pressure monitoring with alarm module AM3  
external filter as additional protection for each gas inlet recommended for MG 50 and MG 100; mandatory for MG 200  
surcharge for analogue pressure transmitter for 2 inlet gases


**Powerful gas mixer especially for high flows and highly fluctuating mixing gas output quantities**


- adjustable mixing valve
- various flow capacities
- with receiver pressure management for use with mixed gas receiver
- also for central gas supply installations
- alarm module AM3 (optional): integrated inlet pressure monitoring with digital display for pressure (with analogue pressure transmitters) plus optical alarm, adjustable alarm limits, alarm acknowledgement required, protection of alarms, interfaces for controlling external alarms etc.


14/09/2023



GET IN TOUCH!

 +49 (0)2302-8901-0

 E-MAIL

 CALLBACK

## “You need advice?”

Our team of experts is there for you: Click on our callback offer on the WITT website. Depending on your area of interest, you will soon receive a call back from our expert. This way you can quickly clarify your question - free of charge, of course.



# 1. GAS MIXERS for non-flammable gases

## MG-3ME

3 gases | low to very high flows



MG50-3ME



alarm module AM3

### MG-3ME

- MG50-3ME
- MG50-3ME mounted on 100 l / 10 bar steel receiver
- MG50-3ME mounted on 100 l / 10 bar stainless steel receiver
- MG100-3ME
- MG100-3ME mounted on 250 l / 11 bar steel receiver
- MG100-3ME mounted on 250 l / 11 bar stainless steel receiver
- MG200-3ME (see option „external filter“)

### options:

- inlet pressure monitoring with alarm module AM3
- external filter as additional protection for each gas inlet recommended for MG 50 and MG 100; mandatory for MG 200
- surcharge for analogue pressure transmitter for 3 inlet gases

**Powerful gas mixer especially for high flows and highly fluctuating mixing gas output quantities**

- adjustable mixing valve
- various flow capacities
- with receiver pressure management for use with mixed gas receiver
- also for central gas supply installations
- alarm module AM3 (optional): integrated inlet pressure monitoring with digital display for pressure (with analogue pressure transmitters) plus optical alarm, adjustable alarm limits, alarm acknowledgement required, protection of alarms, interfaces for controlling external alarms etc.

## KM-MEM

2 or 3 gases | low to high flows



### KM-2MEM for 2 gases

- KM100-2MEM
- KM100-2MEM mounted on 20 l / 10 bar steel receiver
- KM100-2MEM mounted on 20 l / 10 bar stainless steel receiver
- KM200-2MEM
- KM200-2MEM mounted on 20 l / 10 bar steel receiver
- KM200-2MEM mounted on 20 l / 10 bar stainless steel receiver

### KM-3MEM for 3 gases

- KM100-3MEM
- KM100-3MEM mounted on 20 l / 10 bar steel receiver
- KM100-3MEM mounted on 20 l / 10 bar stainless steel receiver
- KM200-3MEM
- KM200-3MEM mounted on 20 l / 10 bar steel receiver
- KM200-3MEM mounted on 20 l / 10 bar stainless steel receiver

### option:


- automatic shut-off e.g. of O<sub>2</sub> when going below the limit

product video and further information see  
▶ [www.wittgas.com](http://www.wittgas.com)

**Powerful gas mixer especially for MAP- and vacuum-packaging machines and highly fluctuating mixing gas output quantities**

Features - see model ME (above) plus:

- integrated inlet pressure monitoring (alarm module AM3)
- monitoring of gas supply
- to be used with mixed gas receiver, incl. inlet pressure monitoring

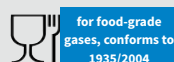

# 1. GAS MIXERS for non-flammable gases

## KM - MEM +

2 or 3 gases | low to high flows



KM100-2MEM+

**Electronic gas mixing system with motor-driven mixing valve especially for MAP- and vacuum packaging machines**

Features - see model KM-MEM (above) plus:

- communication by serial Interface (e.g. PLC, PC or 4-20mA/0-10V)
- to be used with mixed gas receiver, incl. inlet pressure monitoring



### KM-2MEM+ for 2 gases

KM100-2MEM+  
KM100-2MEM+ mounted on 20 l / 10 bar steel receiver  
KM100-2MEM+ mounted on 20 l / 10 bar stainless steel receiver  
KM200-2MEM+  
KM200-2MEM+ mounted on 20 l / 10 bar steel receiver  
KM200-2MEM+ mounted on 20 l / 10 bar stainless steel receiver

#### option:

operation via touch-screen display  
coupling socket set

### KM-3MEM+ for 3 gases

KM100-3MEM+  
KM100-3MEM+ mounted on 20 l / 10 bar steel receiver  
KM100-3MEM+ mounted on 20 l / 10 bar stainless steel receiver  
KM200-3MEM+  
KM200-3MEM+ mounted on 20 l / 10 bar steel receiver  
KM200-3MEM+ mounted on 20 l / 10 bar stainless steel receiver

#### option:

operation via touch-screen display  
coupling socket set

product video and further information see  
▶ [www.wittgas.com](http://www.wittgas.com)

## MG - MEM +

2 or 3 gases | higher flows



MG50-2MEM+

**Electronic gas mixing system with motor-driven mixing valve especially for MAP- and vacuum packaging machines with higher flows**

Features - see model KM-MEM+ (above)



### MG-2MEM+ for 2 gases

MG50-2MEM+  
MG50-2MEM+ mounted on 100 l / 10 bar steel receiver  
MG50-2MEM+ mounted on 100 l / 10 bar stainless steel receiver  
MG50-2MEM+ mounted on 250 l / 11 bar steel receiver  
MG50-2MEM+ mounted on 250 l / 11 bar stainless steel receiver

#### option:

operation via touch-screen display  
coupling socket set



### MG-3MEM+ for 3 gases



MG50-3MEM+  
MG50-3MEM+ mounted on 100 l / 10 bar steel receiver  
MG50-3MEM+ mounted on 100 l / 10 bar stainless steel receiver  
MG50-3MEM+ mounted on 250 l / 11 bar steel receiver  
MG50-3MEM+ mounted on 250 l / 11 bar stainless steel receiver

#### option:

operation via touch-screen display  
coupling socket set

## 2. GASFLOW CONTROL SYSTEMS for non-flammable gases

<b>KD</b>		gas flow controller with O <sub>2</sub> -analysis
 <p>KD500-1A MAPY ZRL</p>	<p><b>Electronical flow control systems for modified atmospheres in the food industry</b></p> <ul style="list-style-type: none"> <li>with integrated zirconia cell for O<sub>2</sub>-measurement</li> <li>integrated PID control loop for automatic gas flow control</li> <li>potential free contacts for min./ max. alarms</li> </ul>	<p><b>KD</b></p> <p>KD500-1A MAPY ZRL</p> <p><b>options:</b></p> <ul style="list-style-type: none"> <li>sample testing via needle</li> <li>additional electrochemical sensor for sample testing</li> <li>heater and thermostat, only electro-chemical sensors</li> </ul>
		 <p>for food-grade gases, conforms to 1935/2004</p>

<b>KM-MAPY ZRL</b>		gas mixer and meterer
 <p>KM100-2M MAPY ZRL</p>	<p><b>2-components gas mixers with integrated O<sub>2</sub> analysis</b></p> <p>Features - see model KD plus:</p> <ul style="list-style-type: none"> <li>MAPY-analysis (see p. 19)</li> <li>potential free contacts</li> </ul>	<p><b>KM-2M MAPY ZRL</b></p> <p>KM100-2M MAPY ZRL</p> <p>KM200-2M MAPY ZRL</p> <p>KM300-2M MAPY ZRL</p> <p>KM600-2M MAPY ZRL</p> <p><b>options:</b></p> <ul style="list-style-type: none"> <li>gas mixer with M+ (remote control)</li> </ul>
		 <p>for food-grade gases, conforms to 1935/2004</p>

14/09/2023

“In our brochure you can read everything you always wanted to know about WITT Gas Mixers.

Gas mixers offer maximum mixing quality, flexibility and economy. But which model is the best for your specific application?

Looking for the right mixer, a lot of questions come up, e.g.


- Which advantages offer the different mixing technologies and mixing valves, such as mechanical, pneumatical or electrical?
- Which design fits best in my installation: compact, mobile or stationary?
- What kind of components are available: pressure monitoring, inline gas analysis, tanks, explosion protection?


Find answers, discover technologies and have a look at our models overview in the new WITT gas mixers brochure.

Download at ► [www.wittgas.com](http://www.wittgas.com)



### 3. GAS MIXERS for flammable gases

KM10-2 Flex		2 gases   small flows
 <p>KM10-2 Flex</p>	<p><b>Small gas mixer especially for little gas consumption, e.g. in laboratory applications</b></p> <ul style="list-style-type: none"> <li>• variable mixture output</li> <li>• variable gas blending</li> <li>• various flow capacities</li> <li>• new mixing technology, mixed gas receiver is not required</li> </ul>	<p><b>KM10-2 Flex</b></p> <p>KM10-2 Flex</p>

KM		2 or 3 gases   small to medium flows
 <p>KM100-3</p>	<p><b>Gas mixing systems for different applications, e.g. for welding applications</b></p> <ul style="list-style-type: none"> <li>• infinitely variable gas blending</li> <li>• variable mixture output</li> <li>• various flow capacities</li> <li>• certified in accordance to ATEX</li> </ul>	<p><b>KM-2 for 2 gases (1 gas flammable)</b></p> <p>KM 20-2 KM 30-2 KM 60-2 KM 100-2</p> <p><b>KM-3 for 3 gases (max. 2 flammable gases)</b></p> <p>KM 20-3 KM 30-3 KM 60-3 KM 100-3</p>

KM-ME Ex		2 or 3 gases   low to very high flows
 <p>KM100-3ME Ex</p>	<p><b>Powerful gas mixers especially for highly fluctuating mixing gas output quantities</b></p> <p>For features - see KM (above) plus:</p> <ul style="list-style-type: none"> <li>• separate electrical control panel</li> <li>• 5 m cable between control unit and mixing device</li> <li>• certified in accordance to ATEX</li> <li>• model A with integrated analysis, LC-display, 4-20 mA signal and min./max. alarms (further information in section 6 „Gas analysers“)</li> <li>• alarm module AM3 (optional): integrated inlet pressure monitoring with digital display for pressure (with analogue pressure transmitters) plus optical alarm, adjustable alarm limits, alarm acknowledgement required, protection of alarms, interfaces for controlling external alarms etc.</li> </ul>	<p><b>KM-2ME Ex for 2 gases</b></p> <p>KM100-2ME Ex KM100-2ME Ex A, with integrated analysis (see section „Gas analysers“) KM100-2ME Ex mounted on 20 l / 10 bar steel receiver KM100-2ME Ex mounted on 20 l / 10 bar stainless steel receiver KM100-2ME Ex mounted on 100 l / 10 bar steel receiver KM100-2ME Ex mounted on 100 l / 10 bar stainless steel receiver</p> <p><b>KM-3ME Ex for 3 gases</b></p> <p>KM100-3ME Ex KM100-3ME Ex mounted on 20 l / 10 bar steel receiver KM100-3ME Ex mounted on 20 l / 10 bar stainless steel receiver KM100-3ME Ex mounted on 100 l / 10 bar steel receiver KM100-3ME Ex mounted on 100 l / 10 bar stainless steel receiver</p> <p><b>options:</b></p> <p>inlet pressure monitoring with alarm module AM3 (for Ex) surcharge for analogue pressure transmitters Ex, 2 inlet gases surcharge for analogue pressure transmitters Ex, 3 inlet gases</p>

### 3. GAS MIXERS for flammable gases

2 or 3 gases | low to very high flows



MG100-ME Ex  
MG200-ME Ex

#### Powerful gas mixers especially for highly fluctuating mixing gas output quantities

Features - see KM (above) plus:

- separate electrical control panel
- 5 m cable between control unit and mixing device
- certified in accordance to ATEX
- model A with integrated analysis, LC-display, 4-20 mA signal and min./max. alarms (further information see section 6 „Gas analysers“)
- alarm module AM3 (optional): integrated inlet pressure monitoring with digital display for pressure (with analogue pressure transmitters) plus optical alarm, adjustable alarm limits, alarm acknowledgement required, protection of alarms, interfaces for controlling external alarms etc.

#### MG-2ME Ex for 2 gases

- MG50-2ME Ex
- MG50-2ME Ex A, with integrated analysis (see section „Gas analysers“)
- MG50-2ME Ex mounted on 100 l / 10 bar steel receiver
- MG50-2ME Ex A, with integr. analysis, mounted on 100 l/10 bar steel receiver
- MG50-2ME Ex mounted on 100 l / 10 bar stainless steel receiver
- MG50-2ME Ex A, with integr. analysis, mounted on 100 l/10 bar stainl. steel rec.
- MG100-2ME Ex
- MG100-2ME Ex A, with integrated analysis
- MG100-2ME Ex mounted on 250 l / 11 bar steel receiver
- MG100-2ME Ex mounted on 250 l / 11 bar stainless steel receiver
- MG200-2ME Ex (see option „external filter“)
- MG200-2ME Ex A, with integrated analysis (see option „external filter“)

#### MG-3ME Ex for 3 gases

- MG50-3ME Ex
- MG50-3ME Ex mounted on 100 l / 10 bar steel receiver
- MG50-3ME Ex mounted on 100 l / 10 bar stainless steel receiver
- MG100-3ME Ex
- MG100-3ME Ex mounted on 250 l / 11 bar steel receiver
- MG100-3ME Ex mounted on 250 l / 11 bar stainless steel receiver
- MG200-3ME Ex (see option „external filter“)

#### options:

- inlet pressure monitoring with alarm module AM3 (for Ex)
- external filter as additional protection for each gas inlet recommended for MG 50 and MG 100; mandatory for MG 200
- surcharge for analogue pressure transmitters Ex, 2 inlet gases
- surcharge for analogue pressure transmitters Ex, 3 inlet gases

14/09/2023

“We can do big, too.

Adopting our gas technical solutions to meet the needs of customers is our daily business. Hence we offer a wide range of special mixers, e.g.



- with flows up to 2000 Nm<sup>3</sup>/h
- from very small mixing ranges (0-5%) up to very big ones (0-100%)
- with integrated gas analysis
- with numerous safety features such as monitoring of inlet pressures and temperatures, alarm function with automatic switch or cut off, heating for mixer and control unit, filter in the gas inlet, lockable doors, etc.

Please contact us. Together we will identify a WITT solution specific to your requirements.

## 4. GAS MIXERS for medical applications

### MED-MG

for synthetic air



MG50-2ME GB A

#### Worldwide and long-term proven gas mixing system for the production of synthetic air for medical applications

- in accordance with DIN EN ISO 7396-1 section 3.27
- medical product class IIb, CE identification marking according to EG 93/42/EWG
- various flow capacities
- to be used with mixed gas receiver, incl. inlet pressure monitoring
- also for central gas supply installations
- integrated oxygen analyser, redundant design
- various system surveillances
- housing IP55

#### MED-MG

MED-MG 50-2ME GB A  
 MED-MG 100-2ME GB A  
 MED-MG 200-2ME GB A  
 MED-MG 500-2ME GB A  
 each with 2 gas filters 077 and printed operation manual

#### options:

automatic calibration  
 heating (for low ambient temperatures)

#### MED-stainless steel gas receiver (coated) incl. safety devices and connections:

volume	pressure	design	blow-off output SV*
100 litres	10 bar	vertical	382 Nm <sup>3</sup> /h
250 litres	11 bar	vertical	417 Nm <sup>3</sup> /h
500 litres	11 bar	vertical	795 Nm <sup>3</sup> /h
1,000 litres	11 bar	vertical	795 Nm <sup>3</sup> /h
2,000 litres	11 bar	vertical	2,234 Nm <sup>3</sup> /h
4,000 litres	11 bar	vertical	2,234 Nm <sup>3</sup> /h

\* blow-off output of the safety relief valve, different rates on demand (surcharge)

14/09/2023

## “Further evolution:

### From alarm module to compact all-rounder



The new AM3 processes signals in the 4-20 mA range and can manage up to 8 alarms. Current values are displayed on the TFT display and important events are saved by the integrated data logger. In addition to its alarm function, the AM3 can also monitor external control systems.

And since we have not changed the installation dimensions, the AM3 can easily be retrofitted onto any WITT gas mixer with alarm module.

More information at ▶ [www.wittgas.com](http://www.wittgas.com)

For an overview of our support material see p. 86-88

## 5. MIXED GAS RECEIVERS

### Steel receivers without safety devices and connections



steel receiver, vertical,  
without safety devices and connections

volume	pressure	design
20 litres	10 bar	horizontal
20 litres	16 bar	horizontal
100 litres	10 bar	horizontal
100 litres	21 bar	horizontal
250 litres	11 bar	horizontal
500 litres	11 bar	vertical
1,000 litres	11 bar	vertical
1,000 litres	16 bar	vertical
2,000 litres	11 bar	vertical
2,000 litres	16 bar	vertical

**Receivers 20 - 250 l: ground coated and pickled**  
**Receivers 500 - 2,000 l: powder coated**

- internally degreased and oil-free
- use of humid gases or oxygen may cause corrosion
- certificate of CE-conformity conforms to PED for receivers
- operation temperatures -15°C up to +100°C

### Stainless steel receivers without safety devices and connections



stainless steel receiver, horizontal,  
without safety devices and connections

volume	pressure	design
20 litres	10 bar	horizontal
20 litres	16 bar	horizontal
100 litres	10 bar	horizontal
100 litres	16 bar	horizontal
100 litres	21 bar	horizontal
250 litres	11 bar	horizontal
250 litres	16 bar	horizontal
250 litres	21 bar	horizontal
500 litres	11 bar	vertical
500 litres	16 bar	vertical
1,000 litres	11 bar	vertical
1,000 litres	16 bar	vertical
2,000 litres	11 bar	vertical
2,000 litres	16 bar	vertical

**Stainless steel, not coated**

- internally degreased and oil-free
- recommended especially for high oxygen concentrations (>21%)
- certificate of CE-conformity conforms to PED for receivers
- operation temperatures -196°C up to +50°C

## 5. MIXED GAS RECEIVERS

### Steel receivers



steel receiver, vertical,  
incl. safety devices and connections

#### With ground coat, pickled, passivated

- internally degreased and oil-free
- use of humid gases or oxygen may cause corrosion
- incl. safety relief valve
- up to 250l available as a unit with gas mixer
- certificate of CE-conformity conforms to PED for receivers
- operation temperatures -15°C up to +100°C
- operation temperatures of safety relief valve -10°C up to +50°C

incl. safety devices and connections

volume	pressure	design	blow-off output SV*
20 litres	10 bar	horizontal	117 Nm <sup>3</sup> /h
20 litres	16 bar	horizontal	181 Nm <sup>3</sup> /h
100 litres	10 bar	horizontal	117 Nm <sup>3</sup> /h
100 litres	21 bar	horizontal	181 Nm <sup>3</sup> /h
250 litres	11 bar	horizontal	523 Nm <sup>3</sup> /h
500 litres	11 bar	vertical	523 Nm <sup>3</sup> /h
1,000 litres	11 bar	vertical	1,880 Nm <sup>3</sup> /h
1,000 litres	16 bar	vertical	1,750 Nm <sup>3</sup> /h
2,000 litres	11 bar	vertical	2,490 Nm <sup>3</sup> /h
2,000 litres	16 bar	vertical	3,265 Nm <sup>3</sup> /h

\* blow-off output of the safety relief valve, different rates on demand (surcharge)

surcharge for gas mixer mounted on receiver (up to max. 250 litres)

**option** for receiver-gas mixer-units:  
TÜV approval conforms to PED 2014/68/EU, module G

### Stainless steel receivers



Stainless steel receiver, horizontal  
incl. safety devices and connections

#### Stainless steel, not coated

- internally degreased and oil-free
- recommended for high oxygen concentrations (>21%)
- incl. safety relief valve
- up to 250l available as a unit with gas mixer
- certificate of CE-conformity conforms to PED for receivers
- operation temperatures -196°C up to +50°C
- operation temperatures of safety relief valve depend on model

incl. safety devices and connections

volume	pressure	design	blow-off output SV*
20 litres	10 bar	horizontal	117 Nm <sup>3</sup> /h
20 litres	16 bar	horizontal	181 Nm <sup>3</sup> /h
100 litres	10 bar	horizontal	117 Nm <sup>3</sup> /h
100 litres	16 bar	horizontal	181 Nm <sup>3</sup> /h
100 litres	21 bar	horizontal	276 Nm <sup>3</sup> /h
250 litres	11 bar	horizontal	523 Nm <sup>3</sup> /h
250 litres	16 bar	horizontal	741 Nm <sup>3</sup> /h
250 litres	21 bar	horizontal	276 Nm <sup>3</sup> /h
500 litres	11 bar	vertical	523 Nm <sup>3</sup> /h
500 litres	16 bar	vertical	741 Nm <sup>3</sup> /h
1,000 litres	11 bar	vertical	1,880 Nm <sup>3</sup> /h
1,000 litres	16 bar	vertical	1,750 Nm <sup>3</sup> /h
2,000 litres	11 bar	vertical	2,490 Nm <sup>3</sup> /h
2,000 litres	16 bar	vertical	3,265 Nm <sup>3</sup> /h

\* blow-off output of the safety relief valve



Different blow-off rates and safety relief valves for specific temperatures  
(-196° up to +50°C)



Surcharge for gas mixer mounted on receiver (up to max. 250 litres)


**option** for receiver-gas mixer-units:  
TÜV approval conforms to PED 2014/68/EU, module G




## 6. GAS ANALYSERS


OXYBABY® M+		portable O <sub>2</sub> / CO <sub>2</sub> gas analyser - basic model				
	<p><b>Compact handheld O<sub>2</sub>/ CO<sub>2</sub> analyser e.g. for sample testing of MAP-packages (basic model)</b></p> <ul style="list-style-type: none"> <li>• quick and precise</li> <li>• data log of 100 results (measurement, date, time, product/line no.)</li> <li>• administration of product data and product names</li> <li>• incl. carrying case, spare needles and filters</li> </ul>	<p><b>OXYBABY® M+</b></p> <table border="0"> <tr> <td>OXYBABY® M+</td> <td>for O<sub>2</sub></td> </tr> <tr> <td>OXYBABY® M+</td> <td>for O<sub>2</sub>/ CO<sub>2</sub></td> </tr> </table> <p>options: connector tube with Luer-Lok-connection</p> <p style="text-align: right;">product video and further information see ▶ <a href="http://www.oxybaby.com">www.oxybaby.com</a></p>	OXYBABY® M+	for O <sub>2</sub>	OXYBABY® M+	for O <sub>2</sub> / CO <sub>2</sub>
	OXYBABY® M+	for O <sub>2</sub>				
OXYBABY® M+	for O <sub>2</sub> / CO <sub>2</sub>					
 <p>for food-grade gases, conforms to 1935/2004</p>						


OXYBABY® 6.0		portable O <sub>2</sub> / CO <sub>2</sub> gas analyser - premium model				
	<p><b>Compact handheld O<sub>2</sub>/ CO<sub>2</sub> analyser e.g. for sample testing of MAP-packages (premium model)</b></p> <p>features see above, plus:</p> <ul style="list-style-type: none"> <li>• minimum sample gas requirement (approx. 2ml)</li> <li>• minimised response time</li> <li>• measurement of pressure</li> <li>• USB-interface</li> <li>• data-log of 500 results</li> <li>• comfort operation</li> <li>• integrated needle and filter checks</li> </ul>	<p><b>OXYBABY® 6.0</b></p> <table border="0"> <tr> <td>OXYBABY® 6.0</td> <td>for O<sub>2</sub></td> </tr> <tr> <td>OXYBABY® 6.0</td> <td>for O<sub>2</sub>/ CO<sub>2</sub></td> </tr> </table> <p>options: connector tube with Luer-Lok-connection bluetooth (e.g. for separate tabletop printer) <i>further accessories: see p. 19 and 21</i></p>	OXYBABY® 6.0	for O <sub>2</sub>	OXYBABY® 6.0	for O <sub>2</sub> / CO <sub>2</sub>
	OXYBABY® 6.0	for O <sub>2</sub>				
OXYBABY® 6.0	for O <sub>2</sub> / CO <sub>2</sub>					
 <p>for food-grade gases, conforms to 1935/2004</p>						


OXYBABY® M+P		basic gas analyser for pressurised pipelines						
	<p><b>Mobile O<sub>2</sub>/ CO<sub>2</sub> sample analysis in pressurised pipelines, mainly in welding technology (basic model)</b></p> <ul style="list-style-type: none"> <li>• fast and precise</li> <li>• battery operation</li> <li>• integrated memory for the last measurements</li> <li>• including carrying case and G 1/4 AG connection</li> </ul>	<p><b>OXYBABY® M+ P</b></p> <table border="0"> <tr> <td>OXYBABY® M+ P</td> <td>for O<sub>2</sub></td> </tr> <tr> <td>OXYBABY® M+ P</td> <td>for CO<sub>2</sub></td> </tr> <tr> <td>OXYBABY® M+ P</td> <td>for O<sub>2</sub>/ CO<sub>2</sub></td> </tr> </table>	OXYBABY® M+ P	for O <sub>2</sub>	OXYBABY® M+ P	for CO <sub>2</sub>	OXYBABY® M+ P	for O <sub>2</sub> / CO <sub>2</sub>
	OXYBABY® M+ P	for O <sub>2</sub>						
OXYBABY® M+ P	for CO <sub>2</sub>							
OXYBABY® M+ P	for O <sub>2</sub> / CO <sub>2</sub>							

OXYBABY® 6.0 P		premium gas analyser for pressurised pipelines						
	<p><b>Mobile O<sub>2</sub>/ CO<sub>2</sub> sample analysis in pressurised pipelines, mainly in welding technology (premium model)</b></p> <p>features see above, plus:</p> <ul style="list-style-type: none"> <li>• data-log of 500 results (analysis values, date, time of measurement)</li> <li>• administration of up to 25 users</li> <li>• comfort operation</li> <li>• simplified menu navigation etc.</li> </ul>	<p><b>OXYBABY® 6.0 P</b></p> <table border="0"> <tr> <td>OXYBABY® 6.0 P</td> <td>for O<sub>2</sub></td> </tr> <tr> <td>OXYBABY® 6.0 P</td> <td>for CO<sub>2</sub></td> </tr> <tr> <td>OXYBABY® 6.0 P</td> <td>for O<sub>2</sub>/ CO<sub>2</sub></td> </tr> </table>	OXYBABY® 6.0 P	for O <sub>2</sub>	OXYBABY® 6.0 P	for CO <sub>2</sub>	OXYBABY® 6.0 P	for O <sub>2</sub> / CO <sub>2</sub>
	OXYBABY® 6.0 P	for O <sub>2</sub>						
OXYBABY® 6.0 P	for CO <sub>2</sub>							
OXYBABY® 6.0 P	for O <sub>2</sub> / CO <sub>2</sub>							



## 6. GAS ANALYSERS



OXYBABY® MED		portable O <sub>2</sub> / CO <sub>2</sub> gas analyser for medical applications
	<b>Compact handheld O<sub>2</sub>/ CO<sub>2</sub> analyser for checking medical gases</b> <ul style="list-style-type: none"> <li>quick and precise</li> <li>data log of last 500 measurements</li> <li>administration of users applications and allocations</li> <li>hygienic and low maintenance</li> </ul>	<b>OXYBABY® MED</b> OXYBABY® MED for O <sub>2</sub> OXYBABY® MED for O <sub>2</sub> / CO <sub>2</sub>
		options: data cable set of adapter for various connections bluetooth (e.g. for separate printer)




OXYBABY® -Accessories		
	<b>Accessory for all OXYBABY® models:</b> <ul style="list-style-type: none"> <li>table rack</li> </ul>	<b>OXYBABY®-Accessories</b> Table rack for OXYBABY® connector tube with Luer-Lok-connection tabletop bluetooth printer
	<b>Accessories for the OXYBABY® 6.0 premium models:</b> <ul style="list-style-type: none"> <li>documentation software OBCC</li> <li>integrated barcode reader</li> <li>bluetooth printer</li> </ul>	OBCC software for the documentation of analysis results: see page 21
e.g. for the use of the OXYBABY® as a tabletop unit		


OXYBABY® -Accessories		for cans, bottles and mini packages																								
		<table border="1"> <thead> <tr> <th>OXYBABY®-Accessories</th> <th>Order no.</th> </tr> </thead> <tbody> <tr> <td><b>Canpiercer</b> for cans and bottles (with set for head space analysis)</td> <td></td> </tr> <tr> <td><b>for cans without overpressure/gas</b> (e.g. juice)* for max. piercing height of 270 mm, needle length 5,5 mm</td> <td>590000156</td> </tr> <tr> <td><b>for cans and bottles with overpressure/gas, incl. bottle adapter*</b> for max. piercing height of 270 mm, needle length 8,5 mm</td> <td>590000165</td> </tr> <tr> <td>for max. piercing height of 390 mm, needle length 8,5 mm</td> <td>590000166</td> </tr> <tr> <td>for max. piercing height of 390 mm, needle length 18,5 mm</td> <td>590000325</td> </tr> <tr> <td><b>for cans with high overpressure/gas</b> (strongly sparkling drinks) incl. calibration module and flow control* for max. piercing height of 270 mm, needle length 5,5 mm</td> <td>590000239</td> </tr> <tr> <td><b>for cans and bottles, pressure measurement only, incl. bottle adapter*</b> for max. piercing height of 390 mm, needle length 5,5 mm</td> <td>590000341</td> </tr> <tr> <td colspan="2">*other versions on request</td> </tr> <tr> <td colspan="2">Canpiercer-module (for refitting): bottle adapter</td> </tr> <tr> <td colspan="2"><b>Aquacheck</b> equipment for the gas analysis of mini packages</td> </tr> <tr> <td colspan="2"><b>Aquacheck Plus</b> Aquacheck incl. water container</td> </tr> </tbody> </table>	OXYBABY®-Accessories	Order no.	<b>Canpiercer</b> for cans and bottles (with set for head space analysis)		<b>for cans without overpressure/gas</b> (e.g. juice)* for max. piercing height of 270 mm, needle length 5,5 mm	590000156	<b>for cans and bottles with overpressure/gas, incl. bottle adapter*</b> for max. piercing height of 270 mm, needle length 8,5 mm	590000165	for max. piercing height of 390 mm, needle length 8,5 mm	590000166	for max. piercing height of 390 mm, needle length 18,5 mm	590000325	<b>for cans with high overpressure/gas</b> (strongly sparkling drinks) incl. calibration module and flow control* for max. piercing height of 270 mm, needle length 5,5 mm	590000239	<b>for cans and bottles, pressure measurement only, incl. bottle adapter*</b> for max. piercing height of 390 mm, needle length 5,5 mm	590000341	*other versions on request		Canpiercer-module (for refitting): bottle adapter		<b>Aquacheck</b> equipment for the gas analysis of mini packages		<b>Aquacheck Plus</b> Aquacheck incl. water container	
	OXYBABY®-Accessories	Order no.																								
<b>Canpiercer</b> for cans and bottles (with set for head space analysis)																										
<b>for cans without overpressure/gas</b> (e.g. juice)* for max. piercing height of 270 mm, needle length 5,5 mm	590000156																									
<b>for cans and bottles with overpressure/gas, incl. bottle adapter*</b> for max. piercing height of 270 mm, needle length 8,5 mm	590000165																									
for max. piercing height of 390 mm, needle length 8,5 mm	590000166																									
for max. piercing height of 390 mm, needle length 18,5 mm	590000325																									
<b>for cans with high overpressure/gas</b> (strongly sparkling drinks) incl. calibration module and flow control* for max. piercing height of 270 mm, needle length 5,5 mm	590000239																									
<b>for cans and bottles, pressure measurement only, incl. bottle adapter*</b> for max. piercing height of 390 mm, needle length 5,5 mm	590000341																									
*other versions on request																										
Canpiercer-module (for refitting): bottle adapter																										
<b>Aquacheck</b> equipment for the gas analysis of mini packages																										
<b>Aquacheck Plus</b> Aquacheck incl. water container																										
Image exemplary Oxybaby® and bottle not included																										
<b>Special packages are hardly controllable by standard analysis devices. Therefore WITT offers a special construction which is suitable for all OXYBABY® models</b> <ul style="list-style-type: none"> <li>for head space analysis of cans and bottles, with or without overpressure/gas</li> <li>for O<sub>2</sub> and CO<sub>2</sub> analysis of mini packages, e.g. capsules</li> </ul>																										


## 6. GAS ANALYSERS


OXYPAD	tabletop and mobile O <sub>2</sub> / CO <sub>2</sub> gas analyser							
 <p><b>Mobile desktop O<sub>2</sub> / CO<sub>2</sub> analyser e.g. for sample testing of MAP-packages - innovative design</b></p> <ul style="list-style-type: none"> <li>fast, precise and reliable measurement results</li> <li>large 7" touch-screen with graphical user interface for intuitive operation</li> <li>needle casing keeps the needle clean and safe</li> <li>ergonomic needle pen for precise and safe handling</li> <li>low weight, ergonomic form and battery</li> </ul>	<p><b>OXYPAD</b></p> <table border="1"> <tr> <td>OXYPAD</td> <td>for O<sub>2</sub></td> </tr> <tr> <td>OXYPAD</td> <td>for CO<sub>2</sub></td> </tr> <tr> <td>OXYPAD</td> <td>for O<sub>2</sub> and CO<sub>2</sub></td> </tr> </table>		OXYPAD	for O <sub>2</sub>	OXYPAD	for CO <sub>2</sub>	OXYPAD	for O <sub>2</sub> and CO <sub>2</sub>
	OXYPAD	for O <sub>2</sub>						
OXYPAD	for CO <sub>2</sub>							
OXYPAD	for O <sub>2</sub> and CO <sub>2</sub>							
	 <p>for food-grade gases, conforms to 1935/2004</p>							


PA 7.0	tabletop O <sub>2</sub> / CO <sub>2</sub> gas analyser															
 <p><b>Compact tabletop analyser for sample- and continuous testing of food packages (MAP) and for welding applications</b></p> <ul style="list-style-type: none"> <li>different designs: P (pressure), L (lance) and S (sample)</li> <li>connector set (output and alarm signals)</li> <li>with zirconia measuring cell for O<sub>2</sub> for quicker measurements</li> </ul>	<p><b>PA 7.0</b></p> <table border="1"> <tr> <td>PA 7.0 for O<sub>2</sub></td> <td>version P or L</td> </tr> <tr> <td>PA 7.0 for CO<sub>2</sub></td> <td>version P or L</td> </tr> <tr> <td>PA 7.0 for O<sub>2</sub>/CO<sub>2</sub></td> <td>version P or L</td> </tr> <tr> <td>PA 7.0 for O<sub>2</sub></td> <td>version S</td> </tr> <tr> <td>PA 7.0 for O<sub>2</sub></td> <td>version S and L</td> </tr> <tr> <td>PA 7.0 for O<sub>2</sub>/CO<sub>2</sub></td> <td>version S</td> </tr> <tr> <td>PA 7.0 for O<sub>2</sub>/CO<sub>2</sub></td> <td>version S and L</td> </tr> </table> <p><b>options:</b></p> <ul style="list-style-type: none"> <li>handle</li> <li>coupling socket set (output signals; alarm contacts)</li> <li>integration of the analysing system in the mixer housing</li> <li>zirconia measuring cell for O<sub>2</sub></li> <li>O<sub>2</sub> measurement in ppm-range (surcharge calibration)</li> <li>heating and thermostat, only electro-chemical sensors</li> <li>paramagnetic sensor</li> <li>OBCC software for the documentation of analysis results: see page 21</li> </ul>		PA 7.0 for O <sub>2</sub>	version P or L	PA 7.0 for CO <sub>2</sub>	version P or L	PA 7.0 for O <sub>2</sub> /CO <sub>2</sub>	version P or L	PA 7.0 for O <sub>2</sub>	version S	PA 7.0 for O <sub>2</sub>	version S and L	PA 7.0 for O <sub>2</sub> /CO <sub>2</sub>	version S	PA 7.0 for O <sub>2</sub> /CO <sub>2</sub>	version S and L
	PA 7.0 for O <sub>2</sub>	version P or L														
PA 7.0 for CO <sub>2</sub>	version P or L															
PA 7.0 for O <sub>2</sub> /CO <sub>2</sub>	version P or L															
PA 7.0 for O <sub>2</sub>	version S															
PA 7.0 for O <sub>2</sub>	version S and L															
PA 7.0 for O <sub>2</sub> /CO <sub>2</sub>	version S															
PA 7.0 for O <sub>2</sub> /CO <sub>2</sub>	version S and L															
	 <p>for food-grade gases, conforms to 1935/2004</p>															

MAPY 4.0 / MAPY LE	O <sub>2</sub> / CO <sub>2</sub> gas analyser, sample + inline																						
 <p>reddot design award</p> <p>MAPY 4.0 - inclined display for use in laboratory</p>  <p>MAPY LE - vertical display for use as inline analyser</p> <p><b>Premium gas analyser for sample- and continuous testing of food packages (MAP)</b></p> <ul style="list-style-type: none"> <li>for use in laboratory (housing with inclined display) and in production line (housing with vertical display)</li> <li>different designs: P (pressure), L (lance) and S (sample)</li> <li>connector set (output and alarm signals)</li> <li>optional: zirconia measuring cell for O<sub>2</sub> for quicker measurements</li> <li>MAPY LE: ideal also for inline analysis of flow packaging machines; minimisation of gas consumption by combination with the gas mixer KM-FLOW or the KD gas meterer</li> </ul>	<p><b>MAPY</b></p> <table border="1"> <tr> <td>MAPY 4.0 / MAPY LE</td> <td>O<sub>2</sub></td> <td>version P or L</td> </tr> <tr> <td>MAPY 4.0 / MAPY LE</td> <td>CO<sub>2</sub></td> <td>version P or L</td> </tr> <tr> <td>MAPY 4.0 / MAPY LE</td> <td>O<sub>2</sub>/CO<sub>2</sub></td> <td>version P or L</td> </tr> <tr> <td>MAPY 4.0 / MAPY LE</td> <td>O<sub>2</sub></td> <td>version S</td> </tr> <tr> <td>MAPY 4.0 / MAPY LE</td> <td>O<sub>2</sub></td> <td>version S and L</td> </tr> <tr> <td>MAPY 4.0 / MAPY LE</td> <td>O<sub>2</sub>/CO<sub>2</sub></td> <td>version S</td> </tr> <tr> <td>MAPY 4.0 / MAPY LE</td> <td>O<sub>2</sub>/CO<sub>2</sub></td> <td>version S and L</td> </tr> </table> <p><b>options:</b></p> <ul style="list-style-type: none"> <li>zirconia measuring cell</li> <li>paramagnetic measuring cell (incl. larger housing)</li> <li>external barcode reader</li> <li>coupling socket set</li> <li>analysis software GASCONTROL CENTER</li> <li>fully automatic calibration 1 channel</li> <li>fully automatic calibration 2 channels</li> <li>O<sub>2</sub> measurement in ppm-range (surcharge calibration)</li> <li>heating and thermostat, only electro-chemical sensors</li> <li>different Ethernet cables (only for MAPY in vertical housing)</li> </ul>		MAPY 4.0 / MAPY LE	O <sub>2</sub>	version P or L	MAPY 4.0 / MAPY LE	CO <sub>2</sub>	version P or L	MAPY 4.0 / MAPY LE	O <sub>2</sub> /CO <sub>2</sub>	version P or L	MAPY 4.0 / MAPY LE	O <sub>2</sub>	version S	MAPY 4.0 / MAPY LE	O <sub>2</sub>	version S and L	MAPY 4.0 / MAPY LE	O <sub>2</sub> /CO <sub>2</sub>	version S	MAPY 4.0 / MAPY LE	O <sub>2</sub> /CO <sub>2</sub>	version S and L
	MAPY 4.0 / MAPY LE	O <sub>2</sub>	version P or L																				
MAPY 4.0 / MAPY LE	CO <sub>2</sub>	version P or L																					
MAPY 4.0 / MAPY LE	O <sub>2</sub> /CO <sub>2</sub>	version P or L																					
MAPY 4.0 / MAPY LE	O <sub>2</sub>	version S																					
MAPY 4.0 / MAPY LE	O <sub>2</sub>	version S and L																					
MAPY 4.0 / MAPY LE	O <sub>2</sub> /CO <sub>2</sub>	version S																					
MAPY 4.0 / MAPY LE	O <sub>2</sub> /CO <sub>2</sub>	version S and L																					
	 <p>for food-grade gases, conforms to 1935/2004</p>																						

MAPY VAC		O <sub>2</sub> / CO <sub>2</sub> gas analyser, for traysealers and thermoformers
	<p><b>Inline gas analyser for continuous control of modified atmospheres in traysealers and thermoformers</b></p> <ul style="list-style-type: none"> <li>measures the O<sub>2</sub> or O<sub>2</sub>/CO<sub>2</sub> concentration before sealing the package</li> <li>with touchscreen or as black box version (BB)</li> <li>option: analysis of buffer tank</li> <li>ideal in combination with a WITT gas mixer</li> </ul>	<p><b>MAPY VAC</b></p> <p>MAPY VAC O<sub>2</sub> Zr                  MAPY VAC O<sub>2</sub> Zr BB                  MAPY VAC O<sub>2</sub>/CO<sub>2</sub> Zr                  MAPY VAC O<sub>2</sub>/CO<sub>2</sub> Zr BB                  MAPY VAC O<sub>2</sub> Zr, incl. buffer analysis                  MAPY VAC O<sub>2</sub> Zr BB, incl. buffer analysis                  MAPY VAC O<sub>2</sub>/CO<sub>2</sub> Zr, incl. buffer analysis                  MAPY VAC O<sub>2</sub>/CO<sub>2</sub> Zr BB, incl. buffer analysis</p> <p><b>Options:</b>                  cover IP45</p>

Inline gas analysis		integrated with gas mixer
 <p>GC 50</p>	<p><b>Gas Analysers for H<sub>2</sub>, He, etc. to be combined with WITT gas mixers</b></p> <ul style="list-style-type: none"> <li>gas mixer and analyser as a compact unit</li> <li>integrated analysis with LCD display touchscreen</li> <li>min./max. alarms</li> <li>for flammable gases certified to ATEX</li> </ul>	<p><b>gas analysis for gas mixers</b></p> <p>analyser system H<sub>2</sub> (Ex, Thermal Conductivity Sensors)                  analyser system H<sub>2</sub> (Ex, Thermal Conductivity Sensors) with additional cut-off valve for flammable gases                  analyser system He (Thermal Conductivity Sensors)                  analyser system O<sub>2</sub> (chemical)                  zirconia measuring cell for analyser system O<sub>2</sub> (chemical)                  analyser system O<sub>2</sub> (paramagnetic)                  analyser system CO<sub>2</sub> (infrared)                  analyser system O<sub>2</sub>/CO<sub>2</sub> (chemical/infrared)                  analyser system O<sub>2</sub>/CO<sub>2</sub> (paramagnetic/infrared)                  integration of the analysing system in the mixer housing (MG 200 without surcharge)</p>

Options		for WITT gas analysers
 <p>Back-purging device for inline gas analysers against blocked filters on gas inlets</p>	<p><b>Additional functions for optimising the process</b></p> <ul style="list-style-type: none"> <li>data export and analysis</li> <li>automatic calibration</li> <li>alarm function</li> <li>error advice</li> <li>back-purging device against blocked filters</li> </ul>	<p><b>options for WITT gas analysers (except MAPY and MFA)</b></p> <p>digital paperless chart recorder, 3 channels                  integration chart recorder in mixer                  LED-warning light with horn                  digital chart-recorder (only GC 50)                  data logger (only GC 50)                  implementation of USB interface on the back or the front of the housing                  analysis of the flow measurement (4-20mA), without flow-sensor                  automatic calibration (not for PA), 1 channel                  automatic calibration (not for PA), 2 channels                  automatic calibration in Ex-version (not for PA), 1 channel                  automatic calibration in Ex-version (not for PA), 2 channels                  error advice via e-mail (only in combination with data logger (GC50))</p> <p>back-purging device for inline gas analysers</p>

OBCC		documentation software for OXYBABY® 6.0 and PA
	<p><b>Windows software for the documentation of analysis measuring results. For OXYBABY® 6.0, P 6.0, Med and PA 7.0</b></p> <ul style="list-style-type: none"> <li>modern, intuitive interface</li> <li>graphic representation of the measured data, verifiable PDF reports</li> <li>comfortable data management with import and export function</li> </ul>	<p><b>Software</b></p> <p>free 30-day trial version</p> <p>OBCC full version incl. updates                  Licence for 1 year                  Licence for 2 years</p> <p>▶▶▶</p>

14/09/2023

## 6. GAS ANALYSERS

### MFA 10.0

### multi gas analyser



MFA 10.0

**Portable multi gas analyser especially for maintenance and service**

- for analysis of up to 15 different combinations of gases
- easy to use 7" colour touchscreen
- continuous analysis
- no calibration necessary after changing gas combination
- 4-20 mA output signal

**MFA 10.0**  
MFA 10.0

### HYDROBABY

### mobile moisture measurement



HYDROBABY

**Mobile device for analysing moisture in gases**

- short response times
- dewpoint from -110° up to 20°C
- latest sensor technology
- easy navigation
- large display
- USB interface for data export

**HYDROBABY**  
HYDROBABY

**options:**  
pressure compensation  
4-20 mA outlet

### MFA H<sub>2</sub>O

### stationary moisture measurement



MFA H<sub>2</sub>O

**Table-top device for analysing moisture in gases**

Features - see HYDROBABY plus:

- overpressure design with metering valve and flow meter
- USB interface for data export

**MFA H<sub>2</sub>O**  
MFA H<sub>2</sub>O

**options:**  
pressure compensation  
4-20 mA outlet  
integrated vacuum pump with battery and external charger

### RLA100

### ambient air monitoring





RLA100


**Compact ambient air monitor for the detection of CO<sub>2</sub>**

- 2 alarm limits
- 4-digit display and 4 LEDs for visual control of gas concentration
- gas measuring computer with integrated alarm device (light and horn)
- easy wall-mounting

**RLA100**  
RLA100

RLA compact		ambient air monitor
	<p><b>Compact ambient air monitoring system for the detection of O<sub>2</sub>, CO<sub>2</sub>, H<sub>2</sub> etc, incl. gas monitor, transmitter and transmitter cable</b></p> <ul style="list-style-type: none"> <li>simultaneous monitoring of up to four gas inlets</li> <li>freely adjustable limits per software</li> <li>data logger</li> <li>exceeding the limits generates alarm and triggers a potential free contact</li> </ul>	<p><b>RLA compact</b></p> <ul style="list-style-type: none"> <li>gas monitor 1-channel</li> <li>every additional transmitter channel (max. 4)</li> <li>transmitter for O<sub>2</sub></li> <li>transmitter for CO<sub>2</sub> - not Ex</li> <li>transmitter for O<sub>2</sub> Zircos - not Ex</li> <li>transmitter for combustible gases H<sub>2</sub>, methane, ethylene, propane (under explosion limit -0..50/100% UEG) - Atex: Zone 2, Cat. 3G</li> <li>transmitter for CO</li> <li>flow adapter (recommended for calibration)</li> <li>transmitter cable per meter and transmitter</li> </ul>

RLA multichannel		ambient air monitor
	<p><b>Compact ambient air monitoring system for the detection of O<sub>2</sub>, CO<sub>2</sub>, H<sub>2</sub> etc, incl. gas monitor, transmitter and transmitter cable</b></p> <ul style="list-style-type: none"> <li>simultaneous monitoring of different gas inlets</li> <li>freely adjustable limits</li> <li>intuitive menu design</li> <li>exceeding the limits generates alarm and triggers a potential free contact</li> </ul>	<p><b>RLA multichannel</b></p> <ul style="list-style-type: none"> <li>4-channel gas monitor with alarm</li> <li>additional channel (up to 16 channels possible)</li> <li>transmitter for O<sub>2</sub></li> <li>transmitter for CO<sub>2</sub> - not Ex</li> <li>transmitter for O<sub>2</sub> Zircos - not Ex</li> <li>transmitter for combustible gases H<sub>2</sub>, methane, ethylene, propane (under explosion limit -0..50/100% UEG) - Atex: Zone 2, Cat. 3G</li> <li>transmitter for CO</li> <li>flow adapter (recommended for calibration)</li> <li>transmitter cable per meter and transmitter</li> </ul>

Inlet pressure monitoring		with alarm module AM3
 <p>separate inlet pressure monitoring</p>	<p><b>For continuous inlet pressure monitoring for maximum process safety</b></p> <ul style="list-style-type: none"> <li>simultaneous monitoring of up to 3 gas inlets</li> <li>freely adjustable limits</li> <li>intuitive menu design</li> <li>exceeding the limits generates alarm and triggers a potential free contact</li> </ul>	<p><b>Inlet pressure monitoring</b></p> <ul style="list-style-type: none"> <li>separate</li> <li>for flammable gases as Ex-version with separate control housing</li> <li>options:</li> <li>data cable</li> <li>ALARM CONTROL software</li> <li>surcharge for analogue pressure transmitters, 2 inlet gases</li> <li>surcharge for analogue pressure transmitters, 3 inlet gases</li> <li>surcharge for analogue pressure transmitters Ex, 2 inlet gases</li> <li>surcharge for analogue pressure transmitters Ex, 3 inlet gases</li> <li>LED warning light with signal-horn</li> </ul>

14/09/2023



“WITT gas analysers for MAP applications: Technique, performance, practice.

From the handy Oxybaby® via the compact PA up to the award-winning MAPY: In our special brochure you will find detailed information about our O<sub>2</sub>/ CO<sub>2</sub> gas analysers.

Download at ▶ [www.wittgas.com](http://www.wittgas.com)

## 7. LEAK DETECTION EQUIPMENT

### LEAK-MASTER® EASY



LEAK-MASTER® EASY 3



control unit PLUS (optional)

**For the detection of even the smallest leaks, without operating with trace gas**

- for all flexible and stable types of packages, also without modified atmosphere
- easy, intuitive handling
- visual principle of measurement, reveals the position of the leak
- administration and documentation of user and product data (only with control unit PLUS)

### bubble-test

LEAK-MASTER® EASY	chamber size in approx. mm (HxWxD)
EASY 0.5	115 x 305 x 195
EASY 1	165 x 305 x 195
EASY 1.5	145 x 505 x 310
EASY 2	205 x 505 x 310
EASY 3	275 x 525 x 360
EASY 4	320 x 625 x 500
EASY 5	340 x 760 x 500

version with electric vacuum pump instead of compressed air (not retrofittable)

options:	order no.
vacuum-set	956.992700
vacuum holding valve	800961000
calibrated manometer	800942100
ASTM F2096 testing set	966129800

control unit PLUS	5901LME-Z-003
options for control unit:	
barcode reader IP 65	957099400

product video and further information see  
[▶ www.leak-master.net](http://www.leak-master.net)

### LEAK-MASTER® PRO 2



LEAK-MASTER® PRO 2  
model 2.1

LEAK-MASTER® PRO 2  
model 2.2

**Fast, non-destructive detection of even the smallest leaks in MAP-packages, CO<sub>2</sub>-based**

- non-destructive sample leak testing at a strong price-performance ratio
- without using expensive helium or hydrogen
- detects even the smallest of leaks from 10 µm (depending on the product and the test conditions) with highly sensitive and ultra-fast CO<sub>2</sub> sensor
- housing made of acrylic glass
- visual indication of test results (LED lighting)
- 4 chamber sizes for single packages or small boxes
- measuring range 0 ppm - 5.000 ppm
- user and product administration and documentation
- data transfer via ethernet

### CO<sub>2</sub>-based

LEAK-MASTER® PRO	chamber size in approx. mm (HxWxD)
LM 2.1	42 x 310 x 200
LM 2.2	174 x 310 x 200
LM 2.3	100 x 460 x 305
LM 2.4	150 x 380 x 380

options:	order no.
barcode reader IP 65	957099400
electrical vacuum pump	
analysis software GASCONTROL CENTER	

product video and further information see  
[▶ www.leak-master.net](http://www.leak-master.net)

## 7. LEAK DETECTION EQUIPMENT

### LEAK-MASTER® PRO



LEAK-MASTER® PRO

**Fast, non-destructive detection of even the smallest leaks in MAP-packages, CO<sub>2</sub>-based**

- for large packages and E2-boxes
- detects even the smallest leaks
- measuring range 0 ppm - 5.000 ppm
- user and product administration and documentation
- data transfer via ethernet

CO<sub>2</sub>-based, for large packages

#### LEAK-MASTER® PRO

chambre size in approx. mm (LxWxH)

LM 12.2	140 x 680 x 500
LM 12.1	230 x 680 x 500

#### options:

WLAN (WIFI)	966042600
barcode reader IP 65	957099400
analysis software GASCONTROL CENTER	
connection for rinsing air	966042500

#### order no.

966042600
957099400
966042500

### LEAK-MASTER® MAPMAX



LEAK-MASTER® MAPMAX

inline

#### LEAK-MASTER® MAPMAX

size in approx. mm (LxWxH)

MAPMAX Type 400	1840 x 1130 x 2200
max. product dimensions 600 x 400 x 380 mm	
up to 15 cycles per minute	

MAPMAX Type 700	1840 x 1130 x 2200
max. product dimensions 600 x 680 x 220 mm	
up to 15 cycles per minute	

#### options:

WIFI
barcode reader IP 65
analysis software GASCONTROL CENTER

#### MINK vacuum pump

central vacuum layout (control valve central vacuum)  
surface pressurisation (incl. motorisation)  
e.g. to speed up and improve the measurements for packages with a low gas volume

**Uniquely quick and precise inline-leak detection of packages containing CO<sub>2</sub> directly from the packaging machine** for trays/thermoform packaging or secondary packages respectively boxes (vacuum layout optionally)

features see LEAK-MASTER® PRO, plus:

- integration in the packaging process
- automatic product positioning
- automatic product transport to the following process
- up to 15 cycles per minute

All sizes imply: **LxWxH** (the width „W“ refers to the moving direction of the conveyor-belt). The height includes the alarm lamp.

product video and further information see  
▶ [www.leak-master.net](http://www.leak-master.net)

### Accessories



barcode reader



GASCONTROL CENTER

**For process optimisation with models EASY PLUS, PRO and MAPMAX**


- quick registration of user-, product- and process data
- digital documentation
- comfortable data transfer

for WITT leak detectors

WIFI (not for Control Unit PLUS)
barcode reader IP 65
analysis software GASCONTROL CENTER
Test-Leak (60µ) for the inspection of measuring and testing equipment (only for LEAK-MASTER® MAPMAX and PRO)



## 8. DATA LOGGER

PATBOX		data logger
 <p><b>Compact logger for pressure and temperature</b></p> <ul style="list-style-type: none"> <li>• highly mobile and accurate</li> <li>• extremely small size</li> <li>• high process reliability</li> <li>• simple transmission of data via NFC</li> <li>• operation via Android App</li> </ul>	PATBOX	

14/09/2023

### “ Leak Testing Methods in comparison

Many industrial products have to be leak-tight. For example, food, cosmetics or pharmaceutical packaging, but also products such as lights in the automotive industry, electronics or plastic components. But how can manufacturers test the leak-tightness of their products?

In this interview, Geert Elie from WITT gives an overview of the possibilities and explains the advantages and disadvantages. Read the entire interview here.

Download at ► [www.wittgas.com](http://www.wittgas.com)

## 9. FLASHBACK ARRESTORS for pressure regulators, outlet points and pipelines

### RF53N



Acetylene max. 13 m<sup>3</sup>/h  
Fuel gases max. 68 m<sup>3</sup>/h  
Oxygen max. 187 m<sup>3</sup>/h

DIN EN ISO 5175-1

FA  NV  TV

also available in stainless steel, see p. 49

connection	inlet → outlet	order no.
for fuel gases:		
G 1/4 LH	MG → AGS	145-009
G 3/8 LH	MG → AGS	145-012
G 1/2 LH	MG → AGS	145-016
9/16" LH	MG → AGS	145-017
for oxygen:		
G 1/4 RH	MG → AGS	145-021
G 3/8 RH	MG → AGS	145-022
G 1/2 RH	MG → AGS	145-023
9/16" RH	MG → AGS	145-025
for fuel gases or oxygen:		
1/4" NPT	IG → IG	145-197
3/8" NPT	IG → IG	145-205
G 1/4 RH	IG → IG	145-125

### RF53DN



Acetylene max. 11,5 m<sup>3</sup>/h  
Fuel gases max. 105 m<sup>3</sup>/h  
Oxygen max. 56 m<sup>3</sup>/h

DIN EN ISO 5175-1

with pressure relief valve

FA  NV  TV

connection	inlet → outlet	order no.
for fuel gases:		
G 3/8 LH	MG → AGS	145-041
G 1/2 LH	MG → AGS	145-043
9/16" LH	MG → AGS	145-044
for oxygen:		
G 1/4 RH	MG → AGS	145-048
G 3/8 RH	MG → AGS	145-049
G 1/2 RH	MG → AGS	145-050
9/16" RH	MG → AGS	145-051

### RF53NSK



Acetylene max. 13 m<sup>3</sup>/h  
Fuel gases max. 68 m<sup>3</sup>/h  
Oxygen max. 187 m<sup>3</sup>/h

DIN EN ISO 5175-1

with integrated coupling  
body according EN 561

FA  NV  TV

suitable probes see p. 37f

connection	inlet → outlet	order no.
for fuel gases:		
G 3/8 LH	MG → coupling body	145SK-002
9/16" LH	MG → coupling body	145SK-004
for oxygen:		
G 1/4 RH	MG → coupling body	145SK-008
G 3/8 RH	MG → coupling body	145SK-001
9/16" RH	MG → coupling body	145SK-003

## 9. FLASHBACK ARRESTORS for pressure regulators, outlet points and pipelines

### 85-10



Acetylene max. 22 m<sup>3</sup>/h  
Fuel gases max. 235 m<sup>3</sup>/h  
Oxygen max. 310 m<sup>3</sup>/h

DIN EN ISO 5175-1

FA  NV  TV

also available in stainless steel, see p. 49

connection	inlet → outlet	order no.
for fuel gases:		
G 3/8 LH	MG → AGS	143-002
G 1/2 LH	MG → AGS	143-008
9/16" LH	MG → AGS	143-009
for oxygen:		
G 1/4 RH	MG → AGS	143-013
G 3/8 RH	MG → AGS	143-016
G 1/2 RH	MG → AGS	143-019
9/16" RH	MG → AGS	143-022
for fuel gases or oxygen:		
1/4" NPT	IG → IG	143-323
3/8" NPT	IG → IG	143-105
G 3/8 RH	IG → IG	143-227

### 85-20



Acetylene max. 45 m<sup>3</sup>/h  
Fuel gases max. 324 m<sup>3</sup>/h  
Oxygen max. 333 m<sup>3</sup>/h

DIN EN ISO 5175-1

FA  NV  TV

also available in stainless steel, see p. 49

connection	inlet → outlet	order no.
for fuel gases:		
G 3/4 LH	MG → AGS	149-001
for oxygen:		
G 3/4 RH	MG → AGS	149-014
for fuel gases or oxygen:		
G 1/2 RH	IG → IG	149-002
1/2" NPT	IG → IG	149-003
G 3/4 RH	IG → IG	149-005
3/4" NPT	IG → IG	149-006
G 1 RH	IG → IG	149-004
1 NPT	IG → IG	149-017

### 85-30



Acetylene max. 70 m<sup>3</sup>/h  
Fuel gases max. 675 m<sup>3</sup>/h  
Oxygen max. 860 m<sup>3</sup>/h


DIN EN ISO 5175-1


FA  NV  TV


also available in stainless steel, see p. 50


connection	inlet → outlet	order no.
for fuel gases (except acetylene):		
G 3/4 LH	MG → AGS	147-001
G 1 LH	MG → AGS	147-003
for oxygen:		
G 3/4 RH	MG → AGS	147-065
G 1 RH	MG → AGS	147-068
for fuel gases (except acetylene) or oxygen:		
3/4" NPT	IG → IG	147-081
G 1 1/2 RH	IG → IG	147-069
1" NPT	IG → IG	147-072
1/2" NPT	IG → IG	147-083
for acetylene (EPDM sealing ring (TV)):		
G 3/4 LH	MG → AGS	147-117
G 1 LH	MG → AGS	147-118
G 1 RH	IG → IG	147-123
G 1.1/2 RH	IG → IG	147-116
1/2" NPT	IG → IG	147-119
3/4" NPT	IG → IG	147-120
1" NPT	IG → IG	147-121

# 9. FLASHBACK ARRESTORS for pressure regulators, outlet points and pipelines

Safety group 645/85-30		2- or 4-fold		
 <p><b>Parallel connection of 2 or 4 flashback arrestors model 85-30, ideal for high consumption and high flows</b></p> <p><b>Acetylene max. 392 m<sup>3</sup>/h</b> <b>Fuel gases max. 2740 m<sup>3</sup>/h</b> <b>Oxygen max. 1850 m<sup>3</sup>/h</b></p> <p>DIN EN ISO 5175-1</p> <p>FA NV TV</p> <p>also available in stainless steel, see p. 50</p>	<b>connection</b>	<b>inlet → outlet</b>	<b>order no.</b>	
	for fuel gases:			
	DN 50 (2fold)	flange DIN 2633	182-023	
	DN 50 (4fold)	flange DIN 2633	182-007	
	2" NPT (4fold)	IG → IG	182-030	
	for oxygen:			
	DN 50 (2fold)	flange DIN 2633	182-027	
	DN 50 (4fold)	flange DIN 2633	182-008	

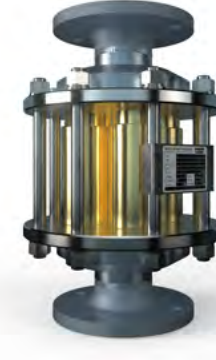Safety group 645/623N		4- or 5-fold		
 <p><b>Parallel connection of 4 or 5 flashback arrestors model 623N, ideal for high consumption and high flows</b></p> <p><b>Town gas / Natural gas max. 1010 m<sup>3</sup>/h</b></p> <p>DIN EN ISO 5175-1</p> <p>FA NV TV</p>	<b>connection</b>	<b>inlet → outlet</b>	<b>order no.</b>	
	for town gas/natural gas:			
	DN 65/PN16 (4fold)	flange DIN 2633	182-014	
	DN 65 /PN16 (5fold)	flange DIN 2633	182-018	

Super 55				
 <p><b>Acetylene max. 10 m<sup>3</sup>/h</b> <b>Fuel gases max. 60 m<sup>3</sup>/h</b> <b>Oxygen max. 95 m<sup>3</sup>/h</b></p> <p>DIN EN ISO 5175-1</p> <p>with pressure controlled cut-off valve</p> <p>FA NV TV PV</p>	<b>connection</b>	<b>inlet → outlet</b>	<b>order no.</b>	
	for fuel gases:			
	G 3/8 LH	MG → AGS	146-025	
	9/16" LH	MG → AGS	146-029	
	for oxygen:			
	G 1/4 RH	MG → AGS	146-027	
	G 3/8 RH	MG → AGS	146-026	
	9/16" RH	MG → AGS	146-030	


Super 85				
 <p><b>Acetylene max. 19 m<sup>3</sup>/h</b> <b>Fuel gases max. 169 m<sup>3</sup>/h</b> <b>Oxygen max. 119 m<sup>3</sup>/h</b></p> <p>DIN EN ISO 5175-1</p> <p>with pressure controlled cut-off valve</p> <p>FA NV TV PV</p>	<b>connection</b>	<b>inlet → outlet</b>	<b>order no.</b>	
	for fuel gases:			
	G 3/8 LH	MG → AGS	148-002	
	9/16" LH	MG → AGS	148-009	
	for oxygen:			
	G 1/4 RH	MG → AGS	148-013	
	G 3/8 RH	MG → AGS	148-016	
	9/16" RH	MG → AGS	148-022	

FA = flame arrester NV = non-return valve TV = temperature controlled cut-off valve PV = pressure controlled cut-off valve

Please specify gas, pressures, temperatures, flows and connections at time of enquiry and order. For some gases, special seals may be required. Special designs, higher flow capacities or different pressures on demand. Explanations of thread types, conversion of units of measurement see p. 84/85.

# 9. FLASHBACK ARRESTORS for pressure regulators, outlet points and pipelines

### Super 90



**Acetylene max. 11 m<sup>3</sup>/h**  
**Fuel gases max. 128 m<sup>3</sup>/h**  
**Oxygen max. 62 m<sup>3</sup>/h**


DIN EN ISO 5175-1

with pressure controlled cut-off valve

FA NV TV PV

connection	inlet → outlet	order no.
for fuel gases:		
G 3/8 LH	MG → AGS	125-029
9/16" LH	MG → AGS	125-032
for oxygen:		
G 1/4 RH	MG → AGS	125-030
G 3/8 RH	MG → AGS	125-031
9/16" RH	MG → AGS	125-033

### Super 78



**Acetylene max. 11 m<sup>3</sup>/h**  
**Fuel gases max. 128 m<sup>3</sup>/h**  
**Oxygen max. 62 m<sup>3</sup>/h**


DIN EN ISO 5175-1

with pressure controlled cut-off valve and pressure relief valve (RV)

FA NV TV PV RV

connection	inlet → outlet	order no.
for fuel gases:		
G 3/8 LH	MG → AGS	125-010
9/16" LH	MG → AGS	125-012
for oxygen:		
G 1/4 RH	MG → AGS	125-016
G 3/8 RH	MG → AGS	125-017
9/16" RH	MG → AGS	125-019

### Super 66



**Acetylene max. 20 m<sup>3</sup>/h**  
**Fuel gases max. 225 m<sup>3</sup>/h**  
**Oxygen max. 105 m<sup>3</sup>/h**


DIN EN ISO 5175-1

with pressure controlled cut-off valve and pressure relief valve (RV)

FA NV TV PV RV

connection	inlet → outlet	order no.
for fuel gases:		
G 3/8 LH	MG → AGS	125-002
for oxygen:		
G 1/4 RH	MG → AGS	125-006
G 3/8 RH	MG → AGS	125-007

### F53N/HHO



**Air max. 20 m<sup>3</sup>/h**

for hydrogen-oxygen-mixtures according to DIN 32508 No. 5.8.2 and 5.8.3

for electrolysis devices

FA TV


connection	inlet → outlet	order no.
for HHO:		
G 1/4 RH	IG → IG	145-276


14/09/2023


FA = flame arrester NV = non-return valve TV = temperature controlled cut-off valve PV = pressure controlled cut-off valve


Please specify gas, pressures, temperatures, flows and connections at time of enquiry and order. For some gases, special seals may be required. Special designs, higher flow capacities or different pressures on demand. Explanations of thread types, conversion of units of measurement see p. 84/85.

# 10. FLASHBACK ARRESTORS for torches

E 460 - 1		connection	inlet → outlet	order no.
	<b>Acetylene max. 9 m<sup>3</sup>/h</b> <b>Fuel gases max. 82 m<sup>3</sup>/h</b> <b>Oxygen max. 119 m<sup>3</sup>/h</b>  DIN EN ISO 5175-1 <input type="checkbox"/> FA <input type="checkbox"/> NV	for fuel gases:		
		4.0 mm - G 3/8 LH	nozzle → MG	135-002
		6.3 mm - G 3/8 LH	nozzle → MG	135-005
		8.0 mm - G 3/8 LH	nozzle → MG	135-009
		9.0 mm - G 3/8 LH	nozzle → MG	135-013
		for oxygen:		
		4.0 mm - G 1/4 RH	nozzle → MG	135-014
		6.3 mm - G 1/4 RH	nozzle → MG	135-017
		6.3 mm - G 3/8 RH	nozzle → MG	135-018
		8.0 mm - G 3/8 RH	nozzle → MG	135-022

E 460 - 2		connection	inlet → outlet	order no.
	<b>Acetylene max. 9 m<sup>3</sup>/h</b> <b>Fuel gases max. 82 m<sup>3</sup>/h</b> <b>Oxygen max. 119 m<sup>3</sup>/h</b>  DIN EN ISO 5175-1 <input type="checkbox"/> FA <input type="checkbox"/> NV	for fuel gases:		
		4.0 mm - 4.0 mm	nozzle → nozzle	135-029
		6.3 mm - 6.3 mm	nozzle → nozzle	135-031
		8.0 mm - 8.0 mm	nozzle → nozzle	135-032
		9.0 mm - 9.0 mm	nozzle → nozzle	135-034
		for oxygen:		
		4.0 mm - 4.0 mm	nozzle → nozzle	135-037
		6.3 mm - 6.3 mm	nozzle → nozzle	135-038
		8.0 mm - 8.0 mm	nozzle → nozzle	135-039

E 460 - 3		connection	inlet → outlet	order no.
	<b>Acetylene max. 9 m<sup>3</sup>/h</b> <b>Fuel gases max. 82 m<sup>3</sup>/h</b> <b>Oxygen max. 119 m<sup>3</sup>/h</b>  DIN EN ISO 5175-1 <input type="checkbox"/> FA <input type="checkbox"/> NV	for fuel gases:		
		G 3/8 LH	AGS → MG	135-042
		9/16" LH	AGS → MG	135-045
		for oxygen:		
		G 1/4 RH	AGS → MG	135-046
		G 3/8 RH	AGS → MG	135-094
		9/16" RH	AGS → MG	135-048


E 460SK		connection	inlet → outlet	order no.
	<b>Acetylene max. 9 m<sup>3</sup>/h</b> <b>Fuel gases max. 82 m<sup>3</sup>/h</b> <b>Oxygen max. 119 m<sup>3</sup>/h</b>  DIN EN ISO 5175-1  <input type="checkbox"/> FA <input type="checkbox"/> NV  suitable coupling body: SK100-9, see p. 31	for fuel gases:		
		G 3/8 LH	probe → MG	135SK-114
		9/16" LH	probe → MG	135SK-117
		for oxygen:		
		G 1/4 RH	probe → MG	135SK-115
		G 3/8 RH	probe → MG	135SK-124
		9/16" RH	probe → MG	135SK-121

FA = flame arrestor     NV = non-return valve     TV = temperature controlled cut-off valve     PV = pressure controlled cut-off valve

Please specify gas, pressures, temperatures, flows and connections at time of enquiry and order. For some gases, special seals may be required. Special designs, higher flow capacities or different pressures on demand. Explanations of thread types, conversion of units of measurement see p. 84/85.

# 10. FLASHBACK ARRESTORS for torches

**E460SKU**



↑ ↑

**Acetylene max. 13 m<sup>3</sup>/h  
Fuel gases max. 68 m<sup>3</sup>/h  
Oxygen max. 187 m<sup>3</sup>/h**

DIN EN ISO 5175-1


with integrated coupling body: EN 561

FA  NV

suitable coupling probes: see section 14 "Quick couplings"

connection	inlet → outlet	order no.
for fuel gases:		
6.3 mm	nozzle → coupling body	135SK-001
8.0 mm	nozzle → coupling body	135SK-004
G 3/8 LH	AGS → coupling body	135SK-128
for oxygen:		
6.3 mm	nozzle → coupling body	135SK-002
G 1/4 RH	AGS → coupling body	135SK-127

**SK100-9**

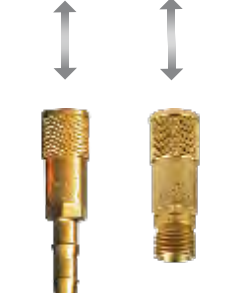


↕ ↕

**Coupling body for E460SK (see p. 30) without non-return valve, part of the WITT coupling system SK100**

EN 561 / ISO 7289

connection	inlet ↔ outlet	order no.
for fuel gases:		
6.3 mm	nozzle ↔ coupling body	150-021
8.0 mm	nozzle ↔ coupling body	150-039
9.0 mm	nozzle ↔ coupling body	150-023
G 3/8 LH	AGS ↔ coupling body	150-081
for oxygen:		
6.3 mm	nozzle ↔ coupling body	150-024
8.0 mm	nozzle ↔ coupling body	150-040
G 1/4 RH	AGS ↔ coupling body	150-080
G 3/8 RH	AGS ↔ coupling body	150-079
other gases:		
6.3 mm	nozzle ↔ coupling body	150-077

**RF53NU**



↓ ↓


**Acetylene max. 13 m<sup>3</sup>/h  
Fuel gases max. 68 m<sup>3</sup>/h  
Oxygen max. 187 m<sup>3</sup>/h**

DIN EN ISO 5175-1

FA  NV  TV

connection	inlet → outlet	order no.
for fuel gases:		
G 3/8 LH	AGS → MG	145-034
G 1/2 LH	AGS → MG	145-035
9/16" LH	AGS → MG	145-236
for oxygen:		
G 1/4 RH	AGS → MG	145-036
G 3/8 RH	AGS → MG	145-037
G 1/2 RH	AGS → MG	145-038
9/16" RH	AGS → MG	145-235

**85-10NU**



↓ ↓

**Acetylene max. 22 m<sup>3</sup>/h  
Fuel gases max. 235 m<sup>3</sup>/h  
Oxygen max. 310 m<sup>3</sup>/h**

DIN EN ISO 5175-1

FA  NV  TV

connection	inlet → outlet	order no.
for fuel gases:		
G 3/8 LH	AGS → MG	143-039
G 1/2 LH	AGS → MG	143-231
9/16" LH	AGS → MG	143-245
for oxygen:		
G 3/8 RH	AGS → MG	143-041
9/16" RH	AGS → MG	143-244

FA = flame arrestor  NV = non-return valve  TV = temperature controlled cut-off valve  PV = pressure controlled cut-off valve

Please specify gas, pressures, temperatures, flows and connections at time of enquiry and order. For some gases, special seals may be required. Special designs, higher flow capacities or different pressures on demand. Explanations of thread types, conversion of units of measurement see p. 84/85.

# 10. FLASHBACK ARRESTORS for torches

## 85-10NU (Exzenter)



Acetylene max. 22 m<sup>3</sup>/h  
Fuel gases max. 235 m<sup>3</sup>/h  
Oxygen max. 310 m<sup>3</sup>/h

eccentric outlet

DIN EN ISO 5175-1

FA  NV  TV

connection	inlet → outlet	order no.
for fuel gases:		
G 3/8 LH	AGS → MG (eccentric)	143-217
G 1/2 LH	AGS → MG (eccentric)	143-148
9/16" LH	AGS → MG (eccentric)	143-131
for oxygen:		
G 1/4 RH	AGS → MG (eccentric)	143-215
G 3/8 RH	AGS → MG (eccentric)	143-216
G 1/2 RH	AGS → MG (eccentric)	143-152
9/16" RH	AGS → MG (eccentric)	143-132

14/09/2023

“Already a classic: our most seen video.


Get to know how flashback arrestors work, and learn everything about the relevant safety elements and their operation in an impressive 3D animated video.


And see the dramatic consequences of cutting costs on safety technology.


Download at:  
▶ [www.wittgas.com](http://www.wittgas.com)



# 11. FLASHBACK ARRESTORS for cutting machines

E 460 - 3				
	<p>Acetylene max. 9 m<sup>3</sup>/h Fuel gases max. 82 m<sup>3</sup>/h Oxygen max. 119 m<sup>3</sup>/h</p> <p>DIN EN ISO 5175-1</p> <p><input type="checkbox"/> FA <input type="checkbox"/> NV</p>	<b>connection</b>	<b>inlet → outlet</b>	<b>order no.</b>
		for fuel gases: G 3/8 LH	AGS → MG	135-042
		for oxygen: G 1/4 RH	AGS → MG	135-046
		G 3/8 RH	AGS → MG	135-052

RF 53 U				
	<p>Acetylene max. 13 m<sup>3</sup>/h Fuel gases max. 68 m<sup>3</sup>/h Oxygen max. 187 m<sup>3</sup>/h</p> <p>DIN EN ISO 5175-1</p> <p><input type="checkbox"/> FA <input type="checkbox"/> NV</p>	<b>connection</b>	<b>inlet → outlet</b>	<b>order no.</b>
		for fuel gases: G 3/8 LH	AGS → MG	145-003
		9/16" LH	AGS → MG	145-145
		for oxygen: G 1/4 RH	AGS → MG	145-004
		G 3/8 RH	AGS → MG	145-005
		G 1/2 RH	AGS → MG	145-006
		9/16" RH	AGS → MG	145-144


85 - 10 U				
	<p>Acetylene max. 22 m<sup>3</sup>/h Fuel gases max. 235 m<sup>3</sup>/h Oxygen max. 310 m<sup>3</sup>/h</p> <p>DIN EN ISO 5175-1</p> <p><input type="checkbox"/> FA <input type="checkbox"/> NV</p>	<b>connection</b>	<b>inlet → outlet</b>	<b>order no.</b>
		for fuel gases: G 3/8 LH	AGS → MG	143-223
		G 1/2 LH	AGS → MG	143-040
		for oxygen: G 3/8 RH	AGS → MG	143-133
		G 1/2 RH	AGS → MG	143-042


14/09/2023


FA = flame arrestor  NV = non-return valve  TV = temperature controlled cut-off valve  PV = pressure controlled cut-off valve

Please specify gas, pressures, temperatures, flows and connections at time of enquiry and order. For some gases, special seals may be required. Special designs, higher flow capacities or different pressures on demand. Explanations of thread types, conversion of units of measurement see p. 84/85.

## 12. FLASHBACK ARRESTORS for high flows

RF53N/30		connection	inlet → outlet	order no.
 <p><b>Fuel gases 16 m<sup>3</sup>/h</b> <b>Air 12 m<sup>3</sup>/h</b></p> <p>DIN EN ISO 5175-1</p> <p>[FA] [NV] [TV]</p> <p>for very low pressures without non-return valve:</p> <p>[FA] [TV] (order no. 145-136)</p>	with non-return valve:	G 3/8 LH	MG → AGS	145-120
	without non-return valve:	G 3/8 LH	MG → AGS	145-136

85-10/30		connection	inlet → outlet	order no.
 <p><b>Fuel gases 30 m<sup>3</sup>/h</b> <b>Air 21 m<sup>3</sup>/h</b></p> <p>DIN EN ISO 5175-1</p> <p>[FA] [NV] [TV]</p> <p>for very low pressures without non-return valve:</p> <p>[FA] [TV] (order no. 143-200 and 143-168)</p>	with non-return valve:	G 3/8 LH	MG → AGS	143-118
		G 1/2 LH	MG → AGS	143-121
		1/4" NPT	IG → IG	143-130
	without non-return valve:	G 1/2 LH	MG → AGS	143-200
		1/4" NPT	IG → IG	143-168

270N/NU		connection	inlet → outlet	order no.
 <p><b>Fuel gases (without acetylene): max. 371 m<sup>3</sup>/h</b> <b>Air 164 m<sup>3</sup>/h</b></p> <p>DIN EN ISO 5175-1</p> <p>[FA] [NV] [TV]</p> <p>pipeline fittings see next page</p>	<b>270N</b>	G 3/4 RH	AGS → MG	123-038
		G 1 RH	AGS → MG	123-041
		G 1.1/4 RH	AGS → MG	123-039
		G 1.1/2 RH	AGS → MG	123-040
		G 1/2 RH	IG → IG	123-054
		G 1 RH	IG → IG	123-057
	<b>270NU (reverse flow)</b>	G 3/4 RH	MG → AGS	123-046
		G 3/4 LH	MG → AGS	123-050
		G 1 RH	MG → AGS	123-047
		G 1 LH	MG → AGS	123-051
		G 1.1/4 RH	MG → AGS	123-048
		G 1.1/4 LH	MG → AGS	123-052
		G 1.1/2 RH	MG → AGS	123-049
		G 1.1/2 LH	MG → AGS	123-053

14/09/2023

## 12. FLASHBACK ARRESTORS for high flows

### 623N/NU



Fuel gases 406 m<sup>3</sup>/h  
Air 335 m<sup>3</sup>/h

DIN EN ISO 5175-1

FA NV TV

pipeline fittings see below

connection	inlet → outlet	order no.
<b>623N</b>		
G 3/4 RH	AGS → MG	189-006
G 1 RH	AGS → MG	189-008
G 1.1/4 RH	AGS → MG	189-009
G 1.1/2 RH	AGS → MG	189-007
G 1 RH	IG → IG	189-017
<b>623NU (reverse flow)</b>		
G 3/4 LH	MG → AGS	189-013
G 1 LH	MG → AGS	189-012
G 1.1/4 LH	MG → AGS	189-014
G 1.1/2 LH	MG → AGS	189-015

### Pipeline fittings



For flashback arrestors models 70, 270N/NU and 623N/NU

connection G1	connection G2	order no.
G 3/4 RH	G 1/2 RH	043000000
G 1 RH	G 3/4 RH	043000100
G 1.1/4 RH	G 1 RH	043000200
G 1.1/2 RH	G 1.1/4 RH	043000300

14/05/2023



## “ For specific needs: gas safety devices in stainless steel.

Anyone working with hydrogen, corrosive gases or pure gas requires a material that is especially designed for these conditions: stainless steel. Therefore WITT offers a wide range of stainless steel safety devices.

The latest production technologies, high-quality stainless steel (e.g. 1.4305/AISI 303, 1.4404/AISI 316L, 1.4541/AISI 321) and elastomers as well as a sophisticated quality management system guarantee highest quality. As a matter of course, WITT products fulfill all relevant international standards and norms. For your safety.


You can find our stainless steel products starting on page 50.


Further information on [www.wittgas.com](http://www.wittgas.com) and in our "Stainless steel" brochure.


FA = flame arrestor NV = non-return valve TV = temperature controlled cut-off valve PV = pressure controlled cut-off valve


Please specify gas, pressures, temperatures, flows and connections at time of enquiry and order. For some gases, special seals may be required. Special designs, higher flow capacities or different pressures on demand. Explanations of thread types, conversion of units of measurement see p. 84/85.

# 13. FLASHBACK ARRESTORS for central acetylene supply

FN12 / FN40		decomposition arrestor			
 <p><b>Stops dangerous decomposition of acetylene in low pressure pipelines</b></p> <p><b>Up to 1.5 bar</b></p> <p>FN12 Q= ca. 76 m<sup>3</sup>/h FN40 Q= ca. 140 m<sup>3</sup>/h</p> <p>DIN EN ISO 5175-1 DIN EN ISO 14114</p> <p><input type="checkbox"/> FA <input type="checkbox"/> TV</p>		<b>connection</b>	<b>inlet → outlet</b>	<b>order no.</b>	
		<b>FN12</b>	G 1.1/2 RH	IG → IG	021-001
		<b>FN40 (double flow capacity)</b>	G 1.1/2 RH	IG → IG	021-003

Safety group 645/FN40		4- or 5-fold		
 <p><b>Stops dangerous decomposition of acetylene in low pressure pipelines</b></p> <p><b>Up to 1.5 bar</b></p> <p>FN40 Q= ca. 140 m<sup>3</sup>/h</p> <p>DIN EN ISO 5175-1</p> <p><input type="checkbox"/> FA <input type="checkbox"/> TV</p>		<b>connection</b>	<b>inlet → outlet</b>	<b>order no.</b>
		DN 50 (2fold)	flange DIN 2633	182-001
		DN 50 (4fold)	flange DIN 2633	182-002

HDS17		shut-off device		
 <p><b>Stops dangerous decomposition of acetylene in the high pressure pipes of acetylene installations via pressure controlled quick acting piston valve</b></p> <p><b>Up to 25 bar</b></p> <p>TRAC 206</p> <p>DIN EN ISO 15615 DIN EN ISO 14114</p>		<b>connection</b>	<b>inlet → outlet</b>	<b>order no.</b>
		G 3/4 RH	IG → IG	017-001

Bundle connection		with non-return valve RV 650			
 <p><b>For the direct connection to a bundle</b></p> <p><b>Up to 25 bar</b></p> <p>DIN EN ISO 15615 DIN EN ISO 14114</p>		<b>connection</b>	<b>inlet → outlet</b>	<b>order no.</b>	
		„Linde“	M 28x1.5 LH - M 24x1.5 RH	IG → MG	210000011
		„Messer“	M 28x1.5 LH - M 24x1.5 RH	IG → MG	210000020

FA = flame arrestor    NV = non-return valve    TV = temperature controlled cut-off valve    PV = pressure controlled cut-off valve


Please specify gas, pressures, temperatures, flows and connections at time of enquiry and order. For some gases, special seals may be required. Special designs, higher flow capacities or different pressures on demand. Explanations of thread types, conversion of units of measurement see p. 84/85.



# 14. QUICK COUPLINGS

**SK100-1**

for torches

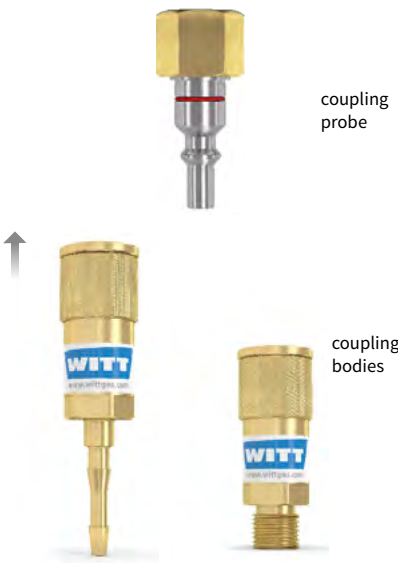

coupling probe

coupling bodies


connection	inlet → outlet	order no.
<b>• coupling probes</b>		
for fuel gases:		
G 3/8 LH	probe → MG	151-001
for oxygen:		
G 1/4 RH	probe → MG	151-003
G 3/8 RH	probe → MG	151-004
for other gases:		
G 1/4 RH	probe → MG	151-005
<b>• coupling bodies (also for SK100-2)</b>		
for fuel gases:		
4.0 mm	nozzle → coupling body	150-001
6.3 mm	nozzle → coupling body	150-003
8.0 mm	nozzle → coupling body	150-004
9.0 mm	nozzle → coupling body	150-005
G 3/8 LH	AGS → coupling body	150-064
for oxygen:		
4.0 mm	nozzle → coupling body	150-007
6.3 mm	nozzle → coupling body	150-009
8.0 mm	nozzle → coupling body	150-010
G 1/4 RH	AGS → coupling body	150-061
G 3/8 RH	AGS → coupling body	150-060
for other gases:		
6.3 mm	nozzle → coupling body	150-013
G 1/4 RH	AGS → coupling body	150-063
G 3/8 RH	AGS → coupling body	150-062

**Coupling bodies with non-return valve and automatic gas cut-off valve**

EN 561 / ISO 7289

**SK100-2**

for hoses

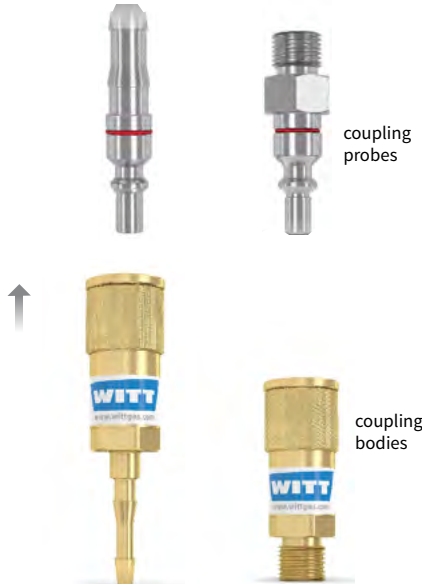

coupling probes

coupling bodies

connection	inlet → outlet	order no.
<b>• coupling probes (also for SK100-3)</b>		
for fuel gases:		
4.0 mm	probe → nozzle	151-007
6.3 mm	probe → nozzle	151-009
8.0 mm	probe → nozzle	151-010
9.0 mm	probe → nozzle	151-011
G 3/8 LH	probe → AGS	151-048
for oxygen:		
4.0 mm	probe → nozzle	151-013
6.3 mm	probe → nozzle	151-015
8.0 mm	probe → nozzle	151-016
G 1/4 RH	probe → AGS	151-045
G 3/8 RH	probe → AGS	151-044
for other gases:		
6.3 mm	probe → nozzle	151-021
G 1/4 RH	probe → AGS	151-047
G 3/8 RH	probe → AGS	151-046
<b>• coupling bodies</b>		
see SK100-1		


**Coupling bodies with non-return valve and automatic gas cut-off valve**

EN 561 / ISO 7289

# 14. QUICK COUPLINGS

## SK100-3

for outlet points

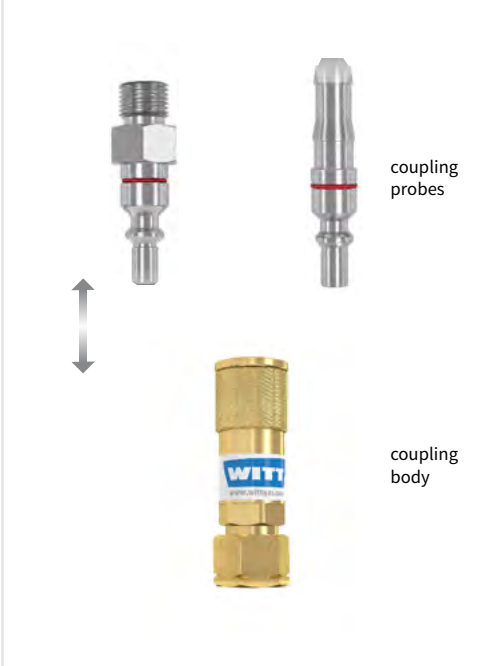

coupling probes

coupling body

**Coupling bodies with automatic gas cut-off valve**

EN 561 / ISO 7289




connection	inlet ⇄ outlet	order no.
<b>• probes</b>		
see SK100-2		
<b>• coupling bodies</b>		
for fuel gases:		
G 3/8 LH	MG ⇄ coupling body	150-015
for oxygen:		
G 1/4 RH	MG ⇄ coupling body	150-017
G 3/8 RH	MG ⇄ coupling body	150-018
for other gases:		
G 1/4 RH	MG ⇄ coupling body	150-019
G 3/8 RH	MG ⇄ coupling body	150-028

You can find our video and further information on WITT quick couplings at:

► [www.wittgas.com](http://www.wittgas.com)

14/09/2023

# 14. QUICK COUPLINGS

Keymark coupling		for outlet points		
		connection	inlet ↔ outlet	order no.
 <p>coupling body</p>	<b>• coupling bodies</b>			
	for fuel gases:			
	G 3/8 LH	MG ↔ coupling body	150-029	
 <p>keymark</p>	for other gases:			
	G 1/4 RH	MG ↔ coupling body	150-033	
		<b>• keymark</b>		
		<b>• coupling probes</b>		
 <p>coupling probes</p>	for fuel gases:			
	4.0 mm	probe ↔ nozzle	151-007	
	6.3 mm	probe ↔ nozzle	151-009	
	8.0 mm	probe ↔ nozzle	151-010	
	9.0 mm	probe ↔ nozzle	151-011	
	G 3/8 LH	probe ↔ AGS	151-048	
	for other gases:			
6.3 mm	probe ↔ nozzle	151-021		
G 1/4 RH	probe ↔ AGS	151-047		
	G 3/8 RH	probe ↔ AGS	151-046	

**Keymark couplings protect outlet points from unauthorised access: only the owner of the keymark is able to take gas from the outlet point**

EN 561 / ISO 7289

14/09/2023

“Which safety device at which point? An overview.


Find the right products for your welding application.

Download at:  
 ▶ [www.wittgas.com](http://www.wittgas.com)



# 15. NON-RETURN VALVES ULTRA

### Ultra 10



**Ultra Performance protection against gas return: compact, quiet, ideal for low pressure applications. Opening pressure approx. 4 mbar**

**Up to 16 bar / G 1/2"**

NV

DIN EN ISO 5175-2


also available in stainless steel, see p. 51

connection	inlet → outlet	order no.
G 1/2 RH	IG → IG	034-003
1/2" NPT	IG → IG	034-007

**design (standard):**

filter:	seal O-ring:	seal valve:	housing:
yes	NBR	CR	Brass

### Ultra 12

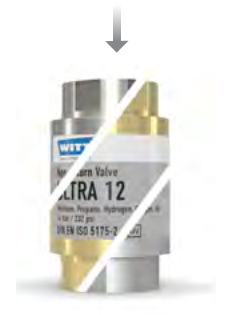

**Based on ULTRA 10 - your customised model: various combinations of housing and sealing materials, with or without filter**

**Up to 16 bar / G 1/2"**

NV

DIN EN ISO 5175-2


connection	inlet → outlet	order no.
G 1/2 RH	IG → IG	

**design (modular system):**

filter	seal O-ring	seal valve	housing	order no.
no	NBR	CR	Brass	034-001
yes	NBR	CR	Aluminum	034-005
yes	FPM	FKM	Brass	034-006

Other models and connection types on request

### Ultra 20



**Ultra Performance protection against gas return: compact, quiet, ideal for low pressure applications. Opening pressure approx. 4 mbar**

**Up to 16 bar / G 1", 1/2", 3/4"**

NV

DIN EN ISO 5175-2


also available in stainless steel, see p. 51

connection	inlet → outlet	order no.
G 1/2 RH	IG → IG	036-022
G 3/4 RH	IG → IG	036-014
G 1 RH	IG → IG	036-015
1/2" NPT	IG → IG	036-024
3/4" NPT	IG → IG	036-020
1" NPT	IG → IG	036-021

**design (standard):**

filter:	seal O-ring:	seal valve:	housing:
yes	NBR	CR	Brass

### Ultra 22



**Based on ULTRA 20 - your customised model: various combinations of housing and sealing materials, with or without filter**

**Up to 16 bar / G 1", 1/2"**

NV

DIN EN ISO 5175-2

connection	inlet → outlet	order no.
G 1 RH	IG → IG	

**design (modular system):**

filter	seal O-ring	seal valve	housing	order no.
no	EPDM	EPDM	Brass	036-001
no	NBR	CR	Brass	036-003
yes	NBR	CR	Aluminum	036-008
yes	ISOLAST	ISOLAST	Aluminum	036-009

connection	inlet → outlet	order no.
G 1/2 RH	IG → IG	

**design (modular system):**

filter	seal O-ring	seal valve	housing	order no.
yes	FPM	FPM	Brass	036-013

Other models and connection types on request

14/09/2023

FA = flame arrestor NV = non-return valve TV = temperature controlled cut-off valve PV = pressure controlled cut-off valve

Please specify gas, pressures, temperatures, flows and connections at time of enquiry and order. For some gases, special seals may be required. Special designs, higher flow capacities or different pressures on demand. Explanations of thread types, conversion of units of measurement see p. 84/85.

## “ULTRA: Ultra-high performance comes as standard

### ULTRA performance

New valve design - flow optimised  
Maximum flow, minimal nominal size

### ULTRA low opening pressure

From 4 mbar - ideal for low pressure applications  
When every mbar counts

### ULTRA compact

Small and lightweight  
Perfect for compact plant designs

### ULTRA silent

No fluttering - lowest noise emission  
Less wear - longer service life

### ULTRA flexible

Free combination of materials on customer request  
Exactly suitable for your requirements

### ULTRA safe

Reliably stops gas backflow and flashback

### Typical applications



Low pressure pipelines



Thermal processing plants



Hydrogen applications



Biogas plants

### Ultra 30



**Ultra Performance protection against gas return: compact, quiet, ideal for low pressure applications. Opening pressure approx. 5 mbar**

Up to 20 bar / G 1.1/2"

NV

DIN EN ISO 5175-2

also available in stainless steel, see p. 52

connection	inlet → outlet	order no.
G 1.1/2 RH	IG → IG	033-001
1.1/2" NPT	IG → IG	033-007
<b>design (standard):</b>		
<b>filter:</b> yes	<b>seal O-ring:</b> NBR	<b>seal valve:</b> CR
<b>housing:</b> Brass		

### Ultra 32



**Based on ULTRA 30 - your customised model: various combinations of housing and sealing materials, with or without filter**

Up to 20 bar / G 1.1/2"

NV


DIN EN ISO 5175-2

connection	inlet → outlet	order no.
G 1.1/2 RH	IG → IG	
<b>design (modular system):</b>		
<b>filter</b>	<b>seal O-ring</b>	<b>seal valve</b>
yes	EPDM	EPDM
yes	NBR	CR
		<b>housing</b>
		Brass
		Stainless Steel

Other models and connection types on request

# 15. NON-RETURN VALVES ULTRA

### Ultra 40



**Ultra Performance protection against gas return: compact, quiet, ideal for low pressure applications. Opening pressure approx. 5 mbar**

**Up to 20 bar / G 2.1/2"**

NV

DIN EN ISO 5175-2


also available in stainless steel, see p. 52

connection	inlet → outlet	order no.
G 2.1/2 RH	IG → IG	035-001
2.1/2" NPT	IG → IG	035-004

**design (standard):**

filter: yes	seal O-ring: NBR	seal valve: CR	housing: Brass
-------------	------------------	----------------	----------------

### Ultra 42



**Based on ULTRA 40 - your customised model: various combinations of housing and sealing materials, with or without filter**

**Up to 20 bar / G 2.1/2"**

NV

DIN EN ISO 5175-2

connection	inlet → outlet	order no.
G 2.1/2 RH	IG → IG	

**design (modular system):**

filter	seal O-ring	seal valve	housing	order no.
yes	FPM	FKM	Stainless Steel	035-007

Other models and connection types on request

14/09/2023

## “Does the product fit into your plant?”


You can now find out very easily.


Request a STEP file via the website.


In a short time you will receive it in your e-mail box and can comfortably check the installation possibilities in your CAD program.


[www.wittgas.com/downloads/step-files](http://www.wittgas.com/downloads/step-files)

# 15. NON-RETURN VALVES Standard

NV 654		connection	inlet → outlet	order no.
 <p>Up to 60 bar (O<sub>2</sub> up to 30 bar)</p> <p>Air max. 130 m<sup>3</sup>/h</p> <p><span>NV</span></p> <p>DIN EN ISO 5175-2</p> <p>also available in stainless steel, see p. 53</p>	G 1/8 RH	IG → AG	120003037	

NV 100		connection	inlet → outlet	order no.
 <p>Up to 25 bar</p> <p>Air max. 130 m<sup>3</sup>/h</p> <p><span>NV</span></p> <p>DIN EN ISO 5175-2</p> <p>also available in stainless steel, see p. 53</p>	G 1/8 RH	IG → IG	100145001	
	G 1/4 RH	IG → IG	100145002	
	G 3/8 RH	IG → IG	100145003	
	1/4" NPT	IG → IG	100145005	
	3/8" NPT	IG → IG	100145007	

NV 600H		connection	inlet → outlet	order no.
 <p>Up to 40 bar</p> <p><span>NV</span></p> <p>DIN 8521-2</p> <p>also available in stainless steel, see p. 53</p>	G 1/2 RH	IG → IG	037-042	
	G 3/4 RH	IG → IG	037-035	
	G 1 RH	IG → IG	037-039	
	1/2" NPT	IG → IG	037-085	
	1" NPT	IG → IG	037-082	

NV 70 / 70U		connection	inlet → outlet	order no.
 <p>Up to 16 bar</p> <p>Air max. 1,220 m<sup>3</sup>/h</p> <p><span>NV</span></p> <p>DIN EN ISO 5175-2</p> <p>pipeline fittings see p. 35</p>	<b>70</b>			
	G 3/4 RH	AGS → MG	123-009	
	G 1 RH	AGS → MG	123-012	
	G 1.1/4 RH	AGS → MG	123-014	
	G 1.1/2 RH	AGS → MG	123-015	
	<b>70U (reverse flow):</b>			
	G 3/4 RH	MG → AGS	123-016	
	G 1 RH	MG → AGS	123-018	
	G 1.1/4 RH	MG → AGS	123-056	
	G 1.1/2 RH	MG → AGS	123-045	

FA = flame arrestor NV = non-return valve TV = temperature controlled cut-off valve PV = pressure controlled cut-off valve

Please specify gas, pressures, temperatures, flows and connections at time of enquiry and order. For some gases, special seals may be required. Special designs, higher flow capacities or different pressures on demand. Explanations of thread types, conversion of units of measurement see p. 84/85.

# 15. NON-RETURN VALVES Standard

## NV 300



Up to 16 bar

Air max. 3,260 m<sup>3</sup>/h



DIN 8521-2

also available in stainless steel, see p. 53

connection	inlet → outlet	order no.
G 1 RH	IG → IG	300038002
G 1.1/4 RH	IG → IG	300038031
1" NPT	IG → IG	300038058
1.1/4" NPT	IG → IG	300038065
DN 32 / PN 40	loose flange (with O-ring)	300038A009

## NV 400



Up to 16 bar

Air max. 8,100 m<sup>3</sup>/h



DIN EN ISO 5175-2

also available in stainless steel, see p. 54

connection	inlet → outlet	order no.
G 1.1/2 RH	IG → IG	400038024
G 2 RH	IG → IG	400038008
1.1/2" NPT	IG → IG	400038062
2" NPT	IG → IG	400038045
DN 40 / PN 40	loose flange (with O-ring)	400038A005
DN 50 / PN 40	loose flange (with O-ring)	400038A006
DN 65 / PN 40	loose flange (with O-ring)	400038A007
DN 80 / PN 40	loose flange (with O-ring)	400038A008

## NV 400



**Non-return Valve NV 400 for up to 16 bar, completely with intermediate welding neck flange set for easy installation and removal**

Air max. 8,100 m<sup>3</sup>/h



DIN EN ISO 5175-2

also available in stainless steel, see p. 54

### intermediate flange version

connection	inlet → outlet	order no.
DN40	flange	400S-040MS
DN50	flange	400S-050MS

## NV 800



Up to 10 bar


Air max. 14,000 m<sup>3</sup>/h



DIN 8521-2

connection	inlet → outlet	order no.
DN 80 / PN 16	flange	080-001

# 15. NON-RETURN VALVES

NV 2000		connection	inlet → outlet	order no.
 <p><b>Up to 10 bar</b></p> <p><b>Air max. 26,800 m<sup>3</sup>/h</b></p> <p><b>NV</b></p> <p>DIN 8521-2</p> <p>to be mounted vertically in bottom-up flow direction</p>	DN 80 / PN 16	flange	2000119002	
	DN 100 / PN 16	flange	2000119003	
	DN 125 / PN 16	flange	2000119004	
	DN 150 / PN 16	flange	2000119006	
	DN 200 / PN 16	flange	2000119007	

14/09/2023


## “Do you already know our practical examples?”


In the menu item Applications/Practical examples you will find numerous application reports from a wide range of industries.


Perhaps your topic is also included?


Read for example:


**Non-return Valves in Heat Treatment**




SV 805																
 <p>Option: adapter for ventilation pipe</p>	<p><b>For the safe relief of over-pressure (gases and vapours) from receivers, piping and other process units up to 45 bar</b></p> <ul style="list-style-type: none"> <li>- CE 0045</li> <li>- certified by TÜV as Category IV (Modules B &amp; D) safety devices as per European Pressure Equipment Directive (PED) 2014/68/EU</li> <li>- also available: „smart-option“ for connected manufacturing</li> <li>- also available in stainless steel, see p. 55</li> </ul>															
	<table border="1"> <thead> <tr> <th>SV 805</th> <th>order no.</th> </tr> </thead> <tbody> <tr> <td>pressure settings: &gt; 0.5 ≤ 45 bar</td> <td>200-___</td> </tr> <tr> <td>various connections available</td> <td>(in accordance with pressure-setting)</td> </tr> <tr> <td>special sealing compound, surcharge</td> <td></td> </tr> <tr> <td colspan="2"><b>Adapter to connect venting pipes and safety relief valve SV 805, including o-ring</b></td> </tr> <tr> <td>M 24x1 AG → 1/2" NPT IG</td> <td>801413600K</td> </tr> <tr> <td>M 24x1 AG → G 1/2 AGS</td> <td>802069800K</td> </tr> <tr> <td>M 24x1 AG → 3/4" NPT IG</td> <td>802124900K</td> </tr> </tbody> </table>	SV 805	order no.	pressure settings: > 0.5 ≤ 45 bar	200-___	various connections available	(in accordance with pressure-setting)	special sealing compound, surcharge		<b>Adapter to connect venting pipes and safety relief valve SV 805, including o-ring</b>		M 24x1 AG → 1/2" NPT IG	801413600K	M 24x1 AG → G 1/2 AGS	802069800K	M 24x1 AG → 3/4" NPT IG
SV 805	order no.															
pressure settings: > 0.5 ≤ 45 bar	200-___															
various connections available	(in accordance with pressure-setting)															
special sealing compound, surcharge																
<b>Adapter to connect venting pipes and safety relief valve SV 805, including o-ring</b>																
M 24x1 AG → 1/2" NPT IG	801413600K															
M 24x1 AG → G 1/2 AGS	802069800K															
M 24x1 AG → 3/4" NPT IG	802124900K															


SV 805A										
	<p><b>For the safe relief of over-pressure (gases and vapours) from receivers, piping and other process units - manual ventilation- up to 45 bar</b></p> <ul style="list-style-type: none"> <li>- CE 0045</li> <li>- certified by TÜV as Category IV (Modules B &amp; D) safety devices as per European Pressure Equipment Directive (PED) 2014/68/EU</li> <li>- also available in stainless steel, see p. 55</li> </ul>									
	<table border="1"> <thead> <tr> <th>SV 805A</th> <th>order no.</th> </tr> </thead> <tbody> <tr> <td>with venting tool for manual ventilation, outlet: 1/2 NPT IG</td> <td></td> </tr> <tr> <td>pressure settings: &gt; 0.5 ≤ 45 bar</td> <td>200A-___</td> </tr> <tr> <td>various connections available</td> <td>(in accordance with pressure-setting)</td> </tr> <tr> <td>special sealing compound, surcharge</td> <td></td> </tr> </tbody> </table>	SV 805A	order no.	with venting tool for manual ventilation, outlet: 1/2 NPT IG		pressure settings: > 0.5 ≤ 45 bar	200A-___	various connections available	(in accordance with pressure-setting)	special sealing compound, surcharge
SV 805A	order no.									
with venting tool for manual ventilation, outlet: 1/2 NPT IG										
pressure settings: > 0.5 ≤ 45 bar	200A-___									
various connections available	(in accordance with pressure-setting)									
special sealing compound, surcharge										


SV 805 Smart										
	<p><b>Safety relief valve 805 including Smart function:</b></p> <ul style="list-style-type: none"> <li>- optical signal (red/green diode) directly on the valve, indicates the open or closed condition</li> <li>- digital signal through an NPN / PNP open collector signal</li> <li>- also available in stainless steel, see p. 55</li> </ul>									
	<table border="1"> <thead> <tr> <th>SV 805 Smart</th> <th>order no.</th> </tr> </thead> <tbody> <tr> <td>pressure settings: &gt; 0.5 ≤ 45 bar</td> <td>200SMART-___</td> </tr> <tr> <td>various connections available</td> <td>(in accordance with pressure-setting)</td> </tr> <tr> <td>signal cable with angled plug, 2 m</td> <td>850022900</td> </tr> <tr> <td>special sealing compound, surcharge</td> <td></td> </tr> </tbody> </table>	SV 805 Smart	order no.	pressure settings: > 0.5 ≤ 45 bar	200SMART-___	various connections available	(in accordance with pressure-setting)	signal cable with angled plug, 2 m	850022900	special sealing compound, surcharge
SV 805 Smart	order no.									
pressure settings: > 0.5 ≤ 45 bar	200SMART-___									
various connections available	(in accordance with pressure-setting)									
signal cable with angled plug, 2 m	850022900									
special sealing compound, surcharge										

AV 815																																				
	<p><b>Safety relief valve for acetylene - only to be used in connection with manifold pressure regulators conform to DIN EN ISO 7291</b></p>																																			
	<table border="1"> <thead> <tr> <th>outlet pressure</th> <th>blow-off flow</th> <th>opening pressure</th> <th>order no.</th> </tr> </thead> <tbody> <tr> <td>0.6 bar</td> <td>50 m³/h</td> <td>0.75 bar</td> <td>200-277</td> </tr> <tr> <td>0.7 bar</td> <td>60 m³/h</td> <td>0.95 bar</td> <td>200-353</td> </tr> <tr> <td>0.8 bar</td> <td>65 m³/h</td> <td>1.25 bar</td> <td>200-354</td> </tr> <tr> <td>0.9 bar</td> <td>70 m³/h</td> <td>1.25 bar</td> <td>200-355</td> </tr> <tr> <td>1.1 bar</td> <td>72 m³/h</td> <td>1.55 bar</td> <td>200-356</td> </tr> <tr> <td>1.5 bar</td> <td>75 m³/h</td> <td>1.90 bar</td> <td>200-278</td> </tr> <tr> <td>2.0 bar</td> <td>90 m³/h</td> <td>2.50 bar</td> <td>200-279</td> </tr> <tr> <td colspan="4">connections: G 1/2 AG → M24 x 1 IG</td> </tr> </tbody> </table>	outlet pressure	blow-off flow	opening pressure	order no.	0.6 bar	50 m³/h	0.75 bar	200-277	0.7 bar	60 m³/h	0.95 bar	200-353	0.8 bar	65 m³/h	1.25 bar	200-354	0.9 bar	70 m³/h	1.25 bar	200-355	1.1 bar	72 m³/h	1.55 bar	200-356	1.5 bar	75 m³/h	1.90 bar	200-278	2.0 bar	90 m³/h	2.50 bar	200-279	connections: G 1/2 AG → M24 x 1 IG		
outlet pressure	blow-off flow	opening pressure	order no.																																	
0.6 bar	50 m³/h	0.75 bar	200-277																																	
0.7 bar	60 m³/h	0.95 bar	200-353																																	
0.8 bar	65 m³/h	1.25 bar	200-354																																	
0.9 bar	70 m³/h	1.25 bar	200-355																																	
1.1 bar	72 m³/h	1.55 bar	200-356																																	
1.5 bar	75 m³/h	1.90 bar	200-278																																	
2.0 bar	90 m³/h	2.50 bar	200-279																																	
connections: G 1/2 AG → M24 x 1 IG																																				

## 16. SAFETY RELIEF VALVES

AV 319			
	<p><b>For blowing-off gases and vapours from receivers, pipelines and other parts of the installation</b></p> <p>brass</p> <p>also available in stainless steel, see p. 56</p>	<p><b>pressure settings</b></p> <p>10 - 80 mbar</p>	<p><b>order no.</b></p> <p>120-___</p> <p>(in accordance with pressure-setting)</p>
		<p>individual TÜV approval for the set opening pressure</p>	<p>connections:</p> <p>G 1/8 RH AG-IG</p>

AV 619			
	<p><b>For the safe relief of overpressure (gases and vapours) from receivers, piping and other process units</b></p> <p>also available in stainless steel, see p. 56</p>	<p><b>pressure settings</b></p> <p>5 - 500 mbar</p>	<p><b>order no.</b></p> <p>300-___</p> <p>(in accordance with pressure-setting)</p>
		<p>individual TÜV approval for the set opening pressure</p>	<p>connections:</p> <p>G1/2, G3/4, G1 RH IG</p> <p>NPT 1/2", 3/4", 1" IG</p> <p>flange DN 25 according to DIN 28403</p>

AV 919			
	<p><b>For the safe relief of overpressure (gases and vapours) from receivers, piping and other process units</b></p> <p>aluminum anodised</p> <p>also available in stainless steel, see p. 56</p>	<p><b>pressure settings</b></p> <p>5 - 500 mbar</p>	<p><b>order no.</b></p> <p>400-___</p> <p>(in accordance with pressure-setting)</p>
		<p>individual TÜV approval for the set opening pressure</p>	<p>connections:</p> <p>G2 RH IG</p> <p>NPT 2" IG</p> <p>flange DN 40 according to DIN 28403</p>

14/09/2023

### “The most effective protection against overpressure from 5 mbar to 45 bar

For operators of pressurised systems and components they are the last line of defense before excess pressure becomes a disaster: Safety relief valves.

Safety relief valves from WITT provide effective protection against overpressure by blowing off vapours and gases from pipes, pressure vessels and system components.

Download brochure „Safety Relief Valves“ at [www.wittgas.com](http://www.wittgas.com)



# 17. STAINLESS STEEL DEVICES: FLASHBACK ARRESTORS

## Series RF53N-ES



**F53N-ES** (for very low working pressure upstream or downstream of the analysis device): air max. 225 m<sup>3</sup>/h  FA  TV

**RF53N-ES:** air max. 180 m<sup>3</sup>/h  FA  NV  TV

**RF53N/H-ES:** air max. 46 m<sup>3</sup>/h  FA  NV  TV

DIN EN ISO 5175-1

## flashback arrestor

connection	inlet → outlet	order no.
<b>F53N-ES</b>		
for fuel gases (e.g. hydrogen up to 3 bar) or oxygen:		
1/4" NPT	IG → IG	145-227
<b>F53N/H-ES</b>		
for fuel gases (e.g. hydrogen up to 10 bar):		
1/4" NPT	IG → IG	145-106
<b>RF53N-ES</b>		
for fuel gases (e.g. hydrogen up to 3 bar) or oxygen:		
1/4" NPT	IG → IG	145-262
3/8" NPT	IG → IG	145-024
3/8 LH	MG → AGS	145-246
7/8" - 14 UNF VCR	AG → AG	145-142
<b>RF53N/H-ES</b>		
for fuel gases (e.g. hydrogen up to 10 bar):		
1/4" NPT	IG → IG	145-107
3/8" NPT	IG → IG	145-121
3/8 LH	MG → AGS	145-232

## Series RF85-10N-ES



**F85-10N-ES** (for very low working pressure upstream or downstream of the analysis device): air max. 390 m<sup>3</sup>/h  FA  TV

**RF85-10N-ES:** air max. 315 m<sup>3</sup>/h  FA  NV  TV

**RF85-10N/H-ES:** air max. 82 m<sup>3</sup>/h  FA  NV  TV

DIN EN ISO 5175-1

## flashback arrestor

connection	inlet → outlet	order no.
<b>F85-10N-ES</b>		
for fuel gases (e.g. hydrogen up to 4 bar) or oxygen:		
1/4" NPT	IG → IG	143-149
<b>F85-10N/H-ES</b>		
for fuel gases (e.g. hydrogen up to 10 bar):		
1/4" NPT	IG → IG	143-100
<b>RF85-10N-ES</b>		
for fuel gases (e.g. hydrogen up to 4 bar) or oxygen:		
1/4" NPT	IG → IG	143-061
3/8" NPT	IG → IG	143-119
9/16" - 18 UNF VCR	AG → AG	143-163
7/8" - 14 UNF VCR	AG → AG	143-134
3/8 LH	MG → AGS	143-054
<b>RF85-10N/H-ES</b>		
for fuel gases (e.g. hydrogen up to 10 bar):		
1/4" NPT	IG → IG	143-077
3/8" NPT	IG → IG	143-087
7/8" - 14 UNF VCR	AG → AG	143-076
3/8 LH	MG → AGS	143-078

## RF85-20N-ES



**Air max. 360 m<sup>3</sup>/h**

FA  NV  TV


DIN EN ISO 5175-1

## flashback arrestor

connection	inlet → outlet	order no.
for fuel gases (e.g. acetylene up to 2 bar) or oxygen:		
1/2" NPT	IG → IG	149-009
3/4" NPT	IG → IG	149-031
1" NPT	IG → IG	149-029

# 17. STAINLESS STEEL DEVICES : FLASHBACK ARRESTORS

**Series RF85-30N-ES** flashback arrester




**RF85-30N-ES:**  
Air max. 1,150 m<sup>3</sup>/h  
[FA] [NV] [TV]

**RF85-30N/H-ES:**  
Air max. 310 m<sup>3</sup>/h  
[FA] [NV] [TV]

DIN EN ISO 5175-1

connection	inlet → outlet	order no.
<b>RF85-30N-ES</b>		
for fuel gases except acetylene (e.g. hydrogen up to 4 bar) or oxygen:		
3/4" NPT	IG → IG	147-071
1" NPT	IG → IG	147-092
for acetylene (EPDM sealing ring (TV)):		
3/4" NPT	IG → IG	147-122
1" NPT	IG → IG	147-125
G 1.1/2 RH	IG → IG	147-124
<b>RF85-30N/H-ES</b>		
for fuel gases (e.g. hydrogen up to 11 bar):		
1 NPT	IG → IG	147-047
3/4" NPT	IG → IG	147-039

**Safety Group 645** RF85-30N-ES (2- or 4-fold)



**Parallel connection from 2 or 4 flashback arrestors model RF85-30-ES, ideal for high consumption and high flows**


**Acetylene max. 392 m<sup>3</sup>/h**  
**Fuel gases max. 2740 m<sup>3</sup>/h**  
**Oxygen max. 1850 m<sup>3</sup>/h**

DIN EN ISO 5175-1

[FA] [NV] [TV]

connection	inlet → outlet	order no.
for fuel gases or oxygen:		
DN 50 (2fold)	flange DIN 2633	182-045
DN 50 (4fold)	flange DIN 2633	182-042

**F100N-ES** flashback arrester




Air max. 32 m<sup>3</sup>/h

[FA] [TV]

DIN EN ISO 5175-1

connection	inlet → outlet	order no.
for hydrogen (up to 17 bar):		
1/2" NPT	IG → IG	210000012
7/8" - 14 UNF VCR	AG → AG	210000019

**F53** detonation/deflagration flame arrester and volume protection



**As flame arrester ideal for mounting in pipelines up to DN 10 and to protect appliances, e.g. gas analysers.**

**The volume protection device is ideal for protection of plants and equipment with a volume of max. 4.6 l.**

[FA]

DIN EN ISO 16852


connection	inlet → outlet	order no.
detonation and deflagration flame arrester F53:		
G 1/4"	IG → IG	145-258
detonation and deflagration volume protection device F53:		
G 1/4" - M12	IG → AG	145-250


14/09/2023


[FA] = flame arrester [NV] = non-return valve [TV] = temperature controlled cut-off valve [PV] = pressure controlled cut-off valve


Please specify gas, pressures, temperatures, flows and connections at time of enquiry and order. For some gases, special seals may be required. Special designs, higher flow capacities or different pressures on demand. Explanations of thread types, conversion of units of measurement see p. 84/85.

# 18. STAINLESS STEEL DEVICES: NON-RETURN VALVES

Ultra 10		non-return valves "ULTRA"		
	<p><b>Ultra Performance protection against gas return: compact, quiet, ideal for low pressure applications. Opening pressure approx. 4 mbar</b></p> <p><b>Up to 16 bar / G 1/2"</b></p> <p><input type="checkbox"/> NV</p> <p>DIN EN ISO 5175-2</p>	<b>connection</b>	<b>inlet → outlet</b>	<b>order no.</b>
		G 1/2 RH 1/2" NPT	IG → IG IG → IG	034-004 034-008
		<b>design (standard):</b>		
		<b>filter:</b> yes	<b>seal O-ring:</b> NBR	<b>seal valve:</b> CR
		<b>housing:</b> Stainless Steel		

Ultra 12		non-return valves "ULTRA"		
	<p><b>Based on ULTRA 10 - your customised model: various combinations of housing and sealing materials, with or without filter</b></p> <p><b>Up to 16 bar / G 1/2"</b></p> <p><input type="checkbox"/> NV</p> <p>DIN EN ISO 5175-2</p>	<b>connection</b>	<b>inlet → outlet</b>	
		G 1/2 RH	IG → IG	
		<b>design (modular system):</b>		
		<b>filter</b>	<b>seal O-ring</b>	<b>seal valve</b>
		no	EPDM	EPDM
		<b>housing</b>		
		Stainless Steel		
		Other models and connection types on request		


Ultra 20		non-return valves "ULTRA"		
	<p><b>Ultra Performance protection against gas return: compact, quiet, ideal for low pressure applications. Opening pressure approx. 4 mbar</b></p> <p><b>Up to 16 bar / G 1", 1 1/2", 3/4"</b></p> <p><input type="checkbox"/> NV</p> <p>DIN EN ISO 5175-2</p>	<b>connection</b>	<b>inlet → outlet</b>	<b>order no.</b>
		G 1/2 RH G 3/4 RH G 1 RH 1/2" NPT 3/4" NPT 1" NPT	IG → IG IG → IG IG → IG IG → IG IG → IG IG → IG	036-023 036-016 036-017 036-025 036-018 036-019
		<b>design (standard):</b>		
		<b>filter:</b> yes	<b>seal O-ring:</b> NBR	<b>seal valve:</b> CR
		<b>housing:</b> Stainless Steel		


Ultra 22		non-return valves "ULTRA"		
	<p><b>Based on ULTRA 10 - your customised model: various combinations of housing and sealing materials, with or without filter</b></p> <p><b>Up to 16 bar / G 1/2"</b></p> <p><input type="checkbox"/> NV</p> <p>DIN EN ISO 5175-2</p>	<b>connection</b>	<b>inlet → outlet</b>	
		G 1/2 RH	IG → IG	
		<b>design (modular system):</b>		
		<b>filter</b>	<b>seal O-ring</b>	<b>seal valve</b>
		no	EPDM	EPDM
		<b>housing</b>		
		Stainless Steel		
		Other models and connection types on request		


FA = flame arrestor     NV = non-return valve     TV = temperature controlled cut-off valve     PV = pressure controlled cut-off valve


Please specify gas, pressures, temperatures, flows and connections at time of enquiry and order. For some gases, special seals may be required. Special designs, higher flow capacities or different pressures on demand. Explanations of thread types, conversion of units of measurement see p. 84/85.

# 18. STAINLESS STEEL DEVICES: NON-RETURN VALVES

Ultra 30		non-return valves "ULTRA"		
	<p><b>Ultra Performance protection against gas return: compact, quiet, ideal for low pressure applications. Opening pressure approx. 10 mbar</b></p> <p><b>Up to 20 bar / G 1.1/2"</b></p> <p><input type="checkbox"/> NV</p> <p>DIN EN ISO 5175-2</p>	<b>connection</b>	<b>inlet → outlet</b>	<b>order no.</b>
		G 1.1/2 RH	IG → IG	033-006
		1.1/2" NPT	IG → IG	033-008
		<b>design (standard):</b>		
		<b>filter:</b> yes	<b>seal O-ring:</b> NBR	<b>seal valve:</b> CR
				<b>housing:</b> Stainless Steel

Ultra 32		non-return valves "ULTRA"		
	<p><b>Based on ULTRA 30 - your customised model: various combinations of housing and sealing materials, with or without filter</b></p> <p><b>Up to 20 bar / G 1.1/2"</b></p> <p><input type="checkbox"/> NV</p> <p>DIN EN ISO 5175-2</p>	<b>connection</b>	<b>inlet → outlet</b>	<b>order no.</b>
		G 1.1/2 RH	IG → IG	
		<b>design (modular system):</b>		
		<b>filter</b>	<b>seal O-ring</b>	<b>seal valve</b>
		yes	NBR	CR
				<b>housing</b>
				Stainless Steel 033-010
		Other models and connection types on request		

Ultra 40		non-return valves "ULTRA"		
	<p><b>Ultra Performance protection against gas return: compact, quiet, ideal for low pressure applications. Opening pressure approx. 10 mbar</b></p> <p><b>Up to 20 bar / G 2.1/2"</b></p> <p><input type="checkbox"/> NV</p> <p>DIN EN ISO 5175-2</p>	<b>connection</b>	<b>inlet → outlet</b>	<b>order no.</b>
		G 2.1/2 RH	IG → IG	035-006
		2.1/2" NPT	IG → IG	035-005
		<b>design (standard):</b>		
		<b>filter:</b> yes	<b>seal O-ring:</b> NBR	<b>seal valve:</b> CR
				<b>housing:</b> Stainless Steel


Ultra 42		non-return valves "ULTRA"		
	<p><b>Based on ULTRA 40 - your customised model: various combinations of housing and sealing materials, with or without filter</b></p> <p><b>Up to 20 bar / G 2.1/2"</b></p> <p><input type="checkbox"/> NV</p> <p>DIN EN ISO 5175-2</p>	<b>connection</b>	<b>inlet → outlet</b>	<b>order no.</b>
		G 2.1/2 RH	IG → IG	
		<b>design (modular system):</b>		
		<b>filter</b>	<b>seal O-ring</b>	<b>seal valve</b>
		yes	FPM	FKM
				<b>housing</b>
				Stainless Steel 035-007
		Other models and connection types on request		


14/09/2023


FA = flame arrestor     NV = non-return valve     TV = temperature controlled cut-off valve     PV = pressure controlled cut-off valve


Please specify gas, pressures, temperatures, flows and connections at time of enquiry and order. For some gases, special seals may be required. Special designs, higher flow capacities or different pressures on demand. Explanations of thread types, conversion of units of measurement see p. 84/85.

# 18. STAINLESS STEEL DEVICES: NON-RETURN VALVES

654-ES		non-return valves "standard"		
 <p>Up to 60 bar (O<sub>2</sub> up to 30 bar)</p> <p>Air max. 130 m<sup>3</sup>/h</p> <p><input type="checkbox"/> NV</p> <p>DIN EN ISO 5175-2</p>	<b>connection</b>	<b>inlet → outlet</b>	<b>order no.</b>	
	G 1/8 RH	IG → AG	120.403033	

NV 100		non-return valves "standard"		
 <p>Up to 25 bar</p> <p>Air max. 130 m<sup>3</sup>/h</p> <p><input type="checkbox"/> NV</p> <p>DIN EN ISO 5175-2</p>	<b>connection</b>	<b>inlet → outlet</b>	<b>order no.</b>	
	G 1/4 RH	IG → IG	145GRS-009	

NV 600H		non-return valves "standard"		
 <p>Up to 40 bar</p> <p>DIN 8521-2</p> <p><input type="checkbox"/> NV</p>	<b>connection</b>	<b>inlet → outlet</b>	<b>order no.</b>	
	G 1/2 RH	IG → IG	037-064	
	G 3/4 RH	IG → IG	037-065	
	G 1 RH	IG → IG	037-048	
	1" NPT	IG → IG	037-084	


NV 300		non-return valves "standard"		
 <p>Up to 16 bar</p> <p>Air max. 3.260 m<sup>3</sup>/h</p> <p><input type="checkbox"/> NV</p> <p>DIN 8521-2</p>	<b>connection</b>	<b>inlet → outlet</b>	<b>order no.</b>	
	G 1 RH	IG → IG	038-064	
	G 1.1/4 RH	IG → IG	038-072	
	1.1/4" NPT	IG → IG	038-061	


14/09/2023

FA = flame arrestor  NV = non-return valve  TV = temperature controlled cut-off valve  PV = pressure controlled cut-off valve

Please specify gas, pressures, temperatures, flows and connections at time of enquiry and order. For some gases, special seals may be required. Special designs, higher flow capacities or different pressures on demand. Explanations of thread types, conversion of units of measurement see p. 84/85.


# 18. STAINLESS STEEL DEVICES: NON-RETURN VALVES


NV 400		non-return valves "standard"		
 <p>NV400 Intermediate flange version</p>	<p><b>Up to 16 bar</b></p> <p><b>Air max. 8.100 m<sup>3</sup>/h</b></p> <p><b>NV</b></p> <p>DIN EN ISO 5175-2</p> <p>also available as intermediate flange version, completely with intermediate welding neck flange set for easy installation and removal</p>	<b>connection</b>	<b>inlet → outlet</b>	<b>order no.</b>
		G 1.1/2 RH	IG → IG	038-014
		G 2 RH	IG → IG	038-022
		intermediate flange version:		
		DN40	flange	038S-040ES
		DN50	flange	038S-050ES


NV800-ES		non-return valves "standard"		
	<p><b>Up to 300 bar</b></p>	<b>connection</b>	<b>inlet → outlet</b>	<b>order no.</b>
		1/4" NPT	AG → AG	311-002


**FA** = flame arrestor    **NV** = non-return valve    **TV** = temperature controlled cut-off valve    **PV** = pressure controlled cut-off valve

Please specify gas, pressures, temperatures, flows and connections at time of enquiry and order. For some gases, special seals may be required. Special designs, higher flow capacities or different pressures on demand. Explanations of thread types, conversion of units of measurement see p. 84/85.

SV 805-ES		safety relief valve	
 <p>Option: adapter for ventilation pipe</p>	<p><b>For the safe relief of overpressure (gases and vapours) from receivers, piping and other process units</b></p> <p>up to 45 bar</p> <p>optional: adapter for ventilation pipe</p> <p><b>CE0045</b></p>	<p><b>SV 805-ES</b> <span style="float: right;"><b>order no.</b></span></p> <p>pressure settings:</p> <p>&gt; 0.5 ≤ 45 bar <span style="float: right;">200-___</span></p> <p>with standard connection, stainless steel 1.4541</p> <p>with standard connection, stainless steel 316L/1.4404</p> <p>with VCR connection, stainless steel 1.4541</p> <p>with VCR connection, stainless steel 316L/1.4404</p>	
		<p>special sealing compound, surcharge</p> <p><b>Adapter to connect venting pipes to SV 805-ES</b></p> <p>connections M 24x1 AG → 1/2" NPT IG, st. steel 1.4541 <span style="float: right;">801727800K</span></p> <p>connections M 24x1 AG → 1/2" NPT VCR AG, st. steel 1.4404 <span style="float: right;">801693000K</span></p>	

SV 805A-ES		safety relief valve	
	<p><b>For the safe relief of overpressure (gases and vapours) from receivers, piping and other process units</b></p> <p>- manual ventilation -</p> <p>up to 45 bar</p> <p><b>CE0045</b></p>	<p><b>SV 805A-ES</b> <span style="float: right;"><b>order no.</b></span></p> <p>with venting tool for manual ventilation, outlet: 1/2 NPT IG</p> <p>pressure settings:</p> <p>&gt; 0.5 ≤ 45 bar <span style="float: right;">200A-___</span></p> <p>with standard connection, stainless steel 1.4541</p> <p>with VCR connection, stainless steel 1.4541</p>	
		<p>special sealing compound, surcharge</p>	


SV 805 Smart		safety relief valve	
	<p><b>Safety relief valve 805 including Smart function:</b></p> <p>- optical signal (red/green diode) directly on the valve, indicates the open or closed condition</p> <p>- digital signal through an NPN / PNP open collector signal</p>	<p><b>SV 805 Smart</b> <span style="float: right;"><b>order no.</b></span></p> <p>pressure settings: &gt; 0.5 ≤ 45 bar <span style="float: right;">200SMART-___</span></p> <p>with standard connections, in stainless steel 316L/1.4404</p> <p>with VCR connection, in stainless steel 316L/1.4404</p>	
		<p>signal cable with angled plug, 2 m <span style="float: right;">850022900</span></p> <p>special sealing compound, surcharge</p> <p><b>Adapter to connect venting pipes to SV 805-ES</b></p> <p>connections M 24x1 AG → 1/2" NPT VCR AG, st. steel 1.4404 <span style="float: right;">801693000K</span></p>	


SV 811L		safety relief valve	
	<p><b>Spring loaded, direct acting pressure relief valve for hydrogen-powered motor vehicles in accordance with the European regulation (EC) No. 79/2009, as implemented by regulation (EC) No. 406/2010</b></p> <p>up to 45 bar</p>	<p><b>pressure settings</b> <span style="float: right;"><b>order no.</b></span></p> <p>&gt; 4.5 - 45 bar <span style="float: right;">200AU-L-___</span></p> <p>(in accordance with pressure-setting)</p>	
		<p>adapter for the connection to ventilation pipe at the outlet</p> <p>diff. connections</p>	


14/09/2023

[FA] = flame arrestor [NV] = non-return valve [TV] = temperature controlled cut-off valve [PV] = pressure controlled cut-off valve

Please specify gas, pressures, temperatures, flows and connections at time of enquiry and order. For some gases, special seals may be required. Special designs, higher flow capacities or different pressures on demand. Explanations of thread types, conversion of units of measurement see p. 84/85.

AV 319-ES		safety relief valve	
	<p><b>For the safe relief of overpressure (gases and vapours) from receivers, piping and other process units</b></p>	<b>pressure settings</b>	<b>order no.</b>
		10 - 80 mbar	120-___ (depending on pressure-setting)
		individual TÜV approval for the set opening pressure	
		connections: G 1/8 RH IG	

AV 619-ES		safety relief valve	
	<p><b>For the safe relief of overpressure (gases and vapours) from receivers, piping and other process units</b></p> <p>up to 500 mbar</p>	<b>pressure settings</b>	<b>order no.</b>
		5 - 500 mbar	300-___ (depending on pressure-setting)
		individual TÜV approval for the set opening pressure	
		connections: G1/2, G3/4, G1 RH IG      IG → IG 1/2", 3/4", 1" NPT      IG → IG flange DN 25 according to DIN 28403	

AV 919-ES		safety relief valve	
	<p><b>For the safe relief of overpressure (gases and vapours) from receivers, piping and other process units</b></p> <p>up to 500 mbar</p>	<b>pressure settings</b>	<b>order no.</b>
		5 - 500 mbar	400-___ (depending on pressure-setting)
		individual TÜV approval for the set opening pressure	
		connections: G2 RH IG NPT 2" IG flange DN 40 according to DIN 28403	

14/09/2023



## 20. PRESSURE REGULATORS

### Pressure regulator MINI



**Compact pressure regulator for precise control of low flow rates**

- connection G 1/8 IG
- ideal for Oxygen, Argon, Hydrogen, Helium, CO<sub>2</sub>, pressurised air etc.

model	outlet pressure	order no.
MINI-3, reversible	0.5-3 bar	277-003G
MINI-3, non-reversible	0.5-3 bar	277-006G
MINI-10, reversible	0.5-10 bar	277-002G
MINI-10, non-reversible	0.5-10 bar	277-005G
MINI-16, reversible	0.5-16 bar	277-001G
MINI-16, non-reversible	0.5-16 bar	277-004G

### Pressure regulator



**To be connected directly to the outlet point**

- displays pressure and flow via manometer and/or variable area flow meter
- inlet MG, outlet AGS

for outlet points

connections	manometer display	order no.
G 3/8 LH → G 3/8 LH	acetylene 0-1.5 bar	044112900
G 3/8 RH → G 1/4 RH	oxygen 0-10 bar	044226300
G 3/8 LH → G 3/8 LH	fuel gas 0-10 bar	044315000
G 3/8 RH → G 1/4 RH	nitrogen/air 0-10 bar	044526000
<b>flow display (manometer)</b>		
<b>argon, mixed gases and CO<sub>2</sub></b>		
G 3/8 RH → G 1/4 RH	0 - 30 l/min	044524100
<b>flow display (variable area flow meter)</b>		
<b>argon, mixed gases and CO<sub>2</sub></b>		
G 3/8 RH → G 1/4 RH	0 - 30 l/min	044524000

### Pressure regulator




**To be connected directly to the cylinder (200 bar), single-level**

- displays pressure and flow via manometer and/or variable area flow meter
- inlet DIN 477, outlet AGS

for cylinders

connections	manometer display	order no.
clamp → G 3/8 LH	acetylene 0-1.5 bar	044113400
DIN 477 → G 1/4 RH	oxygen 0-10 bar	044227500
DIN 477 → G 1/4 RH	nitrogen 0-10 bar	044525500
DIN 477 → G 1/4 RH	argon or CO <sub>2</sub> 0-10 bar	044525600
<b>flow display (manometer)</b>		
<b>argon, mixed gases and CO<sub>2</sub></b>		
DIN 477 → G 1/4 RH	0 - 30 l/min	044525700
<b>flow display (variable area flow meter)</b>		
<b>argon, mixed gases and CO<sub>2</sub></b>		
DIN 477 → G 1/4 RH	0 - 30 l/min	044525800

## 20. DOME PRESSURE REGULATORS - acetylene

ADR 75		manifold pressure regulator for acetylene			
	<p><b>Powerful dome pressure regulator for acetylene for the regulation of medium flows on manifolds and bundles</b></p> <ul style="list-style-type: none"> <li>optimal emptying of the bundle because of very low pressure difference</li> <li>extremely stable outlet pressure</li> <li>flow capacity up to 75 m<sup>3</sup>/h</li> </ul>	<b>connections</b>	<b>inlet pressure</b>	<b>outlet pressure</b>	<b>order no.</b>
		DN 25 (DIN 3861) → flange DN 50/PN 40 (DIN 2656)	25 bar	1.5 bar	210-018
		<b>connections</b>	<b>inlet pressure</b>	<b>outlet pressure</b>	<b>order no.</b>
		DN 25 (DIN 3861) → flange DN 50/PN 40 (DIN 2656)	25 bar	1.5 bar	210-002
		special edition up to 2 bar outlet pressure available (on demand)			
		<b>connections</b>	<b>inlet pressure</b>	<b>outlet pressure</b>	<b>order no.</b>
		DN 25 (DIN 3861) → flange DN 50/PN 40 (DIN 2656)	25 bar	1.5 bar	210-010
		Features - see ADR150, except: no pilot gas required			

14/09/2023

### “NEW: ADR 75, our high quality acetylene pressure regulator for medium flow rates

The powerful ADR 75 was developed as a main control pressure regulator in accordance with DIN EN ISO 7291 and has successfully passed the type examination by BAM. The ADR 75 thus also complies with the design criteria of TRGS 407 Annex 4 Acetylene.

Thanks to the low required pressure difference from static to dynamic state, the back pressure of the ADR 75 is as close as possible to 1.5 bar - ideal e.g. for heat treatment according to the Bodycote™ process, special glass forming and maximum bundle emptying.



## Dome Pressure Regulators

### series 737LE



737LE



737LE-ES



737LE/S



737LE/S-ES

BRASS

STAINLESS STEEL

**connections**    **max. inlet pressure\***    **outlet pressure**    **order no.**

**model 737LE (brass), without pilot pressure regulator**

G 3/4" IG    60 bar    0.5-10 bar    278-091

**model 737LE/S (brass), set**

G 3/4" IG    60 bar    0.5-10 bar    292-0006

3/4" NPT IG    60 bar    0.5-10 bar    292-0072

**model 737LE-ES (stainless steel), without pilot pressure regulator**

G 3/4" IG    60 bar    0.5-10 bar    278-108

**model 737LE/S-ES (stainless steel), set**

G 3/4" IG    60 bar    0.5-10 bar    292-0046

3/4" NPT IG    60 bar    0.5-10 bar    292-0096

replacement filter Stainless steel (1.4301)100 µm    956.504300

### series 737LE-HD (high pressure model)



737LE-HD



737LE-HD-ES



737LE-HD/S



737LE-HD/S-ES

BRASS

STAINLESS STEEL

**model 737LE-HD (brass), without pilot pressure regulator**

G 3/4" IG - 1" IG    300 bar    0.5-60 bar    278-116

**model 737LE-HD/S (brass), set**

G 3/4" IG - 1" IG    300 bar    0.5-60 bar    292-0004

3/4" NPT IG - 1" NPT IG    300 bar    0.5-60 bar    292-0069

**model 737LE-HD/S (brass), set - especially for CO<sub>2</sub>**

G 3/4" IG - 1" IG    100 bar    0.5-26 bar    292-0058

**model 737LE-HD-ES (stainless steel), without pilot pressure regulator**

G 3/4" IG - 1" IG    300 bar    0.5-60 bar    278-117

**model 737LE-HD/S-ES (stainless steel), set (for O<sub>2</sub> max. up to Pv 30 bar)**

G 3/4" IG - 1" IG    300 bar    0.5-60 bar    292-0056

3/4" NPT IG - 1" NPT IG    300 bar    0.5-60 bar    292-0114

replacement filter Bronze 100 µm    953.000300

**Pressure regulators for medium flows, with maximum pressure stability. Complete solution for installation in pipelines, universal model and high pressure model**

- pilot pressure regulator, inlet and outlet pressure gauges and connections included
- different mounting parts available (maintenance kit see p. 66)
- easy to install and to be integrated into the process
- 1: 1 interchangeable with the previous version (please specify if desired)

\*depending on type of gas

“Maximum precision and unparalleled consistency: see how WITT Dome-loaded Pressure Regulators work

Whenever the highest pressure stability is required, even with fluctuating inlet pressures and flowrates, WITT dome pressure regulators are the best choice.

Watch our new video and learn why they show such a unique performance. Find out about highly diverse application and customization possibilities.

See also:

▶ [www.domepressure regulators.com](http://www.domepressure regulators.com)

## Dome Pressure Regulators

series 747LE



747LE



747LE-ES



747LE/S



747LE/S-ES

Universal pressure regulators for high flows, with maximum pressure stability. Complete solution for installation in pipelines.

- pilot pressure regulator, inlet and outlet pressure gauges and connections included
- different mounting parts available (maintenance kit see p. 66)
- easy to install and to be integrated into the process

BRASS

connections      max. inlet pressure\*      outlet pressure      order no.

**model 747LE (brass), without pilot pressure regulator**

G 1" IG	40 bar	0.5-30 bar	278-088
---------	--------	------------	---------

**model 747LE/S (brass), set**

G 1" IG	40 bar	0.5-10 bar	292-0002
G 1" IG	40 bar	0.5-30 bar	292-0009
1" NPT IG	40 bar	0.5-10 bar	292-0102
1" NPT IG	40 bar	0.5-30 bar	292-0031

**mounting parts (brass):**

O-ring	7901-026
gas filter	956.953200
flange connection DIN DN32/PN40 (O-ring sealing)	952.218700
flange DIN DN32/PN40	801.597603
O-ring for flange DN32	7901-132
O-ring for flange G1"	7901-072
gasket for flange	950.026200
double nipple G1" - G 1.1/4"	952.223900
reducing nipple G1" - 1" NPT	953.179500
double nipple G1" - G1"	952.015900
welding nipple AD42 G 1.1/4"	100.015614
fitting G1" - G1"	100.313135
fitting G1" - 1" NPT	100.013283

STAINLESS STEEL

**model 747LE-ES (stainless steel), without pilot pressure regulator**


G 1" IG	40 bar	0.5-30 bar	278-099
---------	--------	------------	---------

**model 747LE/S-ES (stainless steel), set**

G 1" IG	40 bar	0.5-10 bar	292-0027
G 1" IG	40 bar	0.5-30 bar	292-0028
1" NPT IG	40 bar	0.5-10 bar	292-0103
1" NPT IG	40 bar	0.5-30 bar	292-0109

stainless steel mounting parts on demand

\*depending on type of gas

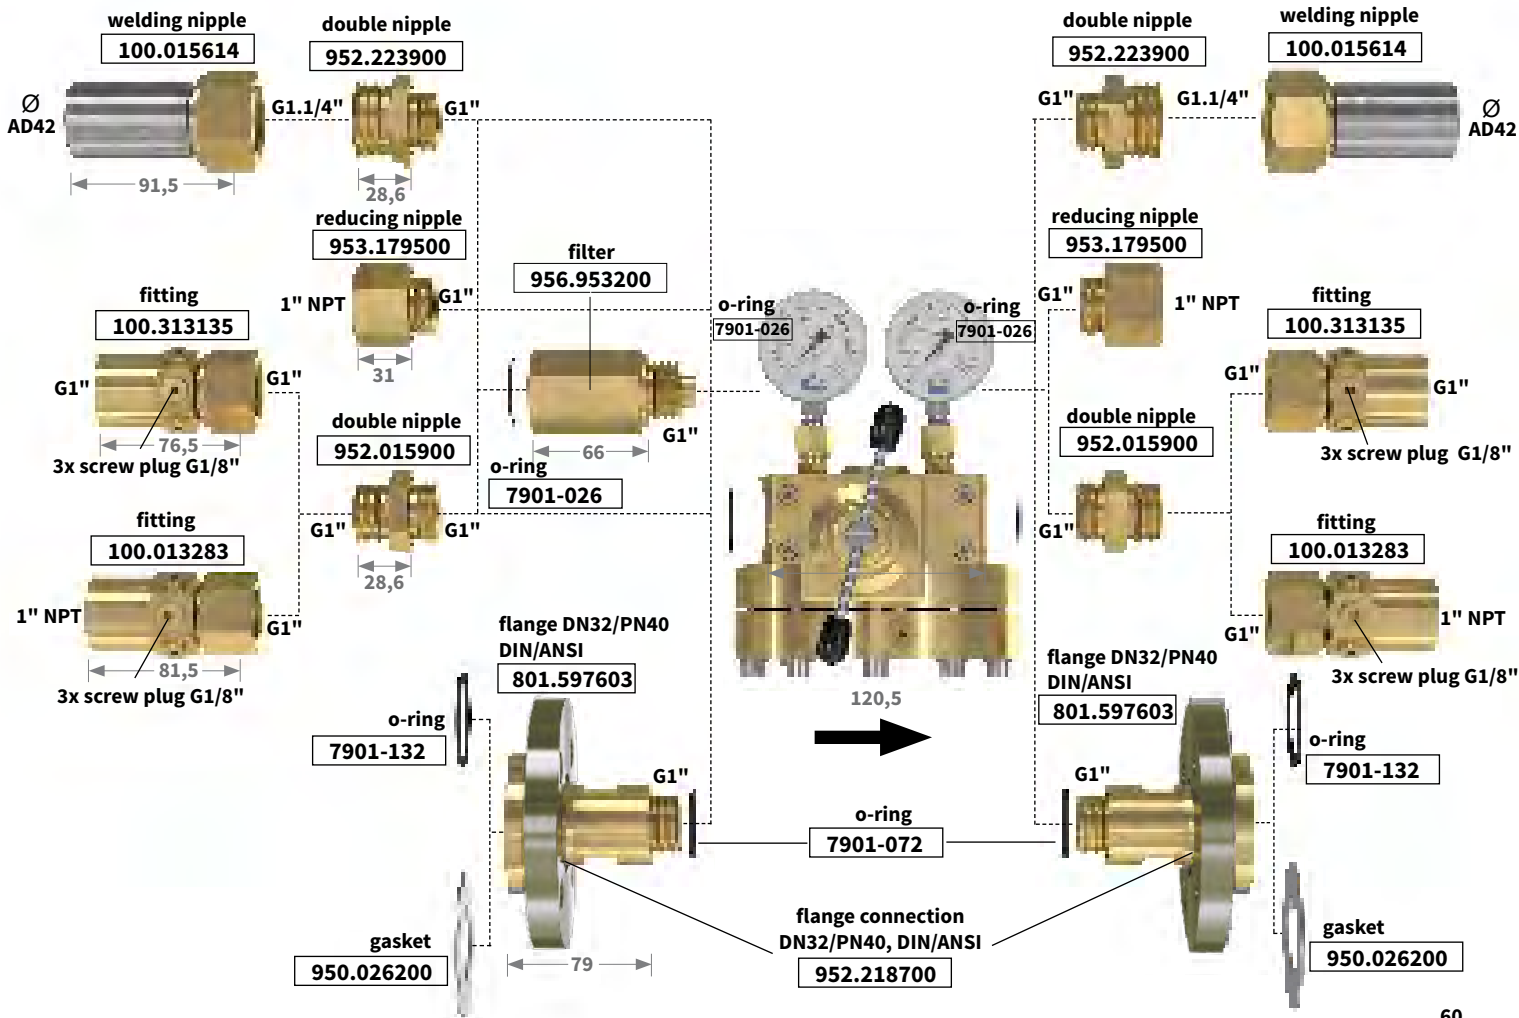

## Dome Pressure Regulators

### 747LE/S Smart



747 LE/S Smart

All brass models of the 747LE/S dome pressure regulator are available as Smart models.

#### Smart model variations

##### „Standard“

Display, indication of inlet pressure and temperature as well as outlet pressure and temperature

##### „Standard + P3“

„Standard“ features, plus indication of pilot pressure

##### „Standard + Flow“

„Standard“ features, plus indication of flow rate

##### „Standard + P3 + Flow“

"Standard" features, plus indication of pilot pressure and flow rate


signal cable with angled plug (5 m)  
(3 cables are required to operate the device)

order no. 803097000

for mounting parts, options and maintenance kit see model 747LE/S Brass


**High performance dome-loaded pressure regulator set for inline installation, combined with high-tech sensor technology and electronic components.**

- Signaling of inlet, outlet and pilot pressure
- Signaling of inlet and outlet temperature
- indication of the instantaneous gas flow rate
- digital display (optional)
- ideal for connected manufacturing

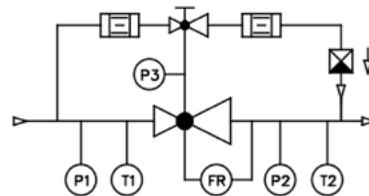

P1 - inlet pressure  
T1 - inlet temperature  
P2 - outlet pressure  
T2 - outlet temperature  
P3 - pilot pressure  
FR - flow rate

14/09/2023

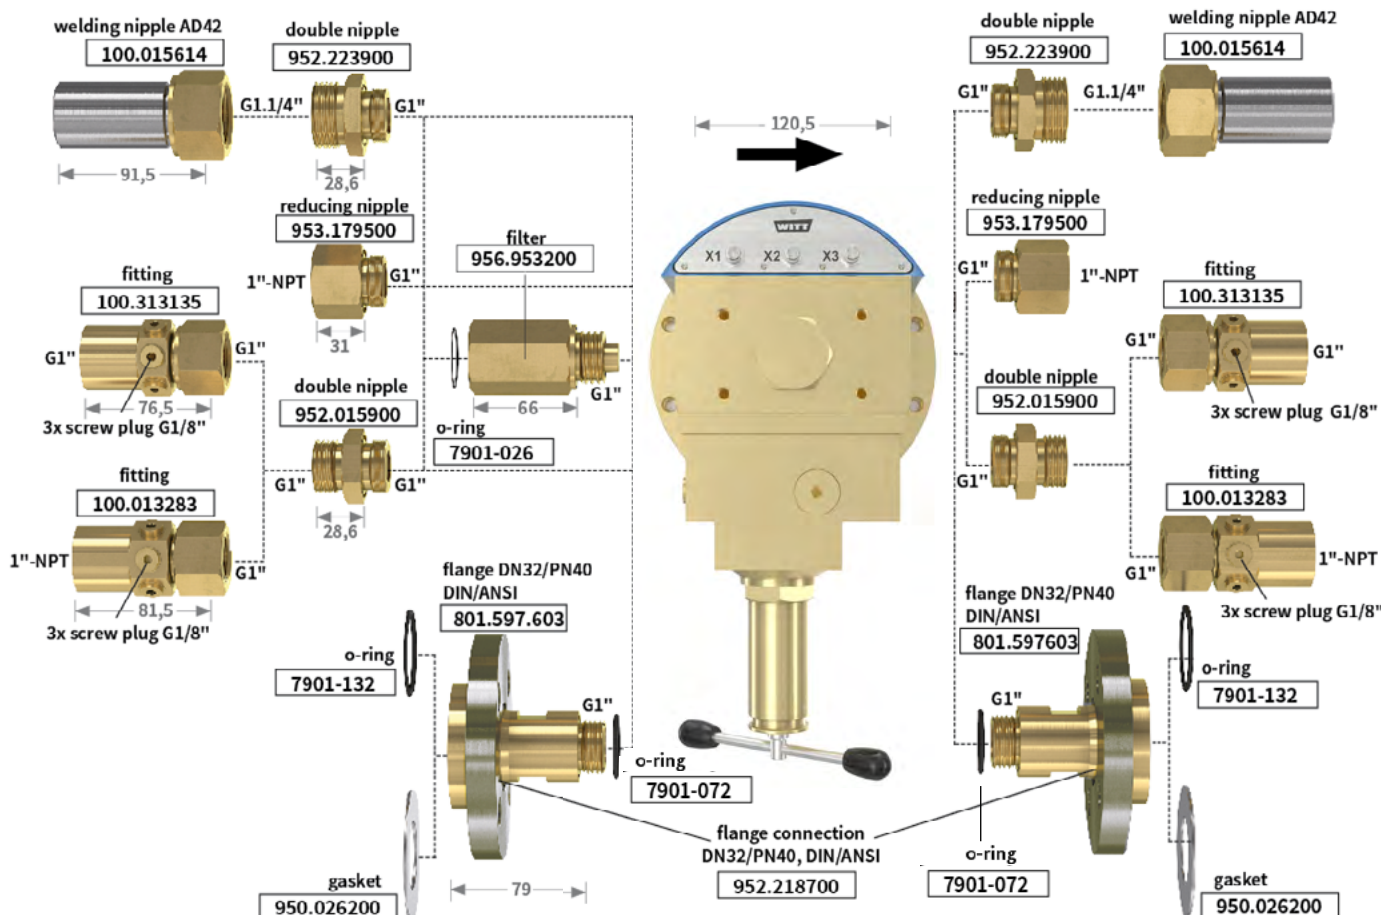

# 20. PRESSURE REGULATORS

## Dome Pressure Regulators



757LE



757LE-ES



757LE/S



757LE/S-ES

**High performance pressure regulators for high flows, with maximum pressure stability. Complete solution for installation in pipelines.**


- pilot pressure regulator, inlet and outlet pressure gauges and connections included
- different mounting parts available (maintenance kit p.62)
- also available as „smart-model“ for the transmission of pressure, temperature and flow

### series 757LE

	connections	max. inlet pressure*	outlet pressure	order no.
BRASS	<b>model 757LE (brass), without pilot pressure regulator</b>			
	G 2" IG	40 bar	0.5-30 bar	278-089
	<b>model 757LE/S (brass), set</b>			
	flange DIN DN 50	40 bar	0.5-10 bar	292-0017
	flange DIN DN 50	40 bar	0.5-30 bar	292-0018
	G 2" IG	40 bar	0.5-10 bar	292-0003
	G 2" IG	40 bar	0.5-30 bar	292-0010
	2" NPT IG	40 bar	0.5-10 bar	292-0022
	2" NPT IG	40 bar	0.5-30 bar	292-0021
	<b>mounting parts (brass):</b>			
	O-ring for flange G2"			7901-135
	reducing nipple G2" - 2" NPT			952.217000
	flange connection DIN DN50/PN40 (O-ring sealing)			952.211000
flange DIN DN50/PN40			801.597803	
O-ring for flange DN50			7901-130	
gasket for flange			950.010300	
flange gas filter DIN DN50/PN40			956.923800	
STAINLESS STEEL	<b>model 757LE-ES (stainless steel), without pilot pressure regulator</b>			
	G 2" IG	40 bar	0.5-30 bar	278-097
	<b>model 757LE/S-ES (stainless steel), set</b>			
	flange DIN DN 50	40 bar	0.5-10 bar	292-0037
	flange DIN DN 50	40 bar	0.5-30 bar	292-_____
	G 2" IG	40 bar	0.5-10 bar	292-0019
	G 2" IG	40 bar	0.5-30 bar	292-_____
	2" NPT IG	40 bar	0.5-10 bar	292-0061
	2" NPT IG	40 bar	0.5-30 bar	292-0026
	stainless steel mounting parts on demand			


\* depending on type of gas

14/09/2023

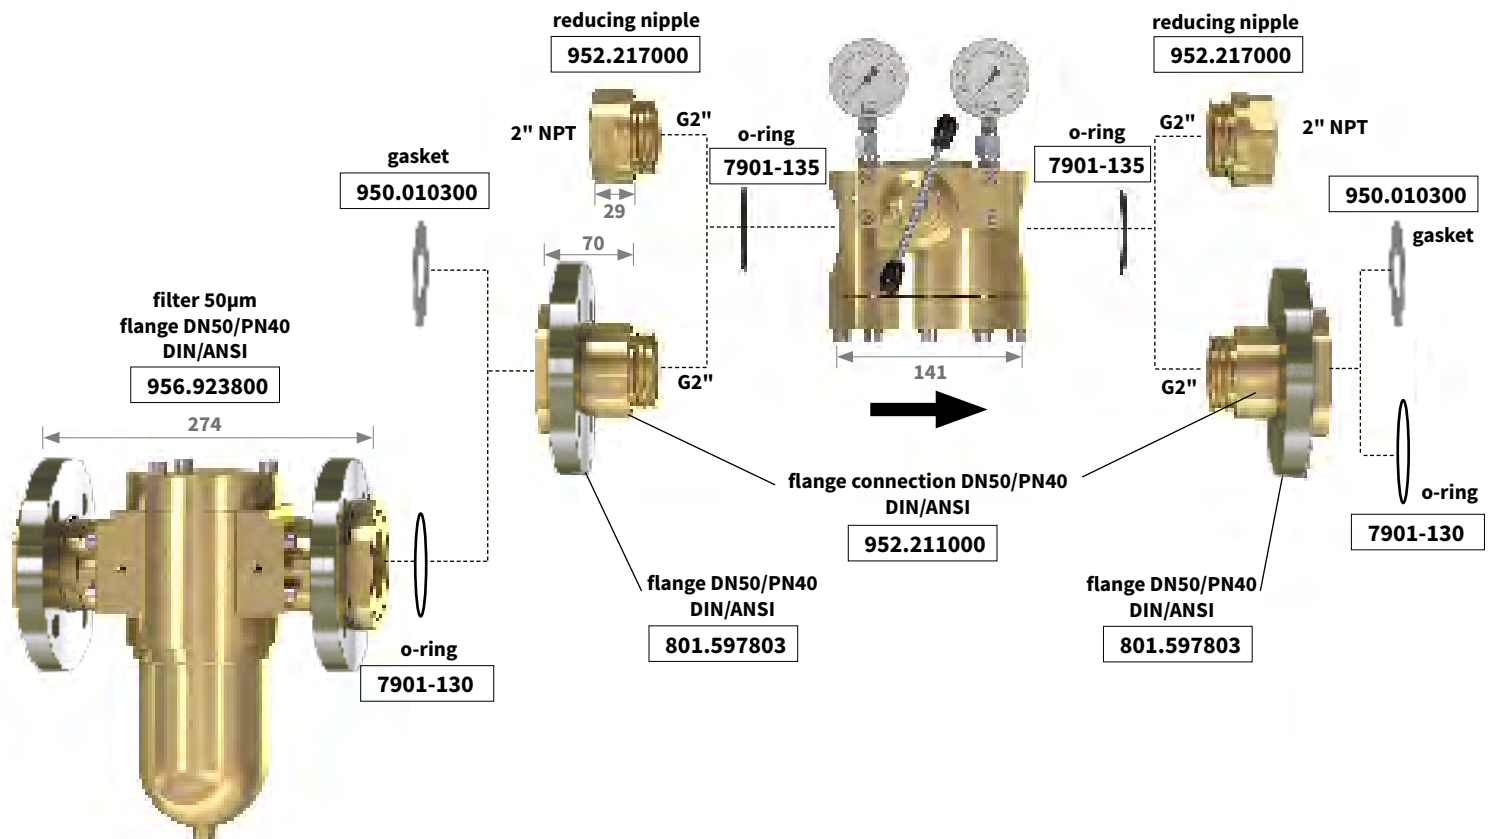

## Dome Pressure Regulators

### 757LE/S Smart

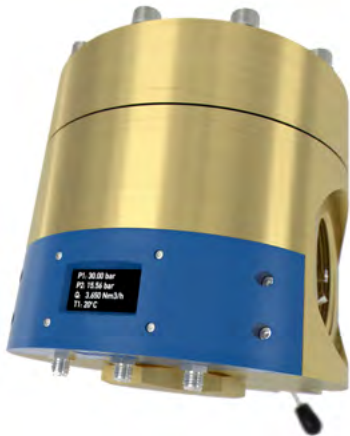

757 LE/S Smart

All brass models of the 757LE/S dome pressure regulator are available as Smart models.

#### Smart model variations

##### „Standard“

Display, indication of inlet pressure and temperature as well as outlet pressure and temperature

##### „Standard + P3“

„Standard“ features, plus indication of pilot pressure

##### „Standard + Flow“

„Standard“ features, plus indication of flow rate

##### „Standard + P3 + Flow“

"Standard" features, plus indication of pilot pressure and flow rate

signal cable with angled plug (5 m)


order no. 803097000

(3 cables are required to operate the device)

for mounting parts, options and maintenance kit see model 757LE/S Brass


**High performance dome-loaded pressure regulator set for inline installation, combined with high-tech sensor technology and electronic components.**

- Signaling of inlet, outlet and pilot pressure
- Signaling of inlet and outlet temperature
- indication of the instantaneous gas flow rate
- digital display (optional)
- ideal for connected manufacturing

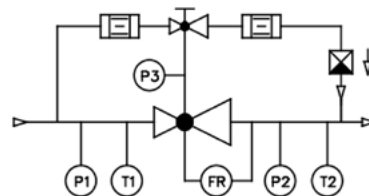

P1 - inlet pressure  
T1 - inlet temperature  
P2 - outlet pressure  
T2 - outlet temperature  
P3 - pilot pressure  
FR - flow rate

14/05/2023

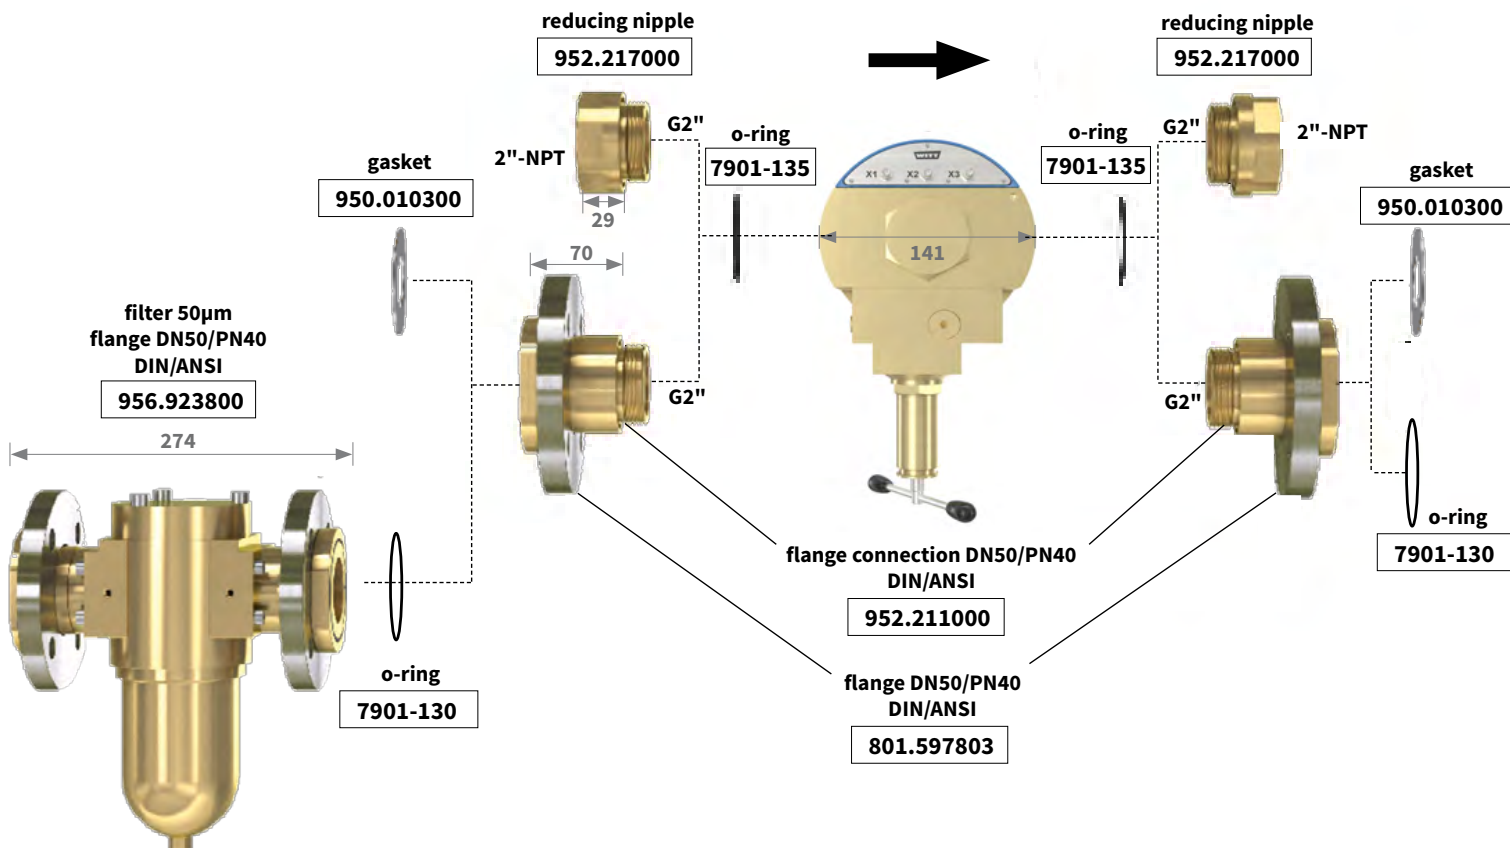

# 20. PRESSURE REGULATORS

## Dome Pressure Regulators series 767LE




	connections	max. inlet pressure*	outlet pressure	order no.
<b>BRASS</b>	<b>model 767LE (brass), without pilot pressure regulator</b>			
	G 3" IG	40 bar	0.5-30 bar	278-090
	<b>model 767LE/S (brass)</b>			
	flange DIN DN 80	40 bar	0.5-10 bar	292-0008
	flange DIN DN 80	40 bar	0.5-30 bar	292-0005
	flange DIN DN 100	40 bar	0.5-10 bar	292-0013
	flange DIN DN 100	40 bar	0.5-30 bar	292-0066
	G 3" IG	40 bar	0.5-10 bar	292-0011
	G 3" IG	40 bar	0.5-30 bar	292-0012
	3" NPT IG	40 bar	0.5-10 bar	292-0108
	3" NPT IG	40 bar	0.5-30 bar	292-___
	<b>mounting parts:</b>			
	o-ring for flange G3"			7901-098
	reducing nipple G3" - 3"NPT			952.222700
	flange connection DIN DN80/PN40 (O-ring sealing)			953.206800
flange DIN DN80/PN40			801.598003	
o-ring for flange DN100			7901-479	
flange connection DIN DN100/PN40 (O-ring sealing)			953.218400	
flange DIN DN100/PN40			802.560503	
o-ring for flange DN80			7901-136	
gasket for flange DN80			950.015300	
<b>STAINLESS STEEL</b>	<b>model 767LE-ES (stainless steel), without pilot pressure regulator</b>			
	G 3" IG	40 bar	0.5-30 bar	278-___
	<b>model 767LE/S-ES (stainless steel)</b>			
	flange DIN DN 80	40 bar	0.5-10 bar	292-___
	flange DIN DN 80	40 bar	0.5-30 bar	292-___
	flange DIN DN 100	40 bar	0.5-10 bar	292-___
	flange DIN DN 100	40 bar	0.5-30 bar	292-___
	G 3" IG	40 bar	0.5-10 bar	292-___
	3" IG	40 bar	0.5-30 bar	292-___
	3" NPT IG	40 bar	0.5-10 bar	292-___
3" NPT IG	40 bar	0.5-30 bar	292-___	

High performance pressure regulators for very high flows, with maximum pressure stability. Complete solution for installation in pipelines.

- pilot pressure regulator, inlet and outlet pressure gauges and connections included
- different mounting parts available (maintenance kit see p. 66)
- easy to install and to be integrated into the process
- new: the matching 3" gas filter for high flow rates LE6 (see p. 75)


\* depending on type of gas

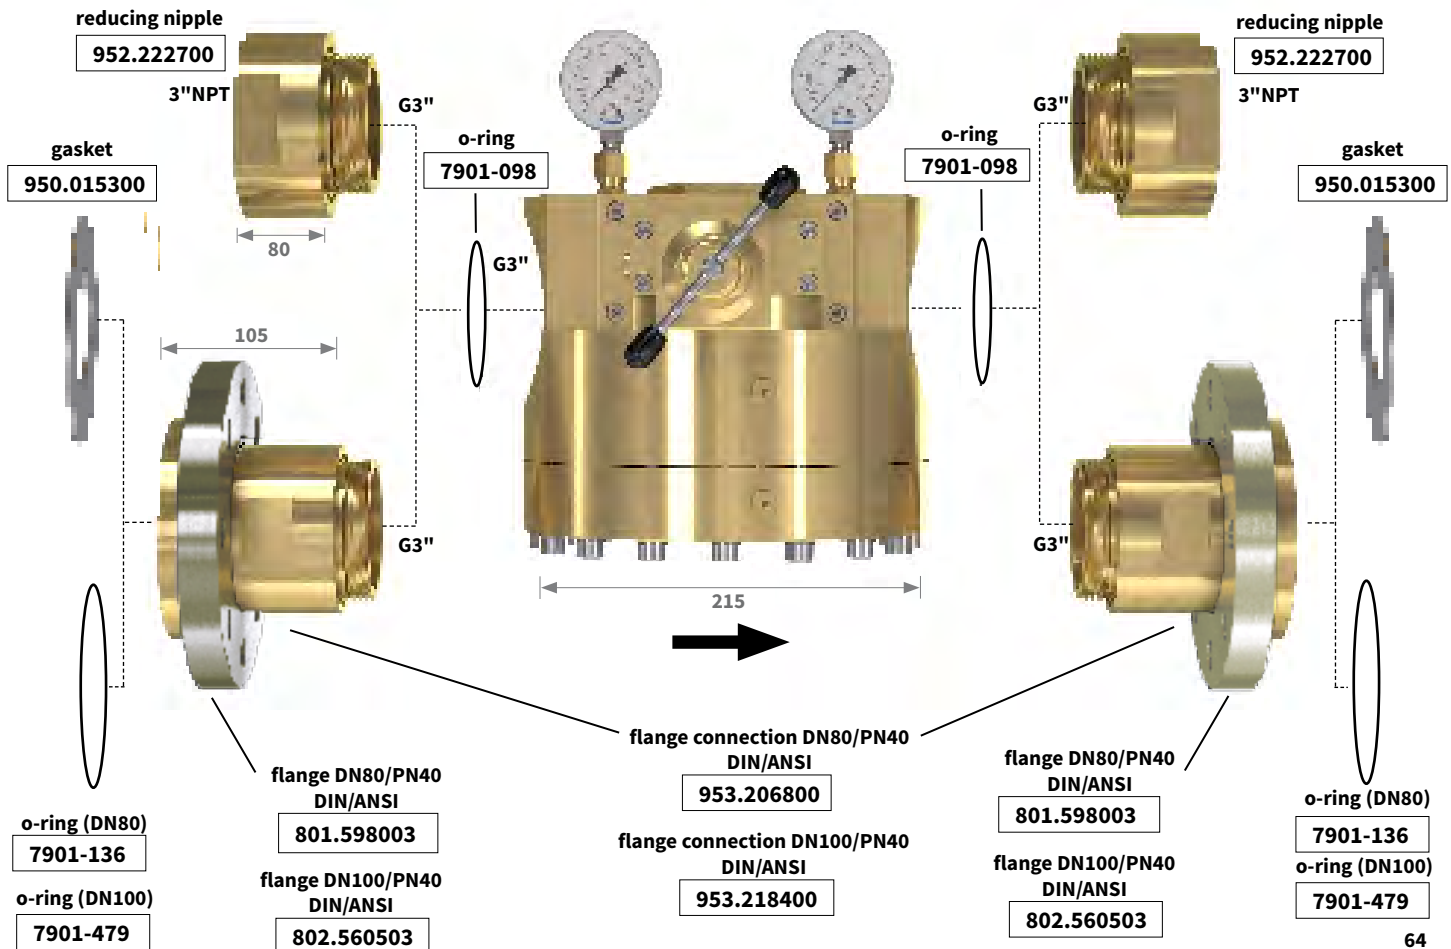



## Dome Pressure Regulators

### 767LE/S Smart

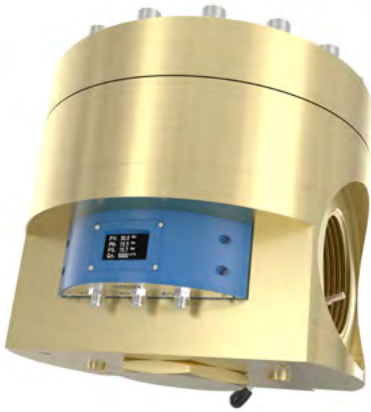

767 LE/S Smart

All brass models of the 747LE/S dome pressure regulator are available as Smart models.

#### Smart model variations

##### „Standard“

Display, indication of inlet pressure and temperature as well as outlet pressure and temperature

##### „Standard + P3“

„Standard“ features, plus indication of pilot pressure

##### „Standard + Flow“

„Standard“ features, plus indication of flow rate

##### „Standard + P3 + Flow“

„Standard“ features, plus indication of pilot pressure and flow rate

signal cable with angled plug (5 m)


order no. 803097000

(3 cables are required to operate the device)

for mounting parts, options and maintenance kit see model 767LE/S Brass


**High performance dome-loaded pressure regulator set for inline installation, combined with high-tech sensor technology and electronic components.**

- Signaling of inlet, outlet and pilot pressure
- Signaling of inlet and outlet temperature
- indication of the instantaneous gas flow rate
- digital display (optional)
- ideal for connected manufacturing

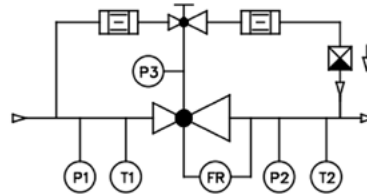

P1 - inlet pressure  
T1 - inlet temperature  
P2 - outlet pressure  
T2 - outlet temperature  
P3 - pilot pressure  
FR - flow rate

14/09/2023

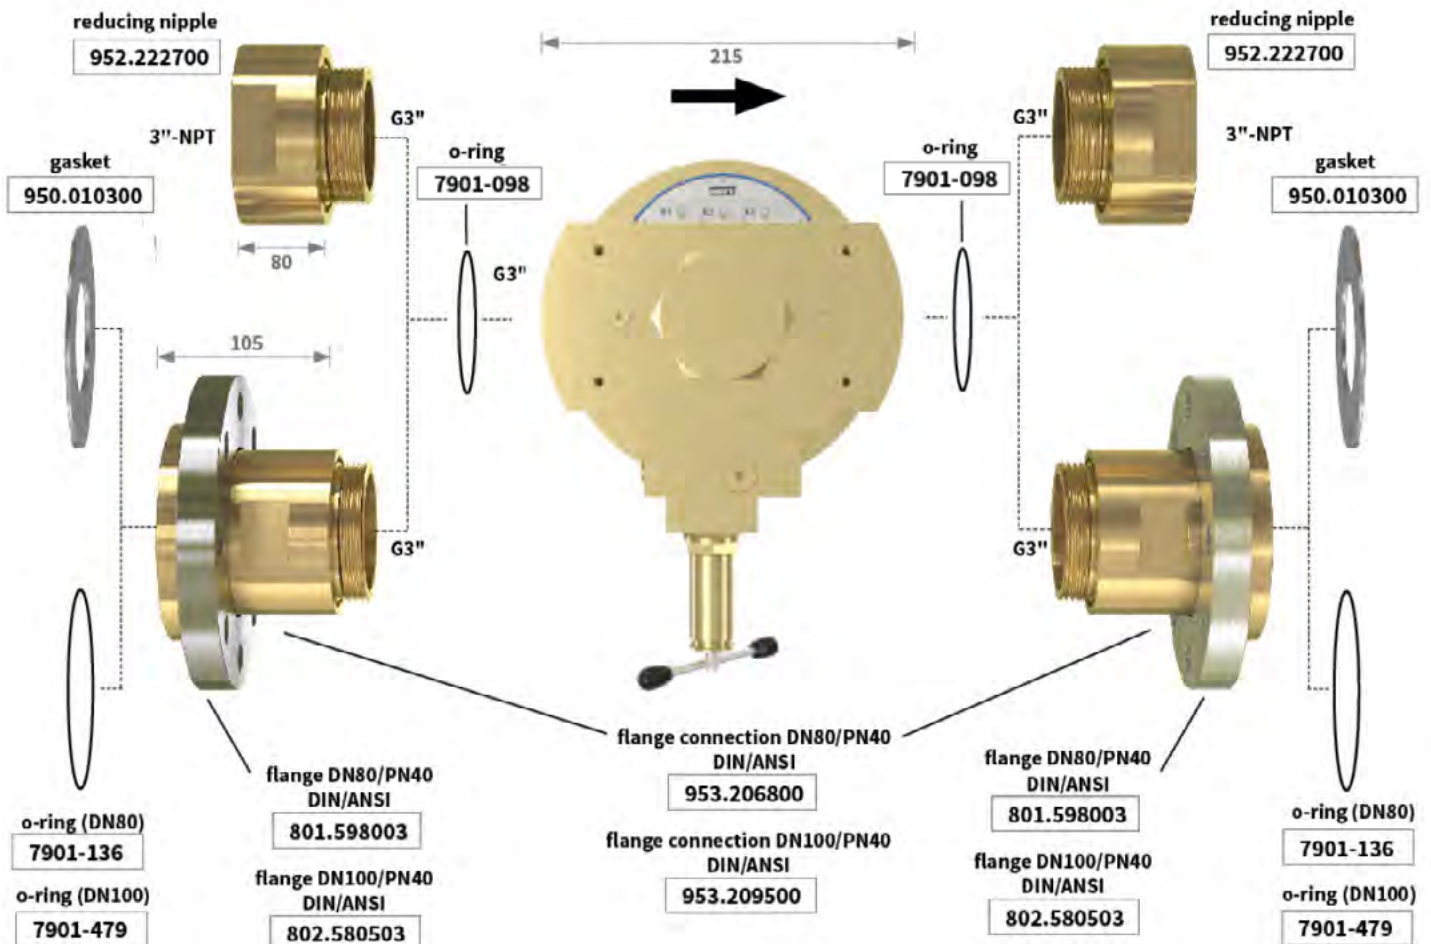

## Dome Backpressure Regulator



BPR 2



BPR 2-ES

Backpressure regulators are used for process gas supply, in which the pressure must be kept or limited, e.g. for regulating the pressure of gas cushions in tanks

- integrated connections for pilot gas and manometer
- easy integration into the process

### BPR 2

connections	adjustable upstream pressure	order no.
-------------	------------------------------	-----------

#### model BPR 2 (brass)

G 2" IG	0.5-20 bar	276-001
---------	------------	---------

#### model BPR 2 -ES (stainless steel)


G 2" IG	0.5-20 bar	276-__ _
---------	------------	----------

mounting parts see model 757LE (p. 54)

## Accessories



lockable spindle cap

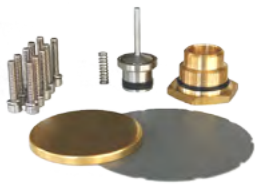

maintenance kit


### Accessories for WITT dome pressure regulators

- lockable spindle cap prevents unwanted tempering of the pilot pressure
- maintenance kits: pre-mounted, for maintenance and servicing
- stainless steel wall mounting panels

### for dome pressure regulators

	material	order no.
lockable spindle cap	stainless steel	966061400
maintenance kits:		
for model 737LE/S	brass	962.000085
for model 737LE-HD/S	brass	962.000084
for model 747LE/S	brass	962.000067
for model 757LE/S / 757LE/S Smart	brass	962.000065
for model 767LE/S	brass	962.000061
for model 737LE/S-ES	stainless steel	962.000087
for model 737LE-HD/S-ES	stainless steel	962.000088
for model 747LE/S-ES	stainless steel	962.000073
for model 757LE/S-ES	stainless steel	962.000086
for model 767LE/S-ES	stainless steel	962.000116
wall mounting panel for 737LE, 737LE-HD 747LE, 757LE	stainless steel	956.248100
wall mounting panel for 767LE	stainless steel	956.247700

## Dome Pressure Regulators

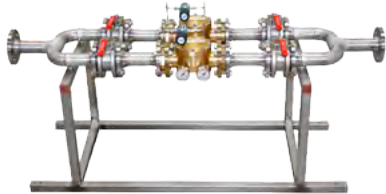

parallel construction with 757LE/S



757LE/S with flange filter

### engineering - planning and installation

#### Individual parallel construction

Example I:

4 ball valves stainless steel DN50/PN40

2 dome pressure regulators 757LE/S

manifold DN50, counter-flange, TÜV-testing, CE labeling

installation on welded mounting frame

Example II:

dome pressure regulator 757LE/S

with flange filter 50 µm filter fineness, for oxygen up to 30 bar


with dirt catcher


delivery completely assembled and tested


More customisations possible, for example central filter, safety valve, other connection sizes, etc.

Suitable for oxygen, tested and ready for use, short delivery time


## 21. MOBILE PRESSURE REGULATING STATIONS

642		pressure regulating station	order no.
 <p><b>Mobile pressure regulating station, completely mounted and tested, ready-to-use</b></p> <ul style="list-style-type: none"> <li>for bundles</li> <li>with pressure regulator and safety devices</li> </ul>		oxygen (300 bar/ 0-20 bar)	190211111
		acetylene (25 bar/ 0-1.5 bar)	183112120

643		pressure regulating station	order no.
 <p><b>Mobile pressure regulating station, completely mounted and tested, ready-to-use</b></p> <ul style="list-style-type: none"> <li>for bundles with 4-6 integrated outlet points including flashback arrestors 85-10</li> <li>for oxygen with pressure regulator</li> <li>customisations available</li> </ul>		4-outlets oxygen (300 bar/ 0-10 bar)	183000044
		6-outlets oxygen (300 bar/ 0-10 bar)	183000049
		4-outlets acetylene (25 bar/ 0-1.5 bar)	183000045
		6-outlets acetylene (25 bar/ 0-1.5 bar)	183000050

Universal 704		distribution station	order no.
 <p><b>Mobile pressure regulating station, completely mounted and tested, ready-to-use</b></p> <ul style="list-style-type: none"> <li>for pipelines or connected to model 642 including flashback arrestors 85-10</li> <li>for oxygen with pressure regulator</li> <li>customisations available</li> </ul>		4-outlets oxygen (40 bar/ 0-10 bar) and acetylene (1.5 bar)	183000030
		6-outlets oxygen (40 bar/ 0-10 bar) and acetylene (1.5 bar)	183000031

704 - special edition

Universal V6		distribution station	order no.
 <p><b>Mobile pressure regulating station, completely mounted and tested, ready-to-use</b></p> <ul style="list-style-type: none"> <li>for pipelines or connected to model 642 including flashback arrestors 85-10</li> <li>for oxygen with pressure regulator</li> <li>customisations available</li> </ul>		6-outlets oxygen (40 bar/ 0-10 bar)	183000153
		6-outlets acetylene (1.5 bar)	183000154

## 22. STATIONARY PRESSURE REGULATING STATIONS

### Pressure regulation station

### acetylene (25 bar)



#### For ensuring continuous acetylene supply into a ring pipeline

DIN EN ISO 14114, acetylene regulation (TRAC)  
Pressure regulators in accordance with ISO 7291

- completely mounted and tested, easy wall-mounting
- option: automatic switch-over (WITT-SWITCH)


model	connection	flow	order no.
DRS 684NG	single left, +HDS17* (VI)	10 Nm <sup>3</sup> /h	193-015-001
DRS 684NG	single left, +HDS17* (HI)	10 Nm <sup>3</sup> /h	193-016-001
DRS 684NG	single left, no HDS17 (VI)	10 Nm <sup>3</sup> /h	193-001-001
DRS 684NG	single left, no HDS17 (HI)	10 Nm <sup>3</sup> /h	193-006-001
DRS 386NPL	single left (VI)	30 Nm <sup>3</sup> /h	195-001-001
DRS 150NF	single left (VI)	150 Nm <sup>3</sup> /h	190_____
DRS 684NG	both-sided, +HDS17* (VI)	10 Nm <sup>3</sup> /h	193-003-001
DRS 684NG	both-sided, +HDS17* (HI)	10 Nm <sup>3</sup> /h	193-008-001
DRS 684NG	both-sided, no HDS17 (VI)	10 Nm <sup>3</sup> /h	193-002-001
DRS 684NG	both-sided, no HDS17 (HI)	10 Nm <sup>3</sup> /h	193-007-001
DRS 386NPL	both-sided (VI)	30 Nm <sup>3</sup> /h	195-002-001
DRS 150NF	both-sided (VI)	150 Nm <sup>3</sup> /h	190_____
DRS 684NGA (compatible with WITT-Switch)			
autom. switch-over, both-sided (VI)		10 Nm <sup>3</sup> /h	193-005-001
autom. switch-over, both-sided (HI)		10 Nm <sup>3</sup> /h	193-010-001
DRS 386NGA (compatible with WITT-Switch)			
autom. switch-over, both-sided (VI)		30 Nm <sup>3</sup> /h	193-012-001
autom. switch-over, both-sided (HI)		30 Nm <sup>3</sup> /h	193-014-001
ZDA, autom. switch-over, both-sided (HI)		30 Nm <sup>3</sup> /h	193-014-003
DRS 150NAFT (including WITT-Switch-Tronic)			
autom. switch-over, both-sided (HI)		150 Nm <sup>3</sup> /h	190-_____

\* shut-off device, see p. 37 (VI) - vertical inlet (HI) - horizontal inlet

options: see below

### Pressure regulation station

### oxygen / other technical gases (300 bar)

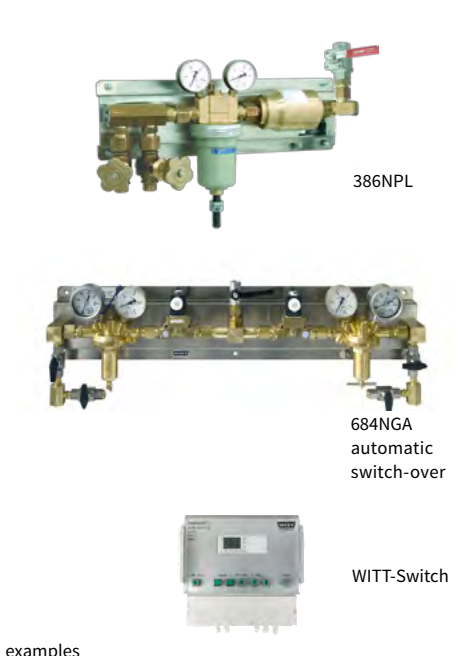

model	connection	flow	order no.
DRS 684NG	single left (VI)	75 Nm <sup>3</sup> /h	193-001-___
DRS 684NG	single left (HI)	75 Nm <sup>3</sup> /h	193-006-___
DRS 386NPL	single left (VI)	200 Nm <sup>3</sup> /h	195-001-___
DRS 684NG	both-sided (VI)	75 Nm <sup>3</sup> /h	193-002-___
DRS 684NG	both-sided (HI)	75 Nm <sup>3</sup> /h	193-007-___
DRS 386NPL	both-sided (VI)	200 Nm <sup>3</sup> /h	195-002-___
DRS 684NGA			
autom. switch-over both-sided (VI)		75 Nm <sup>3</sup> /h	193-004-___
autom. switch-over both-sided (HI)		75 Nm <sup>3</sup> /h	193-009-___
DRS 386NGA			
autom. switch-over both-sided (VI)		200 Nm <sup>3</sup> /h	193-011-___
autom. switch-over both-sided (HI)		200 Nm <sup>3</sup> /h	193-011-___

(VI) - vertical inlet (HI) - horizontal inlet

#### options (valid for acetylene, oxygen and other technical gases):

WITT Switch:	
control Unit for automatic switch over stations 684NGA and 386NGA	
menu language German	194-019
menu language English	194-019-01
menu language French	194-019-02

mandatory sign, conforms to type of gas 194-\_\_\_

instruction plate, conforms to type of gas 194-\_\_\_

Further accessories for higher pressures upstream, e.g.  
hoses for bundle- and bottle-connections etc. on demand.

When ordering, please advise which gas.

#### For safeguarding the continuous central gas supply in a ring pipeline

Pressure regulators in accordance with ISO 7291

- completely mounted and tested, easy wall-mounting
- option: automatic switch-over (WITT-SWITCH)

## 23. OUTLET POINTS

### Series 610



610 - example

**Outlet point for the supply of technical gases from a ring pipeline, to be mounted at the wall**

- maximum 3 gases
- to be combined individually
- completely with welding and soldering nipples for pipe
- nickel-plated tube with nickel-plated wall screens

#### order no.

#### mounting plate (completely mounted and tested)

610-1 one gas	290-__
610-2 two gases	290-__
610-3 three gases	290-__

#### ball valves

	male thread	
fuel gases max. 40 bar	G 3/8 RH - G 3/8 LH	198107082
acetylene max. 1.5 bar	G 3/8 RH - G 3/8 LH	198107082
oxygen max. 30 bar	G 3/8 RH	198207072
shielding gas max. 40 bar	G 3/8 RH	198307078

#### outlet point pressure regulators

acetylene max. 1.5 bar	044112900
oxygen max. 10 bar	044226300
shielding gas with manometer (0-30 l/min)	044524100
shielding gas with variable area flow meter (0-30 l/min)	044524000

For optional flashback arrestors and quick couplings see section 9-14

### Series 603



603 - example

**Outlet point for the supply of technical gases from a ring pipeline, to be mounted at the wall, modular and extendable**

- extendable as required
- anti-swiveling fixed pressure regulator/flashback arrestors
- completely with welding and soldering nipples for pipe
- nickel-plated tube with nickel-plated wall screens

#### order no.

#### mounting plate (completely mounted and tested)

603-1 one gas	280-__
603-2 two gases	280-__
603-3 three gases	280-__
603-X extendable at will	

#### ball valves

	male thread	
fuel gases max. 40 bar	G 3/8 RH - G 3/8 LH	198107082
acetylene max. 1.5 bar	G 3/8 RH - G 3/8 LH	198107082
oxygen max. 30 bar	G 3/8 RH	198207072
shielding gas max. 40 bar	G 3/8 RH	198307078

#### outlet points-pressure regulators

acetylene max. 1.5 bar	044112900
oxygen max. 10 bar	044226300
shielding gas with manometer (0-30 l/min)	044524100
shielding gas with variable area flow meter (0-30 l/min)	044524000

For optional flashback arrestors and quick couplings see section 9-14

## 23. OUTLET POINTS

	order no.
 <p>503 - example</p>	<p>outlet point 503 3-fold 280030091</p>
<p><b>Outlet point with integrated gas filters for the supply of cutting machines, for fuel gas, heating- and cutting-oxygen</b></p> <ul style="list-style-type: none"> <li>• nickel-plated tube with nickel-plated wall screens</li> <li>• inlet with fittings and ball valves, incl. gas filter 622, flashback arrester 85-10</li> <li>• DIN EN ISO 5175 preventing counter flow and flashback</li> <li>• completely mounted and tested</li> <li>• compact design</li> </ul>	<p>1x acetylene, P inlet max. 1.5 bar, max 4.5 m<sup>3</sup>/h (inlet welding nipple OD 21.3mm, ball valve DN 10, gas filter 622, pressure regulator, flashback arrester 85-10, outlet G 3/4 LH male with cone)</p> <p>1x oxygen for heating, P inlet max. 16 bar, max 45 m<sup>3</sup>/h (inlet pipe coupler for pipe 15x1, ball valve DN 10, gas filter 622, pressure regulator, flashback arrester 85-10, outlet G 3/4 RH male with cone)</p> <p>1x oxygen for cutting, P inlet max. 16 bar, max 68 m<sup>3</sup>/h (inlet pipe coupler for pipe 15x1, ball valve DN 10, gas filter 622, pressure regulator, flashback arrester 85-10, outlet G 3/4 RH male with cone)</p>

14/09/2023

## “Quality and safety for more than 75 years

Read on our website what WITT has achieved in 75 years of company history.

Find out about facts and figures, our quality standards, and marvel at our long history of innovation.

► [www.wittgas.com](http://www.wittgas.com)

### Series 722



test rig 722 + clamp 743

**Test rig for the annual testing of flashback arrestors and non-return valves up to DN 50, testing:**

- leak-tightness to atmosphere
- non-return valve against low and high back pressure
- operating pressure of pressure sensitive gas cut off valve
- measuring of flow capacities of flashback arrestors

#### order no.

test set (test rig 722 + clamp 743)	101000013
test rig 722	101000010
clamp 743	101000012

inspection plates	801412700
-------------------	-----------

measurement liquid 50 ml (U-tube)	956904000
-----------------------------------	-----------

adapters for other connections on demand

product video and further information on  
[▶ www.wittgas.com](http://www.wittgas.com)

14/09/2023

## “WITT - for your safety and peace of mind.

Ever increasing legal requirements plus the moral and financial costs of accidents place an even higher onus on safety.




Therefore, each company dealing with technical gases is well advised to make a realistic risk assessment and be sure to be following best practices.


Flashback arrestors and most other components of gas supply (acetylene, O<sub>2</sub>, other fuel gases, inert gas) should be checked for safety at least annually.


WITT can support you: by providing advice and service as well as suitable test equipment - for your operating and legal certainty.


Talk to us: [witt@wittgas.com](mailto:witt@wittgas.com) or tel. 0049-(0)2302-89010

## 25. EQUIPMENT FOR OXYGEN LANCING

LK		lance holders			
	<p><b>Lance holders for oxygen</b></p> <ul style="list-style-type: none"> <li>• for safe and comfortable holding of lance</li> <li>• for quick and safe changeover</li> </ul>	<b>model</b>	<b>inlet → outlet (Ø pipe in mm)</b>	<b>order no.</b>	
		LK-3	G 3/4 AGS → 1/8" (9.1 - 10.2)	040996500	
		LK-4	G 3/4 AGS → 1/4" (12.0 - 13.7)	040996200	
		LK-5	G 3/4 AGS → 3/8" (16.0 - 17.2)	040996100	
		LK-6	G 3/4 AGS → 1/2" (20.0 - 21.5)	040996300	
		LK-7	G 1 AGS → 3/4" (26.0 - 27.3)	040687000	
		inlet reducer:			
			G3/8 AGS → G3/4 IG	802339600K	
			G1/2 AGS → G3/4 IG	802339700K	
			G3/4 AGS → G 1 IG	802418700K	

SRV		backfire stop			
	<p><b>Backfire stop with temperature controlled cut-off valve</b></p> <ul style="list-style-type: none"> <li>• protects against gas return and flashback</li> <li>• combinable with WITT oxygen lancing equipment</li> <li>• with copper sealing</li> </ul>	<b>model</b>	<b>inlet → outlet</b>	<b>order no.</b>	
		SRV-2.1	3/4" AGS → 3/4" IG (up to LK 4)	040996400	
		SRV-2.2	3/4" AGS → 3/4" IG (from LK 5)	040686100	
		SRV-3	1" AGS → 1" IG (from LK 7)	040686200	
		inlet reducer:			
			G3/8 AGS → G3/4 IG	802339600K	
			G1/2 AGS → G3/4 IG	802339700K	
			G3/4 AGS → G 1 IG	802418700K	

GHV		safety lancing valve		
	<p><b>Safety lancing valve with lever operation</b></p> <ul style="list-style-type: none"> <li>• lever valve for an immediate interruption of gas supply when let go</li> <li>• combinable with WITT oxygen lancing equipment</li> </ul>	<b>model</b>	<b>inlet → outlet</b>	<b>order no.</b>
		GHV	G 3/4 AGS → G 3/4 MG	040210200

KLK		lance holder compact		
	<p><b>Compact lance holder, with integrated lever valve, non-return valve and temperature controlled cut-off valve</b></p> <ul style="list-style-type: none"> <li>• combination of several safety elements in one device</li> <li>• compact and ergonomic</li> </ul>	<b>model</b>	<b>inlet → outlet (Ø pipe in mm)</b>	<b>order no.</b>
		KLK-4	G 3/4 AGS → 1/4" (12.0 - 13.7)	040210400
		KLK-5	G 3/4 AGS → 3/8" (16.0 - 17.2)	040210500
		KLK-6	G 3/4 AGS → 1/2" (20.0 - 21.5)	040210600



### Shut-off valve



#### Shut-off valve for oxygen

- for the manual interruption of gas supply

model	connection	order no.
cut-off valve	G 3/4 IG	800721400
working-overpressure max. 25 bar		
adapter	G 3/4 AGS → G 3/4 AGS	952023700
adapter	G 3/4 AG → G 3/4 MG	100011116

14/09/2023




## “From the outlet point to the lance...”


In this overview you will find the whole WITT portfolio of oxygen-lancing equipment, clearly laid out by module.


Download at ▶ [www.wittgas.com](http://www.wittgas.com)


For an overview of our support material see p. 86-88

## 26. GAS FILTERS


6 2 2		model	connections	order no.
 <p>Modell C</p>  <p>Modell D</p>  <p>Modell A</p>	<p><b>For reliable protection against contamination by ultrafine filtering of particulates (approx. 40 µm)</b></p> <ul style="list-style-type: none"> <li>• broad range of uses</li> <li>• change of filter possible while installed</li> <li>• high flowrate</li> <li>• easy mounting</li> <li>• increases service life of downstream fittings and equipment</li> </ul>	622 A	G3/8 IG - G3/8 RH AGS	186-001
		622 A	G3/8 IG - G3/8 LH AGS	186-003
		622 C	G1/2 IG - G3/8 LH AGS	186-004
		622 D	G1/2 IG - G3/8 LH AGS	186-005
		replacement filter		955003000


7 7		model	connections	order no.
	<p><b>For reliable protection against contamination by ultrafine filtering of particulates and moisture</b></p> <ul style="list-style-type: none"> <li>• with condensate drain</li> <li>• increases service life of downstream fittings and equipment</li> <li>• change of filter possible while installed</li> <li>• high flowrate</li> </ul>	77 (approx. 40 µm)	G 3/4 IG	077-001
		replacement filter 3-part		FI-077
		77 (approx. 10 µm)	G 3/4 IG	077-004
		replacement filter 3-part		FI-078
		77 (approx. 50 µm)	G 3/4 IG	077-010
		BAM tested for oxygen, with bronze filter		
		replacement filter bronze 3-part		FI-077B
77 (approx. 5 µm)	G 3/4 IG	077-012		
BAM tested for oxygen, with bronze filter				
replacement filter bronze 3-part		FI-077B8		
installation kit		966.0313		
enabling active monitoring of filter contamination by means of differential pressure				


6 2 5		model	connections	order no.
	<p><b>For reliable protection against contamination by ultrafine filtering of particulates and moisture (approx. 40 µm)</b></p> <ul style="list-style-type: none"> <li>• with condensate drain</li> <li>• increases service life of downstream fittings and equipment</li> <li>• change of filter possible while installed</li> <li>• high flowrate</li> </ul>	625	G 1.1/4 AG	042-001
		625	flange DN 25	042-007
		625	flange DN 32	042-006
		625	flange DN 40	042-015
		625	flange DN 50	042-016
		625	flange DN 80	042-009
		replacement filter 4-part		FI-625

HD		stainless steel filter		
		model	connections	order no.
	<p><b>For reliable protection against micro-contamination of gases, for installation in gas pipelines</b></p> <ul style="list-style-type: none"> <li>• filter inserts in chromium-nickel-steel</li> <li>• high flowrate</li> <li>• increases service life of downstream fittings and equipment</li> </ul>	HD (approx. 30 µm)	G 3/4 IG	187-005
		HD (approx. 80 µm)	G 3/4 IG	187-004
		replacement filter 30 µm		FI-187-30
		replacement filter 80 µm		FI-187

## 26. GAS FILTERS

57		pure filter		
 <p><b>For reliable protection against micro-contamination of gases, e.g. in laboratories or burner supplies in the glass industry (~3 µm)</b></p> <ul style="list-style-type: none"> <li>resistant to corrosion by stainless steel filter inserts</li> <li>high flowrate</li> <li>increases service life of downstream fittings</li> </ul>	<b>model</b>	<b>connections</b>	<b>order no.</b>	
	57	G 3/8 IG - G 3/8 AGS	184007070	
	replacement filter		FI-057	

807		pure filter		
 <p><b>For reliable protection against micro-contamination of gases, e.g. in laboratories or burner supplies in the glass industry (approx. 5 µm)</b></p> <ul style="list-style-type: none"> <li>resistant to corrosion by stainless steel filter inserts</li> <li>high flowrate</li> <li>increases service life of downstream fittings and equipment</li> </ul>	<b>model</b>	<b>connections</b>	<b>order no.</b>	
	807 (approx. 5 µm)	1/4" NPT IG	185-002	
	replacement filter		956333400	

LE6		pure filter		
 <p><b>For reliable protection against contamination by ultrafine filtering of particulates and moisture (approx. 15 µm)</b></p> <ul style="list-style-type: none"> <li>in compliance with the EIGA, AIGA and CGA maximum velocity limits</li> <li>ideal as a supplement to the dome pressure regulator 767LE and 767LE SMART</li> </ul>	<b>model</b>	<b>connections</b>	<b>order no.</b>	
	LE6	flange DN 100/PN40 pressure monitoring: G 3/8 IG	078-001	
	replacement filter		FI-LE6	

### “Our gas filter in a new dimension


Our new gas filter LE6 is the perfect complement to the dome pressure regulator 767LE/S and 767LE/S SMART.


With its 3" connection and a 15 µm filter fineness, it is suitable for up to 40 bar max. operating overpressure (oxygen 30 bar, CO2 25 bar).


The flow-optimised design enables a high flow rate and thus ensures the process quality of even the largest systems.




## 27. BALL VALVES

Ball valves		for acetylene		
 <p>example</p>	<p><b>PN25</b> up to max. 1.5 bar working pressure</p> <p>DIN ISO 228/1</p> <ul style="list-style-type: none"> <li>• housing: steel</li> <li>• female connections</li> </ul>	<b>DN / connection</b>	<b>length</b>	<b>order no.</b>
		6 / G 1/4	50 mm	198105050
		8 / G 3/8	55 mm	198107071
		12 / G 1/2	75 mm	198109091
		20 / G 3/4	80 mm	198111110
		25 / G 1	90 mm	198113130
		32 / G 1.1/4	110 mm	198115152
		40 / G 1.1/2	120 mm	198117172

Ball valves		for methane, LPG, shielding gas, air		
 <p>example</p>	<p><b>PN25</b> up to max. 25 bar working pressure</p> <p>DIN ISO 228/1</p> <ul style="list-style-type: none"> <li>• housing: steel</li> <li>• female connections</li> </ul>	<b>DN / connection</b>	<b>length</b>	<b>order no.</b>
		6 / G 1/4	50 mm	198305050
		8 / G 3/8	55 mm	198307070
		12 / G 1/2	75 mm	198309090
		20 / G 3/4	80 mm	198311110
		25 / G 1	90 mm	198313130
		32 / G 1.1/4	110 mm	198315150
		40 / G 1.1/2	120 mm	198317170

Ball valves		for oxygen		
 <p>example</p>	<p><b>PN10</b> up to max. 10 bar working pressure</p> <p>DIN ISO 228/1</p> <ul style="list-style-type: none"> <li>• housing: steel</li> <li>• female connections</li> </ul>	<b>DN / connection</b>	<b>length</b>	<b>order no.</b>
		6 / G 1/4	50 mm	198205050
		8 / G 3/8	55 mm	198207070
		12 / G 1/2	75 mm	198209090
		20 / G 3/4	80 mm	198211110
		25 / G 1	90 mm	198213130
		32 / G 1.1/4	110 mm	198215151
		40 / G 1.1/2	120 mm	198217170

Ball valves		for oxygen		
 <p>example</p>	<p><b>PN40</b> <b>burn out safe</b> up to max. 40 bar working pressure</p> <p>DIN ISO 228/1</p> <ul style="list-style-type: none"> <li>• housing: brass</li> <li>• female connections</li> </ul>	<b>DN / connection</b>	<b>length</b>	<b>order no.</b>
		6 / G 1/4	50 mm	198205052
		8 / G 3/8	55 mm	198207075
		12 / G 1/2	75 mm	198209092
		20 / G 3/4	80 mm	198211112
		25 / G 1	90 mm	198213131
		32 / G 1.1/4	110 mm	198215150
		40 / G 1.1/2	120 mm	198217172

## 27. BALL VALVES

### Ball valves



**PN40**

EN 560

- housing: nickel-plated brass
- male connections

**DN / connection**

**length**

**order no.**

for acetylene (max. 1.5 bar):

10 / G 3/8 RH AGS - G 3/8 LH AGS 89 mm 198107082

for fuel gases (max. 40 bar):

10 / G 3/8 RH AGS - G 3/8 LH AGS 89 mm 198107082

for oxygen (max. 30 bar):

10 / G 3/8 RH AGS - two-sided 89 mm 198207072

for shielding gas (max. 40 bar):

10 / G 3/8 RH AGS - two-sided 89 mm 198307078

### Flange ball valve



example

**DN**

**length**

**order no.**

for acetylene (max. 1.5 bar):

20 150 mm 198150500

25 160 mm 198147470

32 130 mm 198152521

40 140 mm 198153531

50 150 mm 198154542

65 170 mm 198155551

80 180 mm 198156560

100 190 mm 198157570

for air and shielding gas (max. 40 bar):

20 150 mm 198350502

25 160 mm 198351515

32 130 mm 198252525

40 140 mm 198353533

50 150 mm 198354543

for air and shielding gas (max. 25 bar):

65 170 mm 198355553

80 180 mm 198356561

100 190 mm 198357571

for oxygen (max. 10 bar):

20 150 mm 198250500

25 160 mm 198247470

32 130 mm 198252521

40 140 mm 198253532

50 150 mm 198254540

65 170 mm 198255551

80 180 mm 198256561

100 190 mm 198257570

**PN25 / PN40**

EN 558-1 (DIN 3202)

- housing: steel

### Flange ball valves



example

**PN40**

up to max. 40 bar working pressure

- housing: stainless steel
- burn-out safe

for oxygen

**DN**

**length**

**order no.**

20 150 mm 198250502

25 160 mm 198251510

32 130 mm 198252523

40 140 mm 198253534


50 150 mm 198254543

65 170 mm 198255552


80 180 mm 198256562

100 190 mm 198257571

## 27. BALL VALVES

High pressure ball valves		for acetylene		
 <p><b>PN320</b> <b>max. 25 bar</b> DIN ISO 228/1</p> <ul style="list-style-type: none"> <li>housing: steel</li> <li>female connections</li> </ul>	<b>DN / connection</b>	<b>length</b>	<b>order no.</b>	
	6 / G 1/4	50 mm	198105055	
	6 / G 3/8	72 mm	198107077	
	10 / G 3/8	55 mm	198107078	
	10 / G 1/2	72 mm	198109099	
	10 / G 3/4 LH AG flat	82 mm	198112120	
	12 / G 1/2	75 mm	198909090	
	20 / G 3/4	80 mm	198111116	

## 28. SAFETY HOSE REELS

DS Automatic		for fuel gases and oxygen		
 <p><b>Safety hose reel with twin hoses DN 9/6,3</b></p> <ul style="list-style-type: none"> <li>drum breaking mechanism prevents strain on hose</li> <li>guide rails on both sides ensure neat and strain-free rolling</li> <li>various mounting options</li> <li>ball-bearing mounted drum</li> </ul>	<b>model</b>	<b>length of hose</b>	<b>order no.</b>	
	DS-08	8 m	060120800	
	DS-10	10 m	060121000	
	DS-15	15 m	060121500	
	DS-20	20 m	060122000	
	DS-25	25 m	060122500	
	DS-30	30 m	060123000	

14/09/2023

“More than standard connections, pressures and performance.




When we say, "Please specify gas, pressures, temperatures, flows and connections at time of enquiry and order. For some gases, special seals may be required. Special designs, higher flow capacities or different pressures on demand" this is not just a standard text on our data sheets and catalogues, it's our daily work.

For most models we offer many more options than the standard versions.



## Screwed couplings

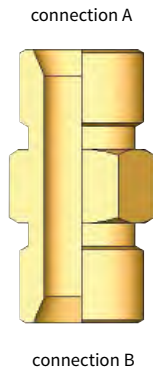

### male connections

connection A	connection B	order no.
G 1/4 RH	G 1/4 RH	952006000
G 3/8 RH	G 1/4 RH	952007200
G 3/8 LH	G 1/4 RH	952007100
G 3/8 RH	G 3/8 RH	952007000
G 3/8 RH	G 3/8 LH	952007300
G 3/8 LH	G 3/8 LH	952007400
G 3/8 RH	G 1/2 RH	952015800
G 3/8 LH	G 1/2 RH	952006900
G 1/2 RH	G 1/4 RH	952014200
G 1/2 RH	G 1/2 RH	952016700
G 1/2 LH	G 1/2 RH	952016800
G 3/4 RH	G 3/8 RH	952030300
G 3/4 RH	G 3/8 LH	952042800
G 3/4 RH	G 1/2 RH	952035700
G 3/4 RH	G 1/2 LH	952042700
G 3/4 RH	G 3/4 RH	952023700
G 3/4 RH	G 3/4 LH	952023600
G 3/4 LH	G 3/4 LH	952023500
G 1 LH	G 1 RH	952073600
G 1 LH	G 1 LH	952071400
G 1 RH	G 1 RH	952030200

#### Male threads on both sides

EN 560

- A=AGS
- B=AGS

## Soldering nipple



connection A	connection B	order no.
12 mm	G 3/8 RH	100007760
12 mm	G 3/8 LH	100008760
15 mm	G 1/2 RH	100009613
15 mm	G 1/2 LH	100010613
16 mm	G 1/2 RH	100009617
18 mm	G 1/2 RH	100009612
18 mm	G 1/2 LH	100010612
22 mm	G 1/2 RH	100009820
22 mm	G 1/2 LH	100010820
22 mm	G 3/4 RH	100011612
22 mm	G 3/4 LH	100012611
28 mm	G 3/4 RH	100011610
28 mm	G 3/4 LH	100012612
28 mm	G 1 RH	100013611
28 mm	G 1 LH	100014615
35 mm	G 1 RH	100013616
35 mm	G 1 LH	100014614
42 mm	G 1.1/4 RH	100015611
42 mm	G 1.1/4 LH	100016612


#### For pipes, with nut

EN 560

- A=pipe Ø
- B=MG



## Screwed couplings

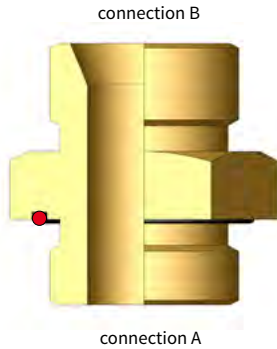

### Male thread, O-ring


EN 560

- A=AG / O-ring
- B=AGS

connection A	connection B	order no.
G 1/4 RH	G 1/4 RH	952095700K
G 1/4 RH	G 1/4 LH	952095800K
G 1/4 RH	G 3/8 RH	952122400K
G 1/4 RH	G 3/8 LH	952068600K
G 3/8 RH	G 1/4 RH	952059600K
G 3/8 RH	G 3/8 RH	953138500K
G 3/8 RH	G 3/8 LH	952133500K
G 3/8 RH	G 1/2 RH	952103600K
G 3/8 RH	G 1/2 LH	952046500K
G 3/8 RH	G 3/4 LH	952106800K
G 3/8 RH	G 3/4 RH	952130000K
G 1/2 RH	G 1/4 RH	952014000K
G 1/2 RH	G 3/8 RH	952014100K
G 1/2 RH	G 3/8 LH	952013700K
G 1/2 RH	G 1/2 RH	952013800K
G 1/2 RH	G 1/2 LH	952013900K
G 1/2 RH	G 3/4 RH	952017800K
G 1/2 RH	G 3/4 LH	952017700K
G 1/2 RH	G 1 RH	952017500K
G 1/2 RH	G 1 LH	952017600K
G 3/4 RH	G 3/8 RH	952050400K
G 3/4 RH	G 3/8 LH	952064900K
G 3/4 RH	G 1/2 RH	952067600K
G 3/4 RH	G 1/2 LH	952026900K
G 3/4 RH	G 3/4 RH	952015000K
G 3/4 RH	G 3/4 LH	952014300K
G 3/4 RH	G 1 RH	952015100K
G 3/4 RH	G 1 LH	952020300K
G 1 RH	G 3/8 RH	952049700K
G 1 RH	G 3/8 LH	952049800K
G 1 RH	G 1/2 RH	952049600K
G 1 RH	G 1/2 LH	952016200K
G 1 RH	G 3/4 RH	952016100K
G 1 RH	G 3/4 LH	952016000K
G 1 RH	G 1 RH	952015900K
G 1 RH	G 1 LH	952036000K
G 1 RH	G 1 1/4 RH	952048200K
G 1 RH	G 1 1/4 LH	952048300K
G 1 1/4 RH	G 1 RH	952073500K
G 1 1/4 RH	G 1 LH	952093100K
G 1.1/4 RH	G 1.1/4 RH	952073400K
G 1.1/4 RH	G 1.1/4 LH	952070100K
G 1.1/4 RH	G 1.1/2 RH	952101100K
G 1.1/2 RH	G 1/2 RH	952102800K
G 1.1/2 RH	G 3/4 LH	952046300K
G 1.1/2 RH	G 1 RH	952038700K
G 1.1/2 RH	G 1 LH	952036100K
G 1.1/2 RH	G 1.1/4 RH	952028200K
G 1.1/2 RH	G 1.1/4 LH	952023000K
G 1.1/2 RH	G 1.1/2 RH	952060100K

## Welding nipples

connection A

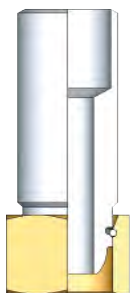


For pipes, with nut

EN 560

- A=pipe Ø
- B=MG

connection A	connection B	order no.
21.3 mm	G 3/8 LH	100008810
21.3 mm	G 3/8 RH	100007611
21.3 mm	G 1/2 LH	100010610
21.3 mm	G 1/2 RH	100009610
26.9 mm	G 1/2 LH	100010611
26.9 mm	G 3/4 LH	100012610
26.9 mm	G 3/4 RH	100011611
26.9 mm	G 1 LH	100014610
26.9 mm	G 1 RH	100013610
33.7 mm	G 1 LH	100014612
33.7 mm	G 1 RH	100013614
42.0 mm	G 1.1/4 LH	100016610
42.0 mm	G 1.1/4 RH	100015610

## Male / female couplings

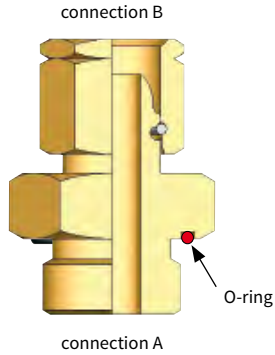


connection A	connection B	order no.
G 1/4 RH	G 1/4 RH	100005055K
G 1/4 RH	G 1/4 LH	100005060K
G 1/4 RH	G 3/8 RH	100107054K
G 1/4 RH	G 3/8 LH	100008051K
G 3/8 RH	G 3/8 LH	100008073K
G 3/8 RH	G 1/2 LH	100010070K
G 3/8 RH	G 1/2 RH	100009073K
G 3/8 RH	G 3/8 RH	100207071K
G 1/2 RH	G 3/8 RH	100007092K
G 1/2 RH	G 3/8 LH	100008092K
G 1/2 RH	G 1/2 RH	100009094K
G 1/2 RH	G 1/2 LH	100010091K
G 1/2 RH	G 3/4 RH	100111090K
G 1/2 RH	G 3/4 LH	100012090K
G 1/2 RH	G 1 RH	100013096K
G 3/4 RH	G 1/2 RH	100009115K
G 3/4 RH	G 1/2 LH	100010110K
G 3/4 RH	G 3/4 RH	100011116K
G 3/4 RH	G 3/4 LH	100012110K
G 3/4 RH	G 1 RH	100013114K
G 3/4 RH	G 1 LH	100014110K
G 1 RH	G 1/2 LH	100010130K
G 1 RH	G 3/4 RH	100011130K
G 1 RH	G 3/4 LH	100012130K
G 1 RH	G 1 RH	100013135K
G 1 RH	G 1 LH	100014131K
G 1 RH	G 1.1/4 RH	100015130K
G 1 RH	G 1.1/4 LH	100016130K
G 1.1/4 RH	G 1.1/4 RH	100015155K

### Male thread, O-ring and nut

EN 560

- A=AG / O-ring
- B=MG

## Male / female couplings

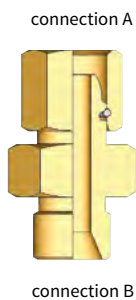


connection A	connection B	order no.
G 1/4 RH	G 3/8 RH	100005072
G 1/4 RH	G 3/8 LH	100005081
G 3/8 RH	G 1/4 RH	100107053
G 3/8 RH	G 3/8 LH	100007086
G 3/8 LH	G 3/8 LH	100108081
G 3/8 RH	G 3/8 RH	100107072
G 3/8 LH	G 3/8 RH	100008077
G 3/8 RH	G 1/2 RH	100007095
G 3/8 RH	G 1/2 LH	100007101
G 3/8 LH	G 1/2 RH	100008093
G 3/8 LH	G 1/2 LH	100008106
G 1/2 RH	G 1/2 LH	100009103
G 1/2 RH	G 1/4 RH	100009055
G 1/2 RH	G 3/8 LH	100009080
G 3/4 RH	G 1/2 RH	100011092
G 1 RH	G 3/4 RH	100013116
G 1 RH	G 3/4 LH	100013121
G 1 RH	G 1 LH	100013140


### Male thread, nut

EN 560

- A=MG
- B=AGS

## 29. ACCESSORIES

Cap with chain		connection A	order no.
 <p>connection A</p>	EN 560	G 1/4 RH	100005000
	• A=MG	G 3/8 RH	100007000
		G 3/8 LH	100008000
		G 1/2 RH	100009000
		G 1/2 LH	100010000
		G 3/4 RH	100011000
		G 3/4 LH	100012000
		G 1 RH	100013000
		G 1 LH	100014000

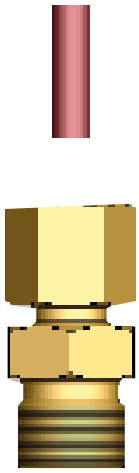
WITTFIX-pipe couplings		pipe Ø mm	connection A	order no.
 <p>pipe</p> <p>WITTFIX</p> <p>nut</p> <p>connection A</p>		6 x 1.0	G 1/8 RH	956608900
		6 x 1.0	1/4" NPT	956705200
		6 x 1.0	G 1/4 RH	956580300
		6 x 1.0	G 3/8 RH	956544100
		8 x 1.0	G 1/8 RH	956567300
		8 x 1.0	1/4" NPT	956739900
		8 x 1.0	G 1/4 RH	956543900
		8 x 1.0	G 3/8 RH	956739800
		8 x 1.0	G 1/2 RH	956740000
		10 x 1.0	1/4" NPT	956683200
		10 x 1.0	G 1/4 RH	956940200
		10 x 1.0	3/8" NPT	956673500
		10 x 1.0	G 3/8 RH	956532000
		10 x 1.0	G 1/2 RH	956794700
		12 x 1.0	1/4" NPT	956680700
		12 x 1.0	G 1/4 RH	956551900
		12 x 1.0	G 3/8 RH	956743700
		12 x 1.0	1/2" NPT	956553200
		12 x 1.0	G 1/2 RH	956668700
		15 x 1.0	3/8" NPT	956678400
		15 x 1.0	1/2" NPT	956678200
		15 x 1.0	G 1/2 RH	956657700
		22 x 1.0	G 1 RH	956657800

**For copper- or stainless steel pipes  
max. 25 bar working pressure**

EN 560

- A=AG
- containing: nut, O-ring, pressure ring, screwed coupler, cap nut

14/09/2023

WITTFIX-pipe couplings		pipe Ø mm	connection A	connection B	order no.
	pipe	6 x 1.0	G 1/4 RH		956725400
		6 x 1.0	G 3/8 LH		956659700
	WITTFIX A	6 x 1.0	G 3/8 RH		956725500
		6 x 1.0		G 1/4 RH	956745700
		6 x 1.0		G 3/8 LH	956659600
		6 x 1.0		G 3/8 RH	956741800
	connection A	8 x 1.0	G 1/4 RH		956753600
		8 x 1.0	G 3/8 LH		956723700
		8 x 1.0	G 3/8 RH		956746300
		8 x 1.0	G 1/2 LH		956725700
		8 x 1.0	G 1/2 RH		956725600
		8 x 1.0		G 1/4 RH	956746200
		8 x 1.0		G 3/8 LH	956740100
		8 x 1.0		G 3/8 RH	956623000
		8 x 1.0		G 1/2 LH	956753900
		8 x 1.0		G 1/2 RH	956754000
	safety device	10 x 1.0	G 1/4 RH		956753700
		10 x 1.0	G 3/8 LH		956725800
		10 x 1.0	G 3/8 RH		956725900
		10 x 1.0	G 1/2 LH		956726100
	10 x 1.0	G 1/2 RH		956726000	
	10 x 1.0		G 1/4 RH	956648100	
	10 x 1.0		G 3/8 LH	956753400	
	10 x 1.0		G 3/8 RH	956718100	
	10 x 1.0		G 1/2 LH	956754900	
	10 x 1.0		G 1/2 RH	956755000	
connection B	12 x 1.0	G 1/4 RH		956755100	
	12 x 1.0	G 3/8 LH		956677400	
	12 x 1.0	G 3/8 RH		956717900	
	12 x 1.0	G 1/2 LH		956726400	
	12 x 1.0	G 1/2 RH		956726300	
	12 x 1.0		G 1/4 RH	956754800	
	12 x 1.0		G 3/8 LH	956668600	
	12 x 1.0		G 3/8 RH	956717100	
	12 x 1.0		G 1/2 LH	956697500	
	12 x 1.0		G 1/2 RH	956697600	
WITTFIX B	15 x 1.0	G 3/8 LH		956678900	
	15 x 1.0	G 3/8 RH		956678500	
	15 x 1.0	G 1/2 LH		956679100	
	15 x 1.0	G 1/2 RH		956678700	
	15 x 1.0		G 3/8 LH	956679000	
	15 x 1.0		G 3/8 RH	956678600	
	15 x 1.0		G 1/2 LH	956679200	
	15 x 1.0		G 1/2 RH	956678800	
pipe					

For the integration of a safety device into copper or stainless steel pipelines

max. 25 bar working pressure

thread-connection: EN 560

- A=AGS
- B=MG

14/09/2023

### Types of threads:



**IG -**  
simple  
female thread



**AG -**  
simple  
male thread



**MG -**  
female thread with ball head,  
metallic self-sealing



**AGS -**  
male thread with  
counterbore

### Turning of threads:

- RH** right-handed
- LH** left-handed

## Training

Topics:
<ul style="list-style-type: none"> <li>Gas safety equipment</li> <li>Gas mixing systems</li> <li>Gas analysis systems</li> <li>Leak detection systems</li> </ul>
The training will be tailored to the knowledge of the attendees, with theory and practical elements as required.
By request a test can be held at the end of the training.
Daily rate (per person): Including lunch, excluding hotel accommodation
Location: WITT headquarter in Witten
Minimum attendance: 4 persons
Maximum attendance: 8 persons

## Documentation, Certification and Instruction manuals

	order no.
Material Certificate in accordance with DIN EN 10204 - 3.1	998.180000
Manufacturer 's Certificate in accordance with DIN EN 10204	998.190000
Declaration of Conformity to ATEX	998.440003
Declaration of Conformity to EMV / Low Voltage Directive	998.440004
Declaration of Conformity 'Pressure Devices' (PED)	998.440002
Declaration of Conformity 1935/2004 (food suitability)	998.440006
Printed Operation Manual	998.300011
Declaration of Conformity 'Pressure Devices' (PED) Module G by German TÜV	998.260001
Manufacturer 's Certificate in accordance with DIN EN ISO 22000	998.440005

## General Terms and Conditions

The entire text of our General Terms and Conditions may be downloaded at [www.wittgas.com](http://www.wittgas.com)

### Conversion of units of measurement:

<b>Pressure</b>	all pressure specifications are in barg 10 bar = 145 psi
<b>Flow</b>	10 m <sup>3</sup> /h = 353 scfh
<b>Temperature</b>	°C * 1.8 + 32 = °F
<b>Volume</b>	10 litres = 21 pints / 2.2 gallons
<b>Length</b>	10 mm = 0.3937 inches 1 m = 39.37 inches

### Please note:



Most of our technical and marketing documents are available in multiple languages, please see [www.wittgas.com](http://www.wittgas.com).

Brochures

Central gas supply



Stainless steel devices



Dome pressure regulators



Safety relief valves



Overview MAP-portfolio



Gas analysis



Leak detection



MAP for fruit and vegetables



Overview gas mixers

Synthetic-air gas mixer

You can find our brochures and a lot of other information material in the download area of our website, e.g.:

- Overview of accessories for oxygen lancing product range
- Overview Coupling system SK100
- Instructional chart Flashback Arrestors
- WITT company certifications
- White papers etc.

Download at ► [www.wittgas.com](http://www.wittgas.com)

## Product videos

Download at ► [www.wittgas.com](http://www.wittgas.com) or Youtube

Gas mixer BM-2M

Gas mixer MM-Flex

Gas mixer MG FIX / FLEX

Gas mixer KM-MEM

Gas mixer KM-MEM+

Gas mixers series KM- and MG-

Water based leak detection  
LEAK-MASTER® EASY

CO<sub>2</sub> Leak detection  
LEAK-MASTER® PRO2

Inline leak detection  
LEAK-MASTER® MAPMAX

Gas analyser OXYBABY®

Test rig for valves

Quick couplings

Dome Pressure Regulators

There are more videos to come.

Subscribe to our youtube channel,  
so you will not miss our new videos:

## Product specific websites by WITT

Everything about  
WITT leak detection

Everything about  
WITT dome pressure regulators

▶ [www.leak-master.net](http://www.leak-master.net)

▶ [www.domepressureregulators.com](http://www.domepressureregulators.com)

Everything about  
WITT OXYBABY®

Everything about  
WITT gas mixing technology

▶ [www.oxybaby.com](http://www.oxybaby.com)

▶ [www.gas-mixers.com](http://www.gas-mixers.com)

## WITT-App

**iGases** - Interactive lexicon for technical gases

Features:

- important physio-chemical characteristics (density, steam pressure, ignition range, thermal conductivity, safety information)
- unit converter for important values such as pressure, volume (flow), temperature, mass into international units
- direct access to the WITT data sheets
- dialogue tool, giving direct access to WITT specialists
- flow calculation
- gas advisor
- in four languages: English, Spanish, French, German



iGases for  
Apple



iGases for  
Android

Download at google play or at the  
apple app store



## OUR PRODUCT RANGE

### GAS CONTROL EQUIPMENT

- Gas mixing systems
- Gas metering systems
- Gas analysers
- Leak detection systems
- Gas pressure vessels
- Engineering of customised systems

### GAS SAFETY EQUIPMENT

- Flashback arrestors
- Non-return valves
- Quick couplings
- Safety valves
- Stainless steel devices
- Gas filters
- Pressure regulators
- Lance holders
- Ball valves
- Automatic hose reels
- Test equipment
- Accessories
- Customised safety devices

#### WITT-Gasetechnik GmbH & Co. KG

Salinger Feld 4-8 • 58454 Witten  
Postfach / POB 2550 • 58415 Witten  
Deutschland  
Tel. +49 (0)2302 8901-0  
Fax +49 (0)2302 8901-3  
www.wittgas.com  
witt@wittgas.com

#### Gustus & Partner GmbH

Installation – Service – Wartung  
Alt Salbke 6–10, Geb. 59  
39122 Magdeburg  
Deutschland  
Tel. +49 (0)391 4015246  
Fax +49 (0)391 4013296  
gustus@wittgas.com

#### WITT Tecnología de gas España

C/ Simon Cabarga Nº 2a  
39005 Santander, Cantabria  
España  
Tel. +34 942 835142  
Fax +34 942 835143  
witt-espana@wittgas.com

#### WITT France S.A.R.L.

131 Voie de Compiègne  
91390 Morsang sur Orge  
France  
Tel. +33 (0)160 151779  
Fax +33 (0)160 154782  
witt-france@wittgas.com

#### WITT Gas Techniques Ltd.

Unit 7 Burtonwood Industrial Estate  
Phipps Lane, Burtonwood  
Warrington, Cheshire  
WAS 4HX  
Great Britain  
Tel. +44 (0)1925-234466  
Fax +44 (0)1925-230055  
witt-uk@wittgas.com

#### WITT GAS INDIA PVT. LTD.

855/N, Upen Banerjee Road  
Kolkata 700060  
West Bengal  
India  
Tel. +91 9831319810  
witt-india@wittgas.com

#### WITT Italia Srl.

Via Giovanni XXIII, 18  
24030 Solza (BG)  
Italia  
Tel. +39 035 4933273  
Fax +39 035 4948098  
witt-italia@wittgas.com

#### WITT Polska Sp.z.o.o.

Ul. Bulwar Dedala 16a  
54-130 Wrocław  
Polska  
Tel. +48 (0)71 3522856  
Fax +48 (0)71 3513113  
witt-polska@wittgas.com

#### WITT Gas Controls LP

3080 Northfield Place  
Suite 111  
Roswell, GA 30076  
USA  
Tel. +1 770-664-4447  
Fax +1 770-664-4448  
witt-usa@wittgas.com



Please contact us for partners  
in your country.